

SDR100 SERIES

Instruction manual (Digital recorder)



WELCOME

Thank you for purchasing furnace controller production.
Please use after read instruction manual for safety.
Free to contact to our sales Div. for
production inquiry and after service.



Various



SAMWON TECH

It is a digital recorder without paper. It supports the high screen quality TFT_LCD touch screen and SD card. It is a product with rapid graph searching function.

<http://www.samwontech.com>

Being the controller market leader in the 21st century with the best technology



Copyright

Copyright© 2011 Samwontech Co., Ltd

This instruction manual is a work protected by the copyright law.

A part or entire of this manual shall not be copied, air sent, distributed, translated or changed into the form to be read by electronic media or machine without prior written consent of Samwontech Co., Ltd.





This manual is commonly used for SDR102, SDR104, SDR106 and SDR112 and SDR100 is written inside.

Contents

1. Cautions (Instructions) for safety

1-1 Checking the product	4
1-2 External shape and installation	6
1-3 Wiring	9

2. Operation and setting

2-1 Function and name of the display	13
2-2 Menu flow chart	14
2-3 Basic operation flow chart	16
2-4 Setting button operation	18
2-5 Warning message display	18
2-6 Parameter setting method	19

3. Main screen setting

.....	21
-------	----

4. Graph recording setting

4-1 Graph recording screen	23
----------------------------------	----

5. Graph searching

5-1 Graph view	30
5-2 Data searching	31

6. Function setting

.....	35
-------	----

7. Graph option

7-1 Graph display option (Graph recording screen)	42
7-2 Graph display option (Graph searching screen)	43

8. Setting canned message	46
---------------------------------	----

9. Setting reserve operation	49
------------------------------------	----

10. Setting screen display	52
----------------------------------	----

11. Error history display	57
---------------------------------	----

12. Setting system parameter	60
------------------------------------	----

13. Screen for setting the sensor input

13-1 Sensor input screen 1	62
----------------------------------	----

14. Alarm signal

14-1 Alarm signal setting screen 1	73
14-2 Alarm signal setting screen 2	74
14-3 Operation of alarm signal	78

15. User screen

15-1 User screen setting	82
15-2 Setting user screen upload	83
15-3 BMP file creation method	85
15-4 User screen motion	88

16. DI function and operation	91
-------------------------------------	----

17. Communication environment setting

17-1 RS232C/485 Communication setting	93
17-2 Communication environment setting screen	94
17-3 Ethernet communication environment setting screen	96

18. System initial setting	99
----------------------------------	----

01. Cautions (Instructions) for safety

☺ Thank you for your choice of our digital recorder (SDR100). This manual describes the method of installation and use of the product.

Cautions in this instruction manual

- Please deliver to the end user to possess always and keep it in the place accessible at any time.
- Use the product after full understanding of this manual.
- This manual does not warrant any other things because it is a description of the details for the function.
- A part or whole of this manual shall not be edited or copied randomly.
- The descriptions in this manual may be changed randomly without pre notice or warning.
- Even though this manual was made with elaboration, it will be appreciated if you inform to the purchasing point (Dealer shop and etc) in case of deficiency, mistake or omission in the contents.

Cautions for the safety and modification (Change) of the product

- Please use this product after full understanding on the safety cautions in this manual for the protection and safety for this product and the system connected to this system.
- Our company is not responsible to the damages occurred by the use or handle not relying on this instruction manual and not attended use.
- Please install at the outside of this product when the additional protection and safety circuit is installed separately for the protection and safety for this product and the system connected to this system.
- The internal modification (Change) and addition to this product are prohibited.
- Do not disassemble, repair and modify of this product because it becomes the electric shock, fire and malfunction.
- In case of changing the part or the consumables of this product, please contact to the sales part of our company.
- Do not contact to the moisture with this product. It may cause the failure on this product.
- Do not apply the strong impact on this product. It may cause the failure on this product.

With regard to the exemption of this product

- We are not responsible for any warranty on this product besides the defined cases in the quality assurance condition of our company.
- We are not responsible for the direct or indirect damages on the user of any third party due to the not expectable defect or the natural disaster in use of this product.

With regard to the quality assurance condition of this product

- The warranty period shall be one year from the purchasing of this product. Free of charge repair is available only for the cases of out of order occurred from normal use conditions.
- The repair due to the out of order occurred after the warranty period shall be repaired according to the defined condition by our company.
- The out of order occurred within the warranty period shall be repaired with payment for the following cases in spite of with in the warranty period.
(1) Out of order due to the mistake or fault of the user (Ex: Initialization by losing the password and etc) (2) Out of order due to the natural disaster (Ex: Fire and flood and etc) (3) Out of order due to the movement of product after installation. (4) Out of order due to the random disassemble, change or damage on the product. (5) Out of order due to the electric power instability (6) Others
- Please contact to the purchasing points or sales part of our company in case of necessity for after sales service due to the failure on the product.

Symbol marks for safety



- (A) It means the "Handle with care" or "Cautions." In case of violation of this point, it may cause the death, severe injury or the extreme damage on the product.
- Product : It is marked on the points to be acknowledged certainly to protect the human body and device.
 - Instruction manual : It describes the cautions to prevent the cases of endangered situation on the life and body of the user due to the electric shock and so on.



- (B) It means "Ground terminal".
- Make the earth with the ground in case of product installation and controlling the product.



- (C) It means the "supplementary" explanation.
- It describes the points to supplement the explanation.



- (D) It describes the "references".
- It describes the information and pages of reference to be referred.

Part 01

Cautions (Instructions) for safety

1-1 Checking the product	4
1-2 External shape and installation	6
1-3 Wiring	9



01. Cautions (Instructions) for safety

1-1. Checking the product

- When the product is purchased, please check the damaged on the product by checking the exterior of the product.

(1) Checking the specification of the ordered product

- Check whether the purchased product is identical with the ordered specification.
- How to check : Check the model name specification code marked on the right of the packing box and on the left label of product case.

SDR 1-****/****

- Number of channel

02 : 2 channels | 04 : 4 channels | 06 : 6 channels | 12 : 12 channels

- Communication

N : RS-232C (Option) | C4 : RS-485 (Option) | CE : Ethernet (Option)

- Alarm output

N : No (Basic) | A1 : 6 points (Option) | A2 : 12 points (Option)

- Remote input



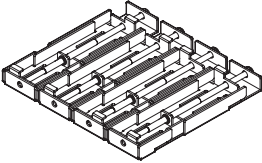

N : No (Basic) | R1 : 2 points (Option)

- Others

/M1 : Arithmetic function | /P1 : Portable type

(2) Check the parts inside the package

- Please check whether the following parts are included.

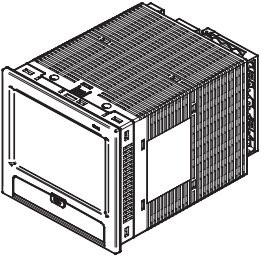SDR Series main body	SD card	Mount for fixing (Left : 2, Right : 2)	Instruction manual
			

(3) How to treat the damaged parts

- In case of product damage after checking the exterior of the product as shown in the above or the accessories are missed, please contact to the purchasing point or the sales part of our company.



CAUTION Period of exchange for the part of expiration date

- Please check the corresponding replacing period as shown below and replace prior to the expiration if it is necessary.
 - FUSE 2A/250VAC Equivalent : Semi permanent
 - RELAY ALD105(5V) Equivalent : Under 300,000 times of ON/OFF
 - BATTERY CR2030 3V Equivalent : Under 200,000
- The exchange of the product with expiration date, please contact to the purchasing point (Dealer shop) or the sales part of our company.

1-2. External shape and installation method

(1) Installation location and environment



CAUTION

Cautions for the installation location and environment

- Please manipulate in electricity on state at the installation of this product on the panel because of the electric shock risk. (Caution for electric shock)
- Do not install the product in the following location or environment.
 - A place for contacting the terminal by the human without recognition
 - A place directly exposed for mechanical vibration or impact
 - A place exposed for the corrosive gas or flammable gas
 - A place of temperature fluctuation
 - A place of extremely high (Over 50°C) and low (Under 10°C) temperature
 - A place exposed to the direct sunlight
 - A place influenced with electromagnetic wave
 - A place of moisture (A place with more than 85% of humidity)
 - A place where there are the flammable stuffs at the surrounding
 - A place of dusty and salty
 - place of receiving the ultra violet light
- Do not use sharp thing or excessive pressure to manipulate the touch screen.
- Please pay attention to the handling of the product because the product is weak to the organic solvent (Chemical substances) as the exterior of the product is made of plastic. (Do not contact the front side of the product to the organic solvent especially.)
- Even though the case of this product is made of non flammable material such as ABS/PC, but do not install in the place where there are the stuffs of easy flammability.






CAUTION


Cautions in installation

- Don't put the device or the wiring which cause the noise near to this product.
- Use the product in 10~50°C, in 20~90% RH (It shall not be dewing.) Don't put the heat radiant device closely.
- Don't install the product in declined position.
- Storage should be within -5~70°C, 5~95%RH(non condensing). At a cold condition below 10°C, sufficient warming-up should be preceded by the control operation.
- Turn off the main power of the product before wiring to prevent electric shock.
- This product operates in 100~240VAC, 50/60Hz, 15VAmax without special manipulation. There is a risk of the electric shock or fire when the electric power other than the specification.
- Don't work with wet hands. It has the risk of electric shock.
- Follow up the basic cautions to reduce risk of fire, electric shock and injury during using.
- The installation and the use shall be made according to the specified methods in instruction manual.
- Refer to the installation procedure regarding to the description for ground. However, do not make the ground on the water pipe, gas pipe, phone line and lightning rod. There is a risk of explosion and fire.
- Do not switch on before finishing the connection of the devices. It may cause the failure.
- Do not close the heat radiating hole on this product. It may cause the failure.
- The level of excessive voltage is category II and the use environment is degree II.

(2) External dimension (Unit:mm)

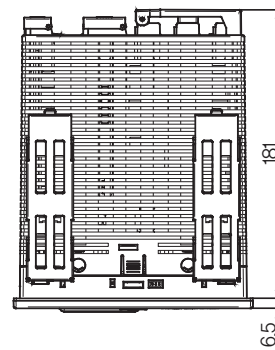
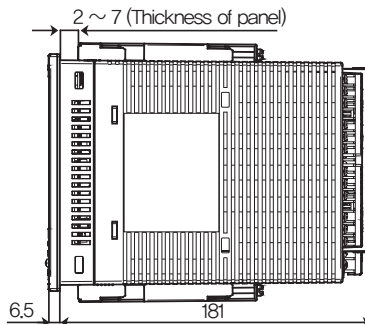
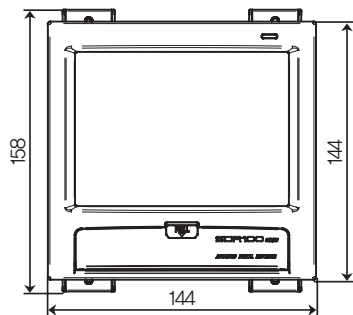


(3) Panel cutting dimension (Unit:mm)

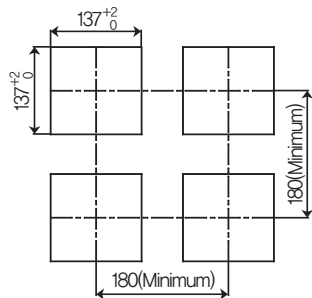


(4) How to attach on the panel mount

*How to install the product

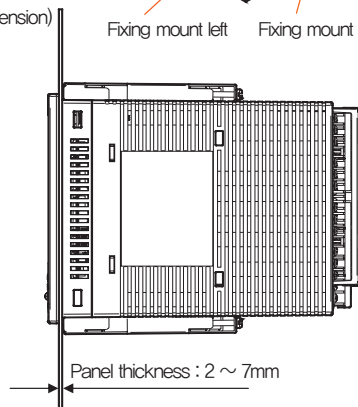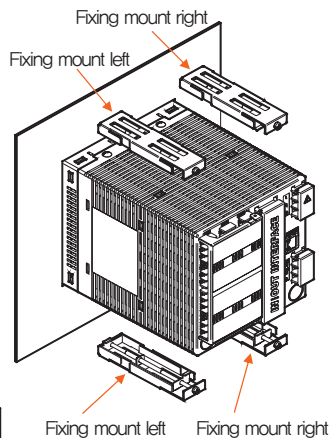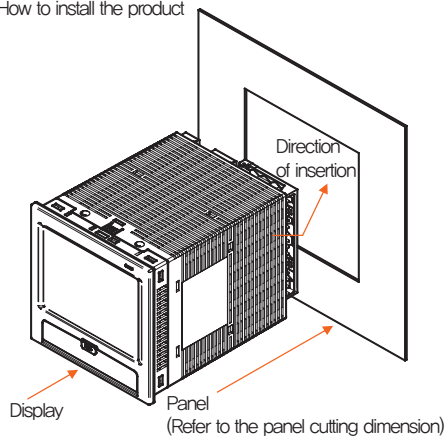

References

- ▶ Cut the panel to be installed. Refer to the [(3) Panel cutting dimension]
- ▶ Insert into the hole from the rear side of the product as shown in the above figure.
- ▶ Fix this product using the fixing mount at the upper/lower part of the product (As shown in the figure). (Use the Phillips driver)

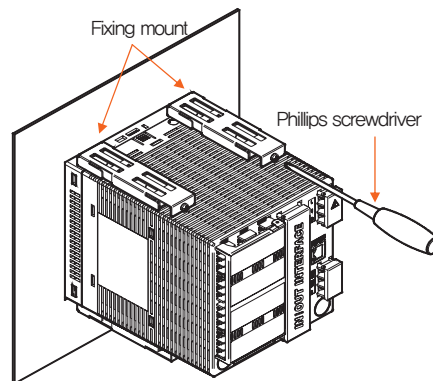

Cautions

- Assemble with fastening torque under $0.5\text{N} \cdot \text{m}$ in case of mounting the product on the panel because of the deforming of the case or the potential damage on the mount in excessive fastening.

1-3. Wiring




CAUTION Cautions

- Make the wiring after checking whether the wiring cable is applied for current with tester by switching off the main electric power in every supplied instrument.
- Never contact to the terminal because of the risk of electric shock during application of the current (Electric power on).
- Make the wiring after switching off the main electric power certainly.


(1) How to make the wiring

- Recommended specification for electric cable: Vinyl insulated electric cable KSC3304 0.9~2.0mm²
- Recommended specification for terminal: Use the pressed terminal with insulation sleeve which is proper to the M3 screw as shown in [Fig. 1].
- Source of noise
 - (A) Relay and contact point
 - (B) Solenoid coil and solenoid valve
 - (C) Electric power line
 - (D) Induced load
 - (E) Inverter
 - (F) Commutator in motor
 - (G) SCR for controlling the phase angle
 - (H) Wireless communication device
 - (I) Welding machine
 - (J) High pressure ignition device and etc

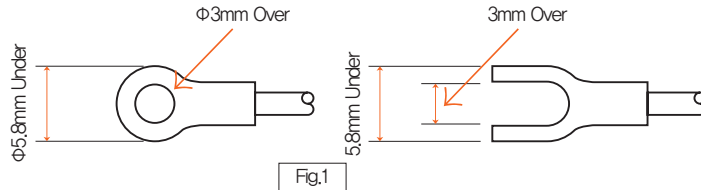


- Solution for noise
 - (A) Make the wiring with caution for the following points from the noise creation source.
 - (B) Make the wiring for the input circuit with placing the gap from the power circuit and ground circuit.
 - (C) Use the shield line for the noise from the electrostatic induction.
 - (D) Connect the shield line to the ground terminal according to the necessity not to make the 2 point ground.
 - (E) Make the wiring in tight twisting for the noise from the electric induction.

(2) Terminal layout

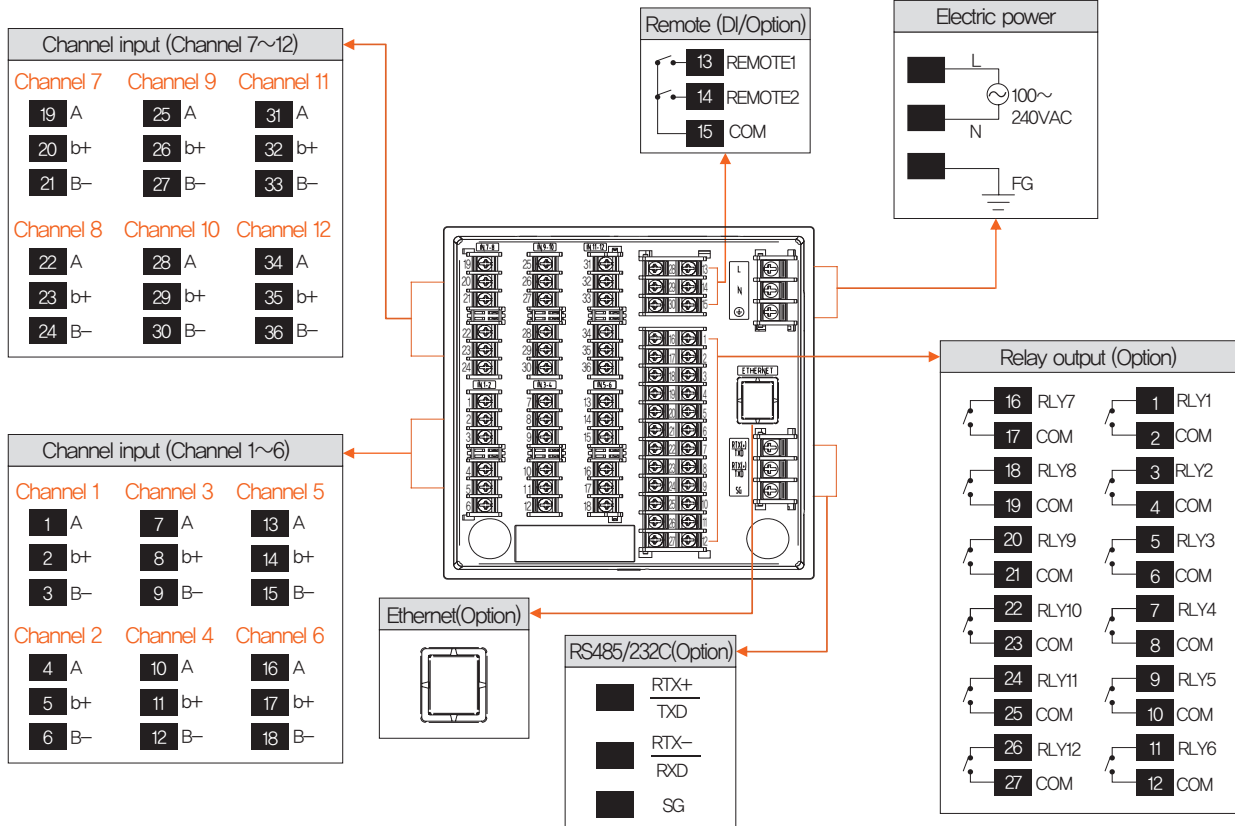


(3) Electric power circuit

- Use the cable with equivalent or above the vinyl insulated cable (KSC3340) or electric cable for electric power circuit.
- Make the circuit for ground with the electric cable over 2mm and above the third class ground (Unver100Ω of ground resistance)
- Make 1 point ground from the ground terminal and the wiring cross the ground terminal shall not be made.

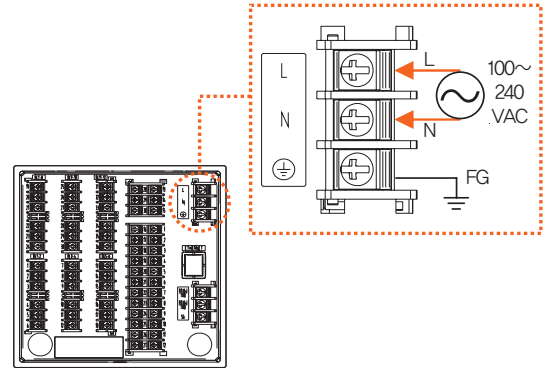


(4) Measurement (Sensor) input circuit


- Switch off the electric power to SDR100 main body and external power supply when the measurement (Sensor) input circuit is made because of the electric shock risk.
- Use the cable with shield for the input circuit. In addition, make 1 point ground for the shield.
- Make the circuit off from the electric power circuit or ground circuit for the signal line for measuring input.
- Use the electric cable with small cable resistance and no difference in resistance among 3 cables.

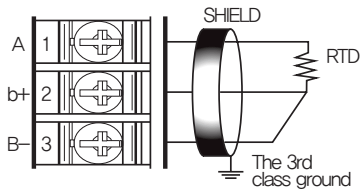

▶ Resistance Temperature Detector(RTD) Input

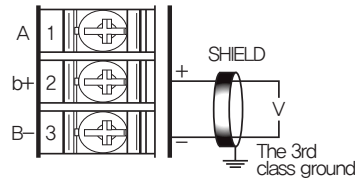

▶ DC Voltage input

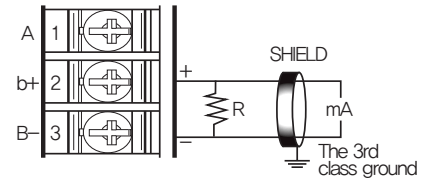

▶ DC Current input

Part 02

Operation and setting


2-1 Function and name of the display	13
2-2 Menu flow chart	14
2-3 Basic operation flow chart	16
2-4 Setting button operation	18
2-5 Warning message display	18
2-6 Parameter setting method	19



02. Operation and setting


2-1. Function and name of the display


- This product is a digital recorder designed in dialogue type touch screen for easy use.

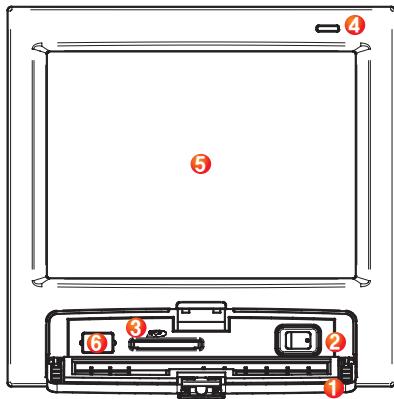



- | | |
|---|---|
| ① | Cover (There are electric power switch, SD card insertion part, Mini USB when the cover is opened.) |
| ② | SDR100 electric switch |
| ③ | SD card insertion part |
| ④ | Lamp (The yellow lamp is on when the electric power is ON firstly.) |
| ⑤ | Screen display |
| ⑥ | Mini USB (For after sales service: User cannot use it.) |

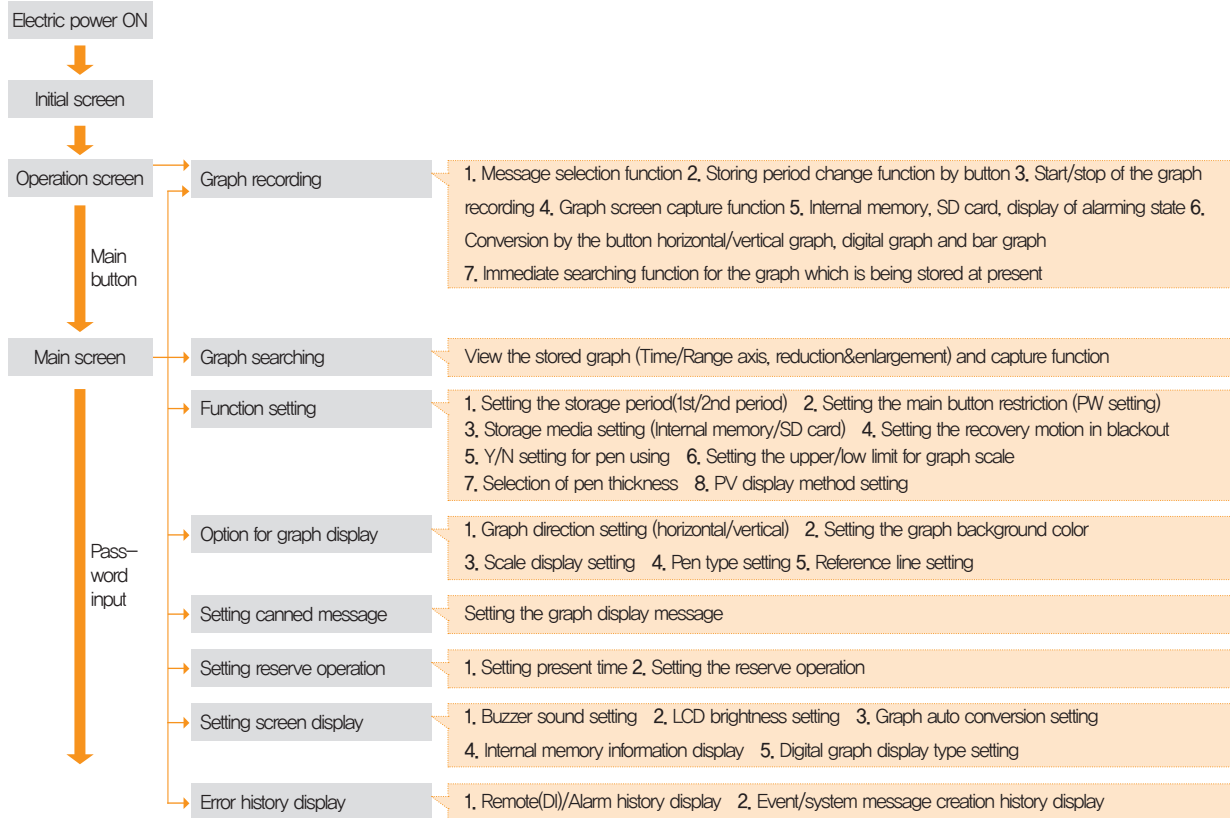2-2. Menu flow chart

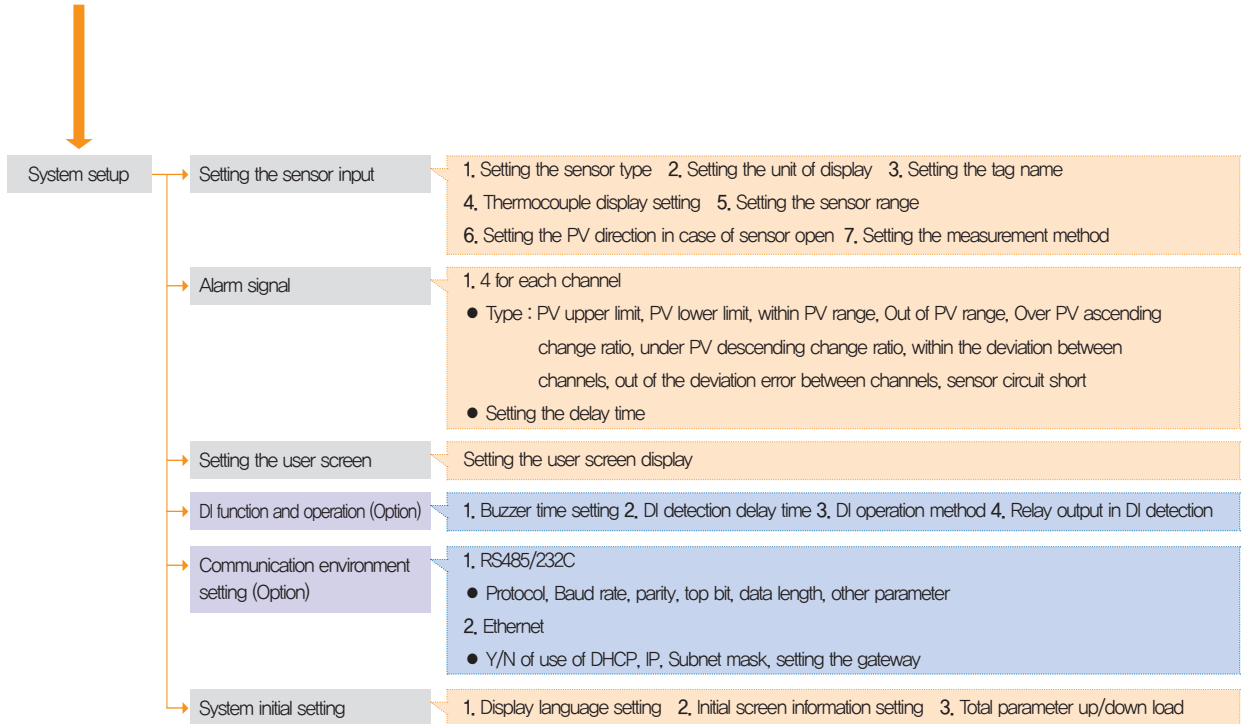



2-3. Basic operation flow chart

- The logo displaying screen and the initial screen are displayed sequentially when the electric power is switched ON after installation of the product and it converts to the graph recording screen automatically.
- It takes about 20 seconds in screen loading
- When  button is pressed at the top of the graph recording screen, the sub menu bar is displayed and when  is pressed, it converts to the main screen.




Loading screen



Initial screen



Graph recording screen

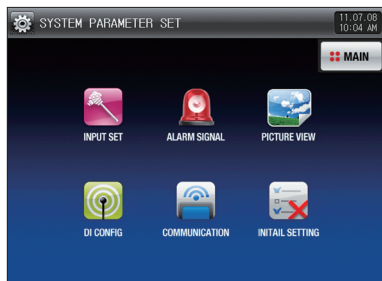

System parameter setting screen




Password input screen



Main screen



Password input screen

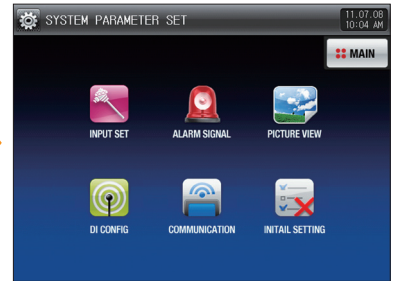

Screen with DI and communication option



Screen without DI option



Screen without communication option



Screen without DI and communication option

2-4. Setting button operation

[Table 2-1]

Button type	Button operation
	It is used for inputting the general numbers and name.
	It is used for selection for one out of many types.
	It is used for selection for one out of more than 2 parameter setting. (ON/OFF/Inactive state)
	It is used for selection of Y/N for the corresponding parameter. (ON/OFF/Inactive state)
	It is used for screen conversion of different function.
	It is used for increasing or decreasing of the page within the screen of same function.

2-5. Warning message display

[Table 2-2]


Display type	Description	Action
	No insertion of SD card : In case of no insertion of SD card or error creation	SD card checking
	Shortage of SD card capacity : In case of shortage of SD card saving capacity	SD card deletion
	Shortage of memory capacity : In case of internal memory saving capacity shortage	Internal memory deletion
	Excess of memory file quantity : In case of shortage in files saved in internal memory	Internal memory deletion
	Recording by D11 : In case of setting the D11 operation method in saving	D11 operation method checking
	Time setting error : In case of error in setting the saving of appointed time	Checking the saved appointment time
	It is being saved : In case of operation of appointment saving during saving	Appointment is available after saving

2-6. Parameter setting method

- When is selected in basic setting button in the above [Table 2-1], the input key of the setting value is shown as followings and the data can be input.
- When the data out of the setting range is input, error message ("INPUT ERROR") is shown on the input data display window with the error sound ("Beep")



▲ Input key for setting the numerics

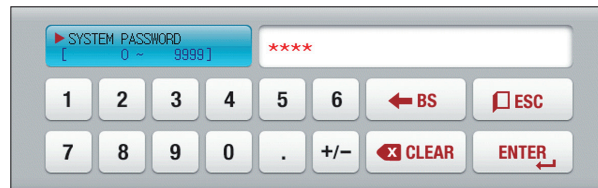

▲ Input key for setting the password



▲ Display out of the setting range



▲ Input key for setting the experiment name and message

Part **03**

Main screen21



03. Main screen



No.	Main menu	Description
①	GRAPH RECORD	Move to the Start/Stop for graph saving screen
②	GRAPH SERACH	Move to the data (Graph) searching screen stored in the internal memory/SD card
③	FUNCTION SET	Move to the function and operation setting screen
④	GRAPH OPTION	Move to the graph display option (Graph recording and searching screen)
⑤	CANNED MESSAGE	Move to the message setting screen
⑥	RESERVE SET	Move to the present time and reserve operation setting (Start and Finish)
⑦	DISPLAY SET	Move to the screen display setting and internal memory/SD card capacity display screen
⑧	ERROR HISTORY	Move to the error and event history related screen
⑨, ⑩	SYSTEM SETTING	When ⑨, ⑩ is pressed in sequence, the password box is activated to move to the system parameter setting screen.

Part **04**

Graph recording setting

4-1 Graph recording screen..... 23



04. Graph recording

4-1. Graph recording screen

(1) Graph recording screen

- When the “Graph Record” is selected from [Fig. 3-1 Main screen], it is converted to “Graph recording screen.”
- Any button is not operated during the screen capture.



[Fig. 4-1] Screen when the graph is not saved (Black screen)


Symbol	Description
	Button to capture the currently displayed screen
	Display for the condition in screen capturing
	Icon for display the internal memory capacity
	Icon for display in case of no storage space in internal memory
	Icon to display the SD card capacity
	Icon to display no storage space in the card
	Icon to display of no card insertion or no recognition
	Display/Non-display the sub menu bar
	Button for converting from (Channel 1~6) screen to Channel (7~12) screen • Display in SDR12 only
	The icon is blinking during graph saving
	The warning lamp is blinking in case of alarming.
	It displays the current time and date. It is converted to the power saving mode when it is touched and the lamp on the top of the product is on. <ul style="list-style-type: none"> • Red : State of non saving the graph • Green : state of saving the graph
	The currently saving graph is searched as [Fig 4-14] <ul style="list-style-type: none"> • Icon is not displayed in stopping



[Fig. 4-2] Screen in case of non saving the graph
(Display of sub menu bar)



[Fig. 4-3] Screen in case of saving the graph (White screen)

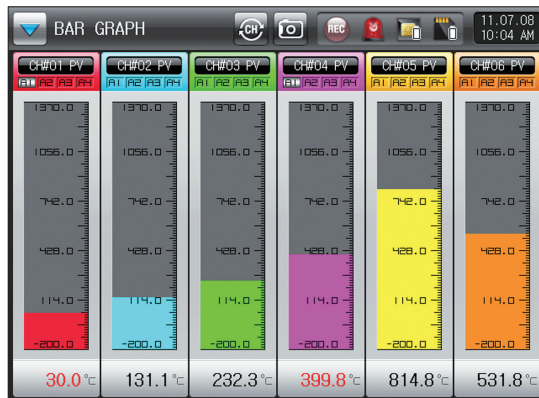

[Fig. 4-4] Bar graph screen


Symbol	Description
	Convert to [Fig. 3-1] Main screen
	Convert to [Fig. 4-4] Bar graph screen
	Convert to [Fig. 4-5] Digital graph screen
	[Fig. 4-6 Message input screen] is appeared and the input or set image is shown
	[Fig 4-9 the screen for changing the storage period 1st ↔ 2nd is appeared and the storage period is changed.
	[Fig. 4-10 PV graph storage screen] is appeared and the storage is started.

Reference


- ▶ The sub menu bar is disappeared automatically when the key motion is not for 60 seconds.



[Fig. 4-5] Digital graph screen

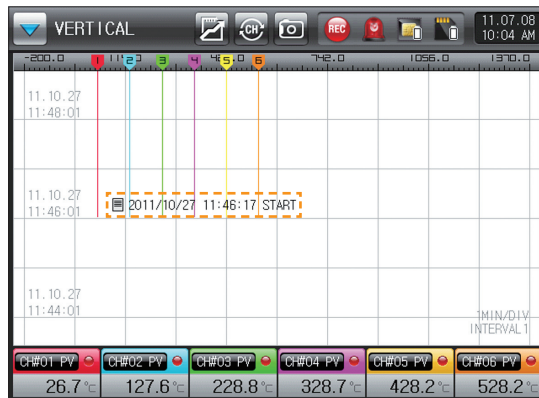


[Fig. 4-7] The screen selected with No.1 in message input

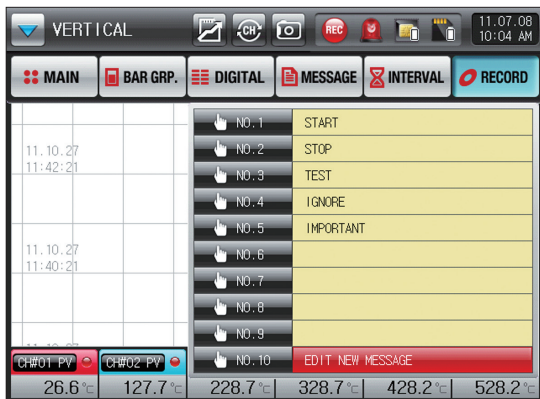

[Fig. 4-6] The message input screen



[Fig. 4-8] The screen selected with EDIT NEW MESSAGE in message input

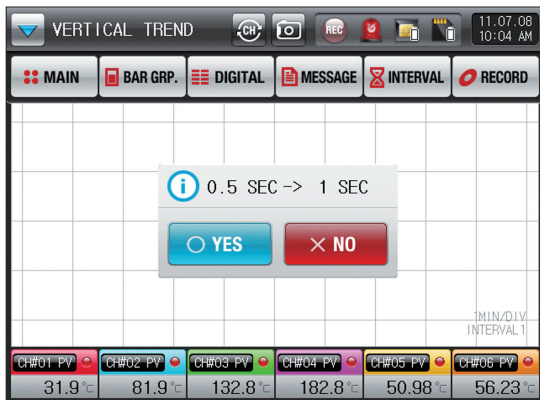

[Fig 4-9] The screen for changing the storage period 1st → 2nd



[Fig. 4-10] PV graph saving screen




[Fig. 4-11] The screen for setting the file name in graph saving


Reference


- ▶ The file name in saving the PV graph use maximum 8 character combination.
- ▶ The file name is not set separately in case of PV graph saving. In case of using the input name as it is, the figures at the suffix are set as current time.

(2) Graph recording saving screen


- The screen for saving the graph record is composed of 3 screens.
- Each channel is displayed with unique color. • The name of each channel can be set.

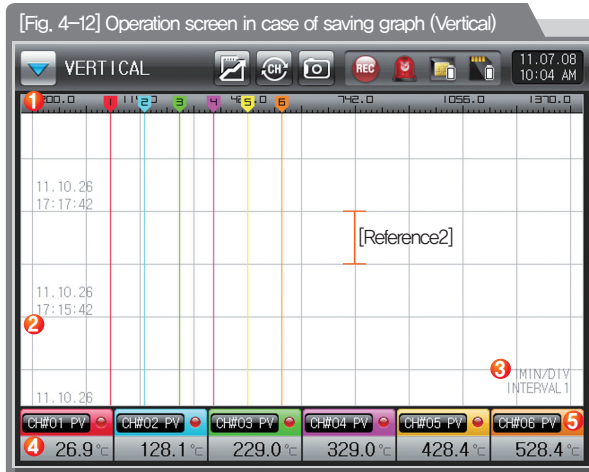


- ① The current PV is displayed on the scale bar. The PV display method is set with tag or bar in [Motion setting] [Refer to 1]
- ② Display the corresponding time (Date/time) to each axis [1MIN/DIV] shows the minutes per scale in the time axis on the screen [Refer 2]
- ③
- ④ The channel No. and unit, measure data are displayed for each channel
- ⑤  (Activation box) is pressed.
The corresponding channel is displayed when it is pressed again,

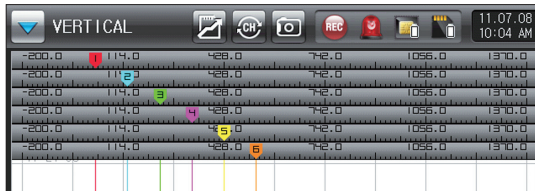


[Reference 1] PV display method screen (Tag)

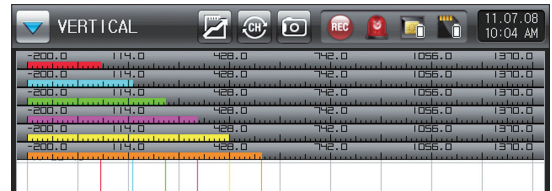

[Reference 1] PV display method screen (Bar)

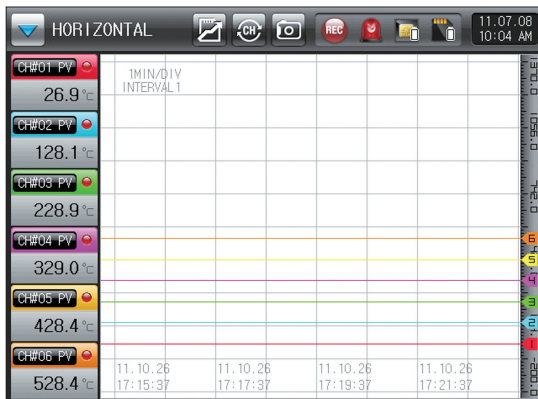

[Fig 4-13] Operation screen for PV graph (Horizontal) storing

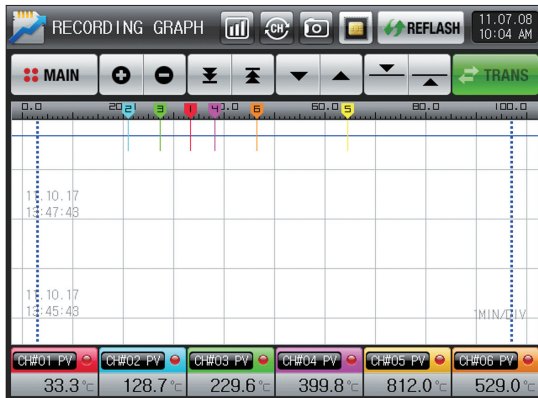






[Fig. 4-14] Screen for searching the graph which is being saved

Reference

- ▶ The back ground color is changeable into black or white
- ▶ The direction of the graph is changeable into vertical or horizontal
- ▶ The message can be input.
- ▶ The storage period can be changed
- ▶ The measured data for the corresponding channel is displayed in alarming and the warning lamp is operated

Reference

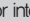- ▶ When the icon in  [Fig. 4-13] is touched, the graph which is being saved is displayed as shown in [Fig. 4-14].
- ▶ The screen conversion for the graph which is being saved is available for screen conversion after 25 seconds after saving.
- ▶ When the icon in  is touched, it is converted into the operating screen of current screen and it is recovered to the current graph operation screen automatically when there is no key motion for 60 seconds.
- ▶ The icon in  updates the graph screen immediately which is being saved.
- ▶ The icon in  [Fig. 4-14] displays that the graph screen which is being saved in the file for internal memory. The icon  is displayed in case of SD card file.

Part 05





Graph searching


5-1 Graph view	30
5-2 Data searching	31







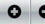

05. Graph searching

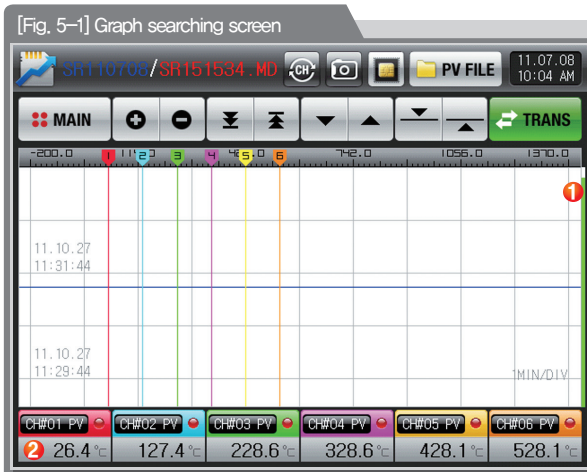5-1. Graph view

- When the "Graph search" is selected from the [Fig.3-1 Main screen], it converted to "Graph searching screen."
- It is a screen to search the file stored in the internal memory and SD card.
- The function of , , ,  is not operated in case of 1 page for recorded data.
- The searching scroll bar is not displayed in case of smaller recorded data.

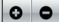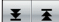

- ① When the green part on the right of the screen is touched, it moves to the corresponding page on the touched point of Y coordinate.
- ② It display the temperature located on the blue basic line.

Symbol	Description
	The time axis is expanded or reduced.
	Move to the first (Time) and the end (Time) of the recorded graph
	Move to up and down by one page
	The blue line which displays the current data on the graph is moved up and down by 1 dot
	It displays the file stored into the internal memory and SD card
	The current opened PV file is transmitted to the SD card.

5-2. Data searching



[Fig 5-2] Opening the PV file
(Selection of the folder in internal memory)



[Fig 5-3] Opening the PV file
(Selection of the file in internal memory)


Symbol	Explanation
	Move to the start and end in case of data searching stored in the internal memory and SD card
	Move to the up and down in case of data searching stored in the internal memory and SD card
	Close the PV file
	Move to the folder
	Check the internal memory file through the PV file
	Check the file in SD card through the PV file

Reference

- ▶ The currently opened folder or file is display in red.
- ▶ The button is not activated in case of storing into the SD card.



[Fig. 5-4] PV file open
(Selection of the folder stored in SD card)

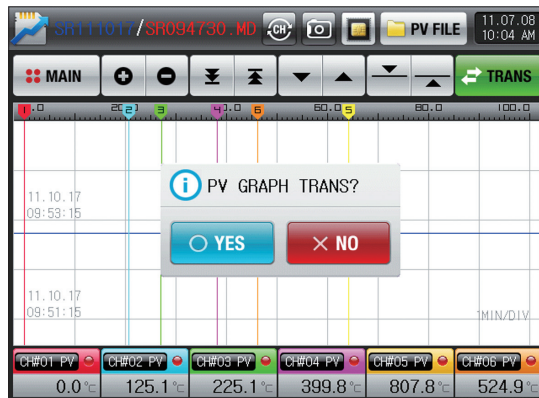

[Fig. 5-6] Screen for selection of the PV graph transmitting which is opened currently



[Fig. 5-5] PV file open (Selection of the file stored in the SD)




[Fig. 5-7] Screen for PV graph transmitting which is opened currently

Part **06**


Function setting

35

Function setting flow chart

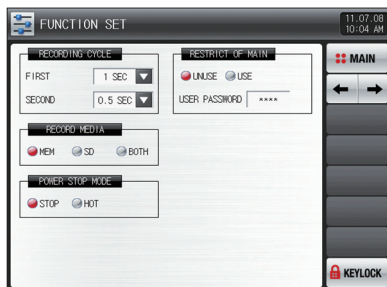

[Fig. 6-1] Function setting screen #1

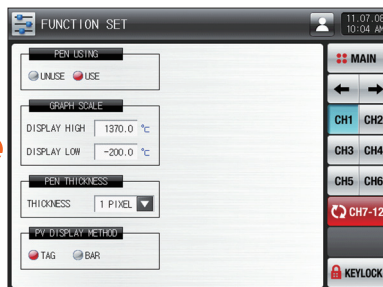

[Fig. 6-2] Function setting screen #2




06. Function setting

- When “Function set” is selected from [fig. 3-1 Main screen], it is converted to “Function setting screen.”
- It is the screen for setting the additional function of the product.



[Fig. 6-1] Function setting screen #1

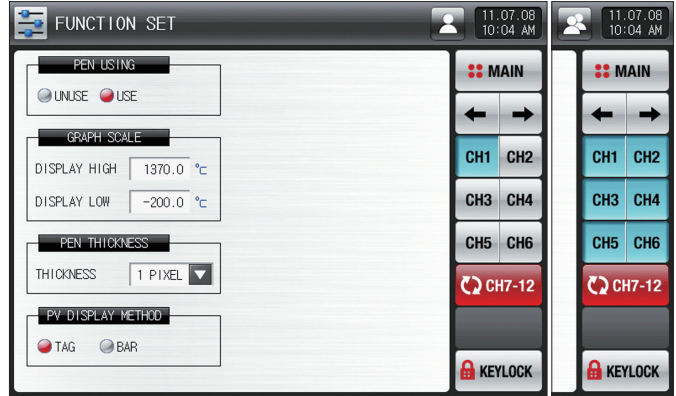

[Fig. 6-2] Function setting screen #2

Symbol	Description	Symbol	Description
	Converting to the current screen to the next screen		Move to channel (7~12)
	Setting the key lock in the parameter • The screen movement and key lock release are available		Change of parameter in the currently selected channel
	Converting to the setting screen for corresponding channel		Change of every parameter as same

Instruction	Description
RECORDING CYCLE	Setting the saving period
FIRST	Saving period adopted to the INTERVAL 1
SECOND	Saving period adopted to the INTERVAL 2 <ul style="list-style-type: none"> • Changed by the saving period button or remote controller (DI operation) in the recording screen
RECORD MEDIA	Setting the place to save the recorded graph
MEM	Saving into the internal memory
SD	Saving into the SD card
BOTH	Saving into the internal memory and SD card simultaneously
POWER STOP MODE	Setting the recovery operation in case of blackout
STOP	Pause the saving operation
HOT	Saving by creating new file <ul style="list-style-type: none"> • The history is saved in recovering after motion for blackout and display the message on the graph
RESTRICT OF MAIN	The keypad for password input is displayed when the main button is pressed in the recording screen in case of setting the main button restriction. Refer to [Fig. 6-7]
PEN USING	Setting the Y/N for the pen (PV graph display) in the corresponding channel of the recording screen
GRAPH SCALE	<ul style="list-style-type: none"> • When the pen is set not for use, it is not displayed and not saved in the graph recording screen
PEN THICKNESS	Setting the upper and lower limit of the scale bar in the recording screen
	Setting of the pen thickness (PV graph display)
PV DISPLAY METHOD	Setting the PV display type displayed in the scale bar of the recording screen
TAG	Display in tag type of the PV display method for scale bar. Refer to [Fig. 6-5]
BAR	Display in bar type of the PV display method for scale bar. Refer to [Fig. 6-6]




[Fig. 6-3] The screen not available for saving in case of no insertion of the card




[Fig. 6-4] The screen not available for saving due to no space in memory on the card

Reference

- ▶ The graph is not saved when the SD card is not inserted after setting the saving media with SD card
- ▶ The graph is not saved when the SD card is not inserted after setting the saving media with both of them,
- ▶ The graph is not saved when the memory on the SD card is full,

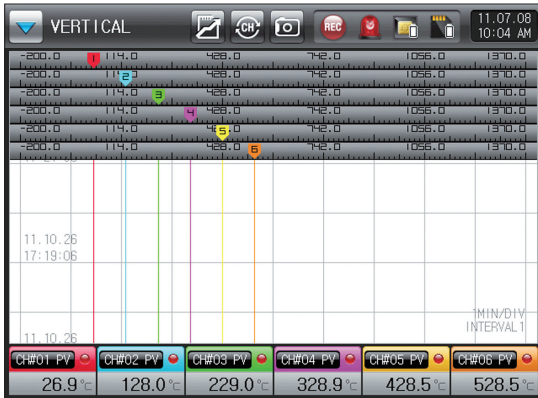


[Fig. 6-5] PV display type screen (Tag)

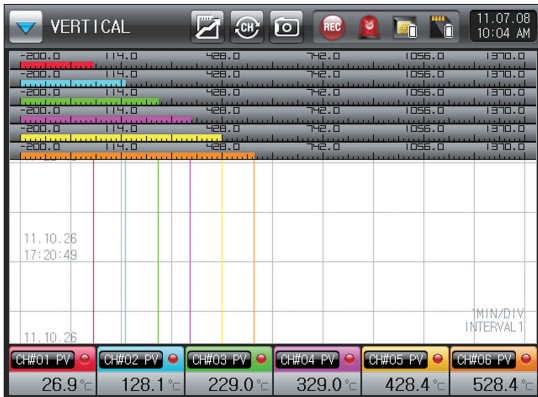

[Fig. 6-6] PV display type screen (Bar)



[Fig. 6-7] Screen for setting the main button restriction

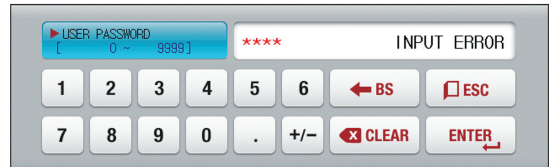

[Fig. 6-8] Screen for the wrong user password

Reference

- ▶ [Fig. 6-7] is the screen for setting the main button restriction
- ▶ The password setting keypad is displayed when the main button is pressed in recording screen
- ▶ The display of "INPUT ERROR" is appeared when the password is wrong after password setting and it cannot move to the main.


Parameter	Setting range	Unit	Initial value
FIRST	0.5 sec, 1 sec, 2 sec, 5 sec, 10 sec, 20 sec, 30 sec, 1 min	ABS	1 sec
SECOND	0.5 sec, 1 sec, 2 sec, 5 sec, 10 sec, 20 sec, 30 sec, 1 min	ABS	0.5 sec
RECORD MEDIA	MEM, SD, BOTH	ABS	MEM
POWER STOP MODE	STOP, HOT	ABS	STOP
RESTRICT OF MAIN	UNUSE, USE	ABS	UNUSE
USER PASSWORD	0~9999	ABS	0
Channel #n PEN USING	UNUSE, USE	ABS	Use
Channel #n GRAPH DISPLAY HIGH	Channel #n,EU (-5,0~105,0%)	Channel #n,EU	Channel #n,EU(100%)
Channel #n GRAPH DISPLAY LOW	Channel #n,DISPLAY < Channel #n,DISPLAY	Channel #n,EU	Channel #n,EU(0%)
Channel #n PEN THICKNESS	1 PIXEL, 3 PIXEL	ABS	1 PIXEL
Channel #n PV DISPLAY METHOD	TAG, BAR	ABS	TAG

※ #n : 1 ~ 12


Part 07

Graph option

7-1 Graph display option (Graph recording screen)	42
7-2 Graph display option (Graph searching screen)	43

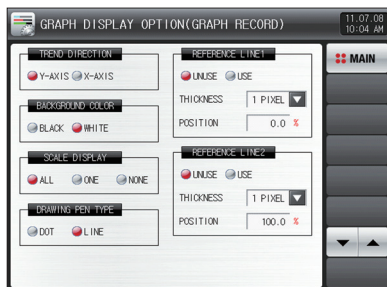

[Fig. 7-1] Graph display option
(Graph recording screen)

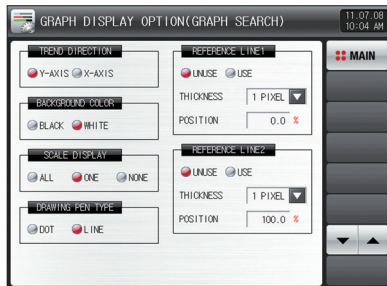


[Fig. 7-2] Graph display option
(Graph searching screen)



07. Graph option

7-1. Graph display option (Graph recording screen)

- When “Graph option” is selected from [Fig. 3-1 Main screen], it is converted to “Graph display option screen.”
- It is the screen for setting the parameter adopted for the graph recording screen.

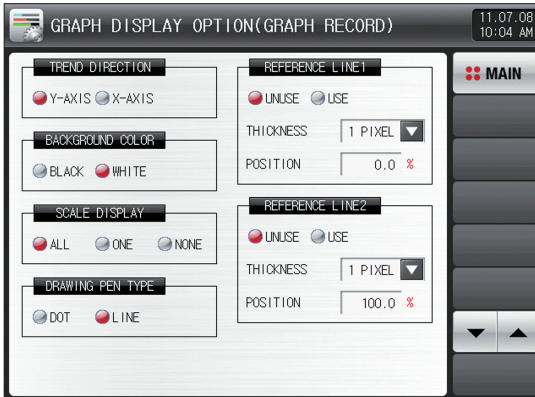


[Fig. 7-1] Graph display option (Graph recording screen)

Instruction	Description
TREND DIRECTION	Setting of the direction of graph recording screen
Y-AXIS	The direction of the graph recording screen is displayed vertically. Refer to [Fig. 4-9]
X-AXIS	The direction of the graph recording screen is displayed horizontally. Refer to [Fig. 4-10]
BACKGROUND COLOR	Setting of the background color of graph recording screen
BLACK	Setting of the background color of graph recording screen in black. Refer to [Fig. 4-1]
WHITE	Setting of the background color of graph recording screen in white. Refer to [Fig. 4-3]
SCALE DISPLAY	Setting of the scale bar display
ALL	Setting of scale bar
ONE	Display of scale bar and data for each channel
NONE	No display for the scale bar and range • When it is set “One” it is operated as “Tag” regardless of the set data of “PV display type” in each channel
DRAWING PEN TYPE	PV graph display type setting
DOT	PV is displayed in dot
LINE	PV is displayed in line
REFERENCE LINE1	Setting of Y/N and location of the display at the basic line at the ends
REFERENCE LINE2	of the left, right, upper and lower of the graph. Refer to [Fig. 7-3]


7-2. Graph display option (Graph searching screen)

- It is the screen for setting the parameter adopted for the graph recording screen.

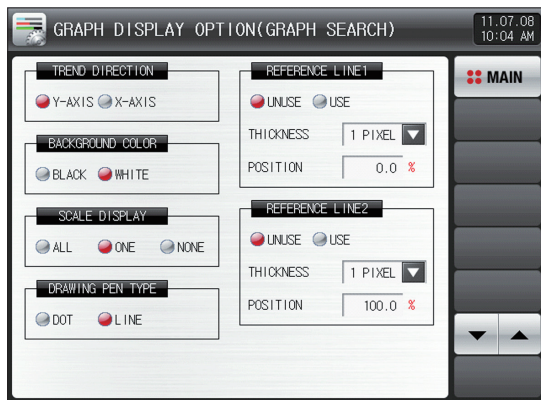


[Fig. 7-2] Graph display option (Graph searching screen)

Instruction	Description
TREND DIRECTION	Setting of the direction of graph searching screen
Y-AXIS	The direction of the graph searching screen is displayed vertically.
X-AXIS	The direction of the graph searching screen is displayed horizontally.
BACKGROUND COLOR	Setting of the background color of graph searching screen
BLACK	Setting of the background color of graph searching screen in black
WHITE	Setting of the background color of graph searching screen in white
SCALE DISPLAY	Setting of the scale bar display
ALL	Setting of scale bar
ONE	Display of scale bar and data for each channel
NONE	No display for the scale bar and range <ul style="list-style-type: none"> When it is set "One" it is operated as "Tag" regardless of the set data of "PV display type" in each channel
DRAWING PEN TYPE	PV graph display type setting
DOT	PV is displayed in dot
LINE	PV is displayed in line
REFERENCE LINE1	Setting of Y/N and location of the display at the basic line at the ends
REFERENCE LINE2	of the left, right, upper and lower of the graph, Refer to [Fig. 7-4]

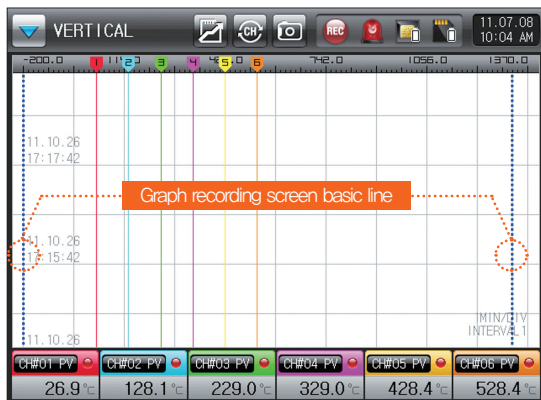

[Fig. 7-3] Screen for setting the reference line in graph recording screen

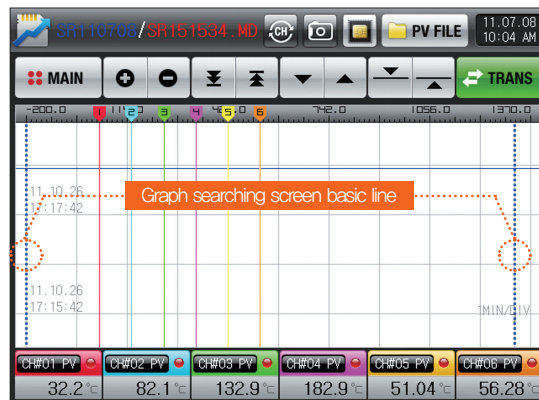

[Fig. 7-4] Screen for setting the reference line in graph searching screen

Parameter	Setting range	Unit	Initial value
TREND DIRECTION	Y-AXIS, X-AXIS	ABS	Y-AXIS
BACKGROUND COLOR	BLACK, WHITE	ABS	BLACK
SCALE DISPLAY	ALL, ONE, NONE	ABS	ALL
DRAWING PEN TYPE	DOT, LINE	ABS	LINE
REFERENCE LINE 1	UNUSE, USE	ABS	UNUSE
REFERENCE LINE THICKNESS 1	1 PIXEL, 3 PIXEL	ABS	1 PIXEL
REFERENCE LINE POSITION 1	0.0~100%	%	0.0
REFERENCE LINE 2	UNUSE, USE	ABS	UNUSE
REFERENCE LINE THICKNESS 2	1 PIXEL, 3 PIXEL	ABS	1 PIXEL
REFERENCE LINE POSITION 2	0.0~100%	%	100.0

Part **08**

Setting canned message

.....46



08. Setting canned message

- When “Canned message” is selected from [Fig. 3-1 Main screen], it is converted to “Setting canned message.”

[Fig. 8-1] Message input screen

Instruction	Description
CANNED MESSAGE	Setting the frequently used message in message input in recording screen

Parameter	Setting range	Unit	Initial value
Graph display message 1		ABS	START
Graph display message 2		ABS	STOP
Graph display message 3	0~9	ABS	TEST
Graph display message 4	A~Z	ABS	IGNORE
Graph display message 5	Special character	ABS	IMPORTANT
Graph display message 6	(Maximum 24	ABS	—
Graph display message 7	characters)	ABS	—
Graph display message 8		ABS	—
Graph display message 9		ABS	—

Part **09**

Setting reserve operation


49

Flow chart for setting reserve operation

➔ ⬅️➡️ Flow chart



[Fig. 9-1] Screen for current time setting

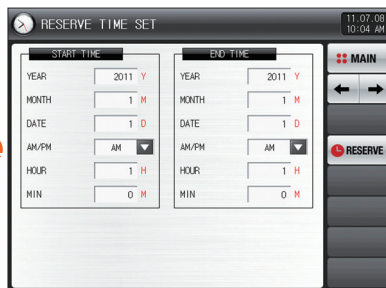

[Fig. 9-2] Screen for reserve time setting



09. Setting reserve operation

- When “Reserve set operation” is selected from [Fig. 3-1 Main screen], it is converted to “Screen for setting current time, reserve storing time.”
- The current time, reserve operation time (Start/End) can be set.
- The reserve time is not changed during reserve and reserve operation.
- It is not operated when the starting time is earlier than current time.
- The ending time is not operated when the ending time is earlier than start time.
- The ending time is operated in spite of setting in continuity of recovery motion in blackout. However, the saving is not made in electric power recovery after the ending time.



[Fig. 9-1] Screen for current time setting



[Fig. 9-2] Screen for reserve time setting

Instruction	Description
CURRENT TIME	Setting of the current time
START TIME	Setting of the saving for reserve time start
END TIME	Setting of the saving for reserve time end

Symbol	Description
	Button for starting the reserve operation

Parameter	Setting range	Unit	Initial value
CURRENT TIME(YEAR)	2000~2099	ABS	–
CURRENT TIME(MONTH)	1~12	ABS	–
CURRENT TIME(DATE)	1~31	ABS	–
CURRENT TIME(AM/PM)	AM/PM	ABS	–
CURRENT TIME(HOUR)	1~12	ABS	–
CURRENT TIME(MIN)	0~59	ABS	–
RESERVE START TIME(YEAR)	2000~2099	ABS	2011
RESERVE START TIME(MONTH)	1~12	ABS	1
RESERVE START TIME(DATE)	1~31	ABS	1
RESERVE START TIME(AM/PM)	AM/PM	ABS	AM
RESERVE START TIME(HOUR)	1~12	ABS	1
RESERVE START TIME(MIN)	0~59	ABS	0
RESERVE END TIME(YEAR)	AM/PM	ABS	2011
RESERVE START TIME(MONTH)	1~12	ABS	1
RESERVE START TIME(DATE)	1~31	ABS	1
RESERVE START TIME(AM/PM)	AM/PM	ABS	AM
RESERVE START TIME(HOUR)	1~12	ABS	1
RESERVE START TIME(MIN)	0~59	ABS	0
RESERVE MODE	OFF, ON	ABS	OFF

Part **10**


Setting screen display

52




10. Setting screen display


- When “Screen Display set” is selected from [Fig. 3-1 Main screen], it is converted to “Screen display setting.”
- It is a screen to set the screen brightness and electricity saving time.

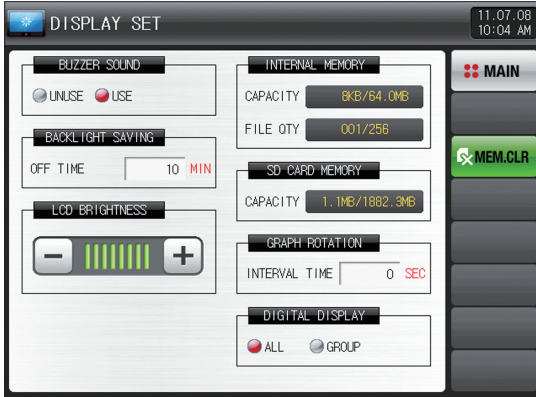


[Fig. 10-1] Screen for setting screen display

Symbol	Description
	It deletes the internal memory. • The SD card memory cannot be deleted


Instruction	Description
BUZZER SOUND	Setting the Y/N for using buzzer sound
BACKLIGHT SAVING	Setting the electricity saving in back light
LCD BRIGHTNESS	Adjust the brightness of LCD
GRAPH ROTATION	Automatic converting to the screen of channel (1~6) and channel (7~12) when there is no key action for the set time. Refer to [Fig. 10-4.5] • Operation in SDR112 only
INTERNAL MEMORY	Total capacity of internal memory, used capacity, total files to be saved and display of saved files
SD CARD MEMORY	Display of total capacity of SD card and use capacity
DIGITAL DISPLAY	Setting the display method of digital recording screen. • Operation in SDR112 only
ALL	Display of all channels in one screen. Refer to [Fig. 10-2] • Operation in SDR112 only
GROUP	It displays the group channel for each screen and screen conversion to channel (1~6) and channel (7~12) with channel conversion key • Operation in SDR112 only

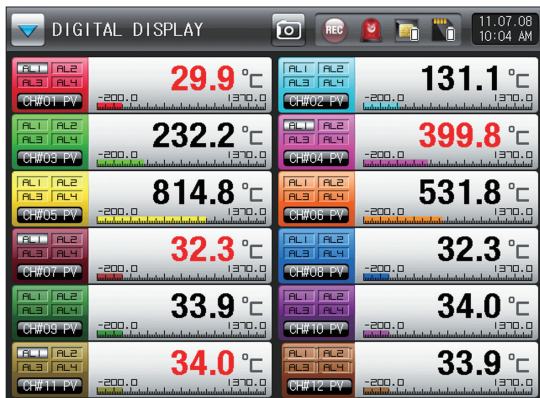

[Fig. 10-2] Display of all digital graphs

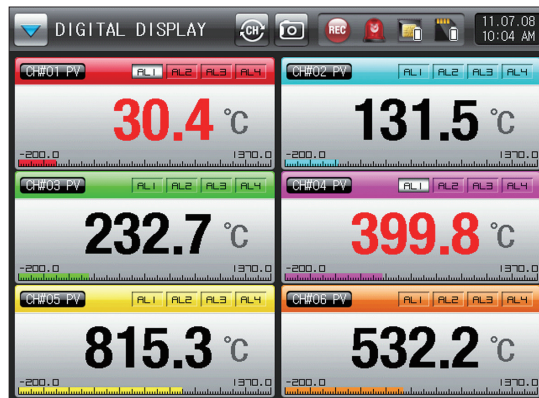

[Fig. 10-3] Display of digital graph group (Channel 1~6)

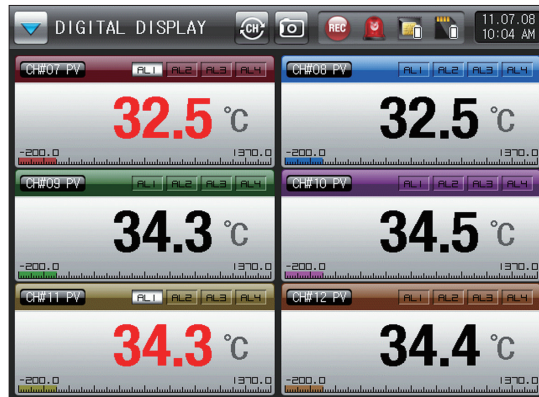


[Fig. 10-3] Display of all digital groups (Channel 7~12)

Reference

- ▶ The files to be saved into the internal memory are limited to 256 files. Use after deletion of the files from the internal memory when it exceeds 256 files.



[Fig. 10-4] Graph automatic conversion screen (Channel 1~6)

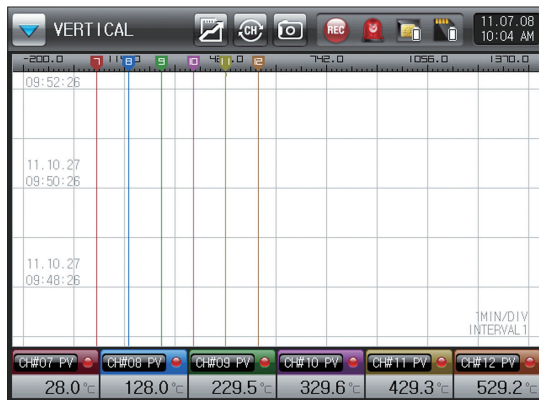

[Fig. 10-5] Graph automatic conversion screen (Channel 7~12)

Reference

- ▶ It is operated when there is no key action for a certain period of time (1 min) in recording screen.
- ▶ It is not operated when the automatic conversion is "0" in recording screen.
- ▶ The screen is automatically converted to channel (1~6) and channel (7~12) in set period from the graph automatic conversion.

Parameter	Setting range	Unit	Initial value
BUZZER SOUND	UNUSE, USE	ABS	Use
BACKLIGHT SAVING	0~99 Min	ABS	10
LCD BRIGHTNESS	1~8	ABS	8 column
GRAPH ROTATION	0~99 Sec	ABS	0
DIGITAL DISPLAY	ALL, GROUP	ABS	ALL

Part **11**

Error history display 57

Flow chart for Error history display



HISTORY DISPLAY			11.07.08 10:04 AM
ERROR HISTORY			MAIN
NO.	OCCURRENCE TIME	CONTENTS	← →
1	2011/07/08 17:59:21	[GH] ALARM1 IS ON	TRANS ALL CLR
2	2011/07/08 17:59:47	[GH] ALARM1 IS OFF	
3	2011/07/08 17:59:57	[GH] ALARM1 IS ON	
4	2011/07/08 18:00:31	[GH] ALARM1 IS OFF	
5			MAIN ← → TRANS ALL CLR ↓ ↑
6			
7			
8			
9			
10			

[Fig. 11-1] Screen for error history

HISTORY DISPLAY			11.07.08 10:04 AM
EVENT HISTORY			MAIN
NO.	OCCURRENCE TIME	CONTENTS	← →
1	2011/07/08 15:03:45	PARAMETERS ARE INITIALIZED	TRANS ALL CLR
2	2011/07/08 15:07:05	RECORD ON	
3	2011/07/08 15:09:56	RECORD OFF	
4	2011/07/08 15:15:36	RECORD ON	MAIN ← → TRANS ALL CLR ↓ ↑
5	2011/07/08 15:23:10	RECORD OFF	
6	2011/07/08 15:25:50	SD CARD INSERT	
7	2011/07/08 15:30:45	SD CARD EJECT	
8	2011/07/08 15:32:12	SD CARD INSERT	
9	2011/07/08 15:39:11	RECORD ON	
10	2011/07/08 15:49:33	RECORD OFF	

[Fig. 11-2] Screen for event history



11. Error history display

- When “History display” is selected from [Fig. 3-1 Main screen], it is converted to “Screen for history display setting.”
- It is a screen for displaying the error, alarm and event history.
- It saves 100 errors, alarm and event history and the occurred history later are saved after deletion of the first saved history.



[Fig. 11-1] Screen for error history



[Fig. 11-2] Screen for event history

Symbol	Description
	All stored error, alarm, event, system history is transmitted to the SD card. <ul style="list-style-type: none"> • It overwrites when the file is same and the extension of the previous file is changed into “BAK.”

Symbol	Description
	It deletes all stored error, alarm, event, system history.

Message contents	Screen display	Lettering color
In changing the saving period (1st period → 2nd period)	INTERVAL CHANGED(1 → 2)	White
In changing the saving period (2nd period → 1st period)	INTERVAL CHANGED(2 → 1)	White
In changing the saving period (Remote D12)	INTERVAL CHANGED(D12 : 1 → 2)	White
In changing the saving period (Remote D12)	INTERVAL CHANGED(D12 : 2 → 1)	White
In power ON (Stop)	POWER ON(STOP)	White
In power ON (Hot)	POWER ON(HOT)	White
In record ON	RECORD ON	White
In record OFF	RECORD OFF	White
In record ON (Appointment)	RECORD ON(RESERVE)	White
In record OFF (Appointment)	RECORD OFF(RESERVE)	White
In record ON (Remote D11)	RECORD ON(D11)	White
In record OFF (Remote D11)	RECORD OFF(D11)	White
In setting key lock	KEYLOCK ON	White
In releasing key lock	KEYLOCK OFF	White
In SD card insertion	SD CARD INSERT	White
In SD card release	SD CARD EJECT	White
In internal memory deletion	INTERNAL MEMORY CLEAR	White
In initializing the parameter	PARAMETERS ARE INITIALIZED	White


Part **12**

Setting system parameter 60







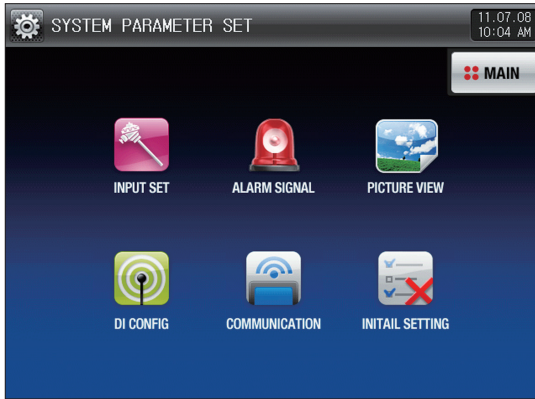

12. Setting system parameter

- Refer to [Fig. 3-1 Main Screen] for process of entering into the system parameter setting screen.
- Refer to [Fig. 2-3 Basic operation flow chart] system setting screen depending on DI and communication option selection.
- It is a screen for initial setting which is necessary for the recording of device.



[Fig. 12-1] System parameter screen

SYMBOL	Item	Function
	Sensor input setting	Setting the parameter related with the type of input sensor and sensor input.
	Alarm signal	Setting the parameter related with alarm signal
	Setting the user screen	Setting the parameter related with the user picture file setting screen.
	DI function and motion Setting	Setting the parameter related with the external contact point input signal.
	communication environment	Setting the parameter related with communication
	System initial setting	Setting the parameter related with the basic setting for up/down of parameter and screen configuration.

Part **13**

Screen for setting the sensor input

13-1 Sensor input screen62




13. Screen for setting the sensor input

13-1. Sensor input screen


- When the "Input set" is selected in the [Fig. 12-1 System parameter screen], the parameters related in sensor input can be set.



[Fig. 13-1] Sensor setting screen (T/C)

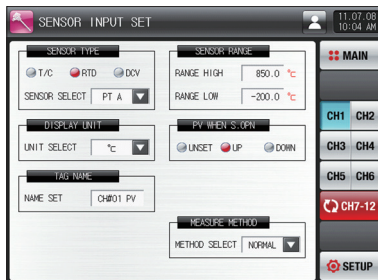

[Fig. 13-2] Sensor setting screen (RTD)

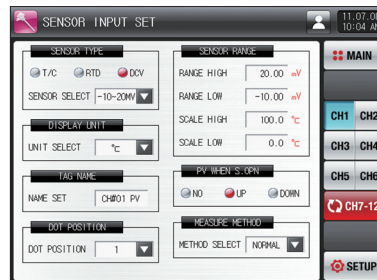

[Fig. 13-3] Sensor setting screen (DCV)

Reference

- ▶ Select the input (T/C, RTD, DCV) sensor for channel)1~12).
- ▶ Set the sensor first because the parameters related with the selected sensor are initialized in sensor change.
- ▶ The above screen is the explanation for the channel (1~6) and screen of channel (7~12) is same with channel (1~6).
- ▶ The sensor group, sensor type, range upper limit/lower limit, display unit, scale upper limit/lower limit cannot be changed during graph saving.

Symbol




Description

When the set up button is pressed, it is converted into [Fig. 12-1 System parameter screen]

Instruction	Description
SENSOR TYPE	Set the input sensor type
DISPLAY UNIT	Set the tag name of the graph recording screen
TAG NAME	Input maximum 8 characters using the 0~9, A~Z and special character.
T/C DISPLAY	Set the Y/N for the basic contact point compensation for the terminal connected with sensor. Refer to [Table 13-1] <ul style="list-style-type: none"> • Selection of Y/N for using RJC in case of T/C sensor type.
T/C	It does not compensate the temperature of terminal and displays the current measured data [Measured temperature in sensor side <input type="checkbox"/> Standard contact point temperature].
T/C + RJC	The currently measured data displays the temperature measured from sensor side with compensation to the standard contact point temperature.
RJC	Display the standard contact point temperature.
SENSOR RANGE	Setting the upper and lower limit of the input sensor. Refer to [Table 13-3]
PV WHEN S.OPN	Set the operation direction of the current data in case of sensor open
NO	Display the unpredictable random data when sensor is open
UP	Display of "+S.Open" while PV increases when sensor is open
DOWN	Display of "+S.Open" while PV decreases when sensor is open
MEASURE METHOD	Set the data measurement method. Refer to [Table 13-2]
DOT POSITION	Set the number of digit in case of DCV sensor type.


[Table 13-1] Display method for thermocouple

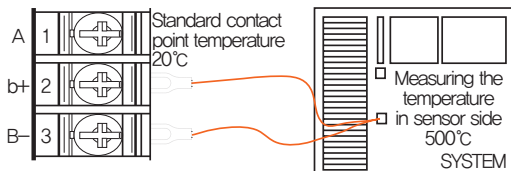

Thermocouple	Measured data	Formula
T/C	480°C	500-20
T/C + RJC	500°C	(500-20)+20
RJC	20°C	20

[Table 13-2] Data measuring method

※ Time set 5 second, ● Current value ● Measured value

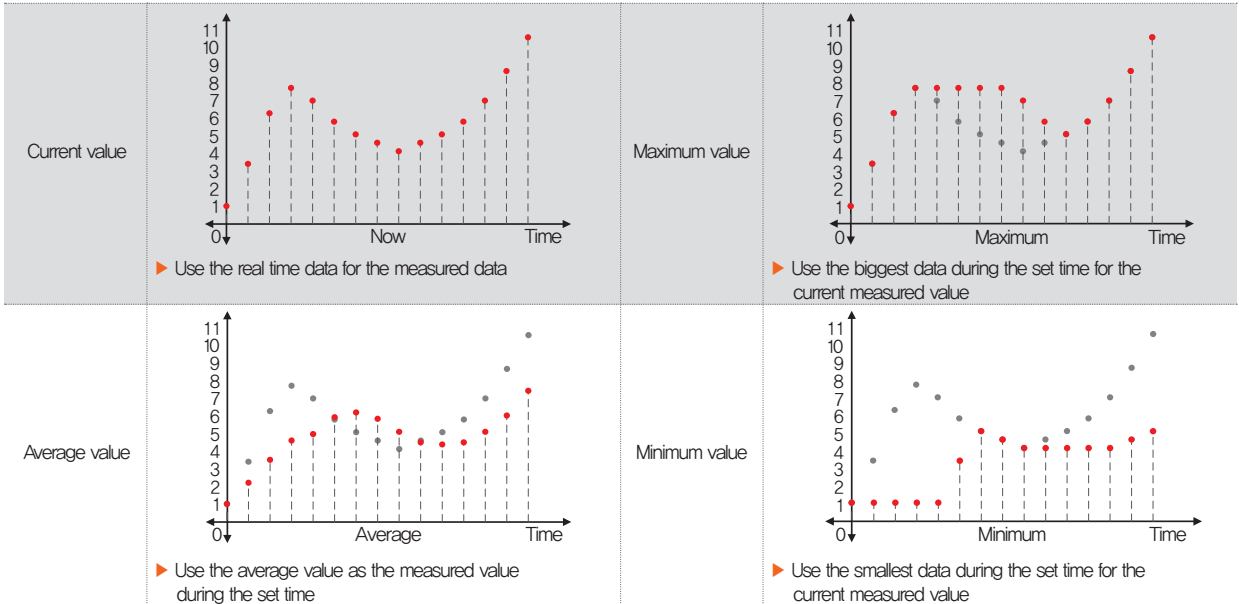

Screen for T/C sensor >>>>




[Fig. 13-4] Screen for selecting the T/C sensor type




[Fig. 13-5] Screen for setting the T/C sensor display unit

Screen for RTD sensor >>>>

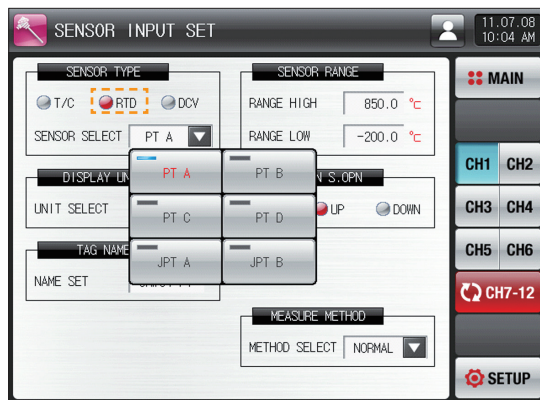

[Fig. 13-6] Screen for selecting the RTD sensor type

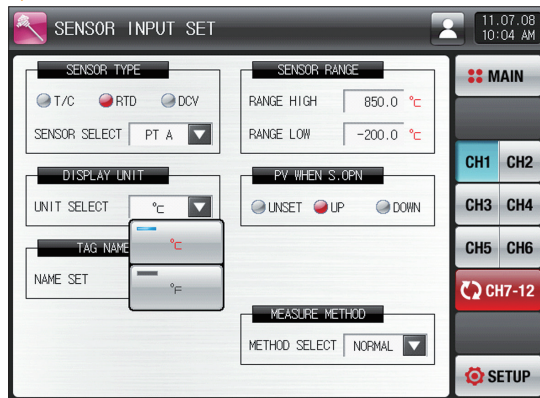

[Fig. 13-7] Screen for setting the sensor display unit


Screen for DCV sensor >>>>




[Fig. 13-8] Screen for selecting the DVC sensor type



[Fig. 13-9] Screen for setting the DVC sensor display unit

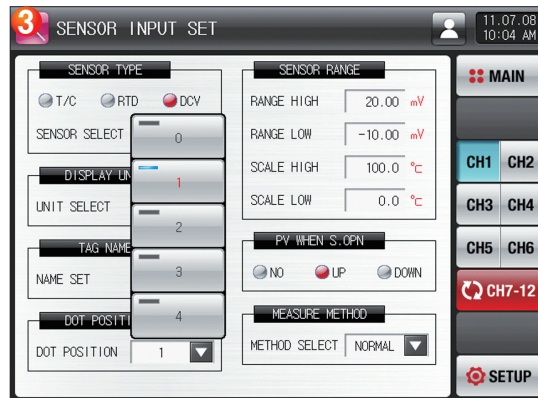

[Fig. 13-10] Screen for selecting the decimal point of DCV sensor

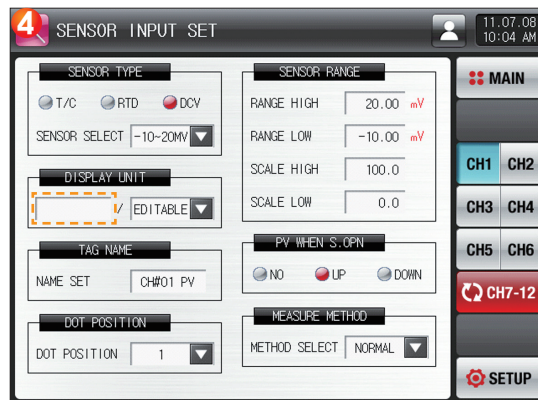


[Fig. 13-11] Screen of setting the DCV sensor display unit with editing
The unit name can be set when input button is pressed



[Fig. 13-12] Screen for name setting by setting the display unit with editing


Screen in case of kWh of unit in DCV sensor type >>>>

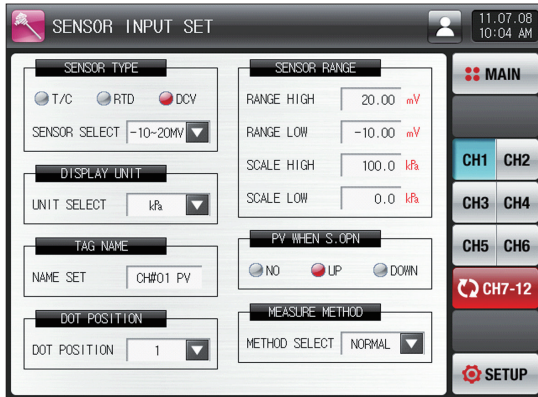

[Fig. 13-13] Screen for setting the display unit (In case of kWh setting)



[Fig. 13-14] When the graph screen is kWh setting

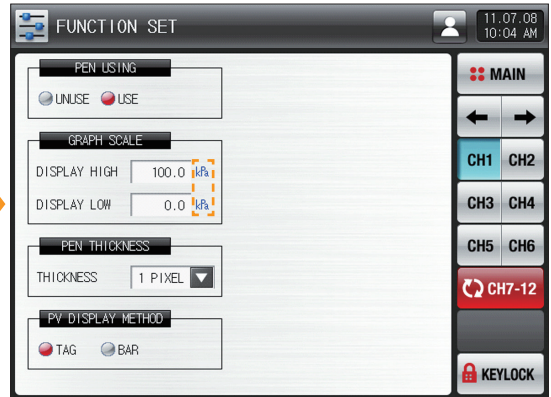

[Fig. 13-15] When the scale of function setting is kWh setting

Parameter	Setting range	Unit	Initial value
Channel #n SENSOR GROUP	T/C, RTD, DCV	ABS	T/C
Channel #n SENSOR TYPE	TC-K1, TC-K2, TC-J, TC-E, TC-T, TC-R, TC-B, TC-S, TC-L, TC-N, TC-U, TC-W, TC-PLA, TC-C	ABS	TC-K2 (When sensor group is T/C)
	PT A, PT B, PT C, PT D, JPT A, JPT B	ABS	PT A(When sensor group is RTD)
	-10 ~ 20MV, 0 ~ 20MV, -50 ~ 100M, 0 ~ 100MV, -1 ~ 2V, 0 ~ 2V, 0 ~ 5V, 1 ~ 5V, -5 ~ 10V, 0 ~ 10V, -10 ~ 20V, 0 ~ 20V	ABS	-10 ~ 20MV (When sensor group is DCV)
Channel #n DISPLAY UNIT	°C, °F	ABS	°C
	°C, °F, EDITABLE, %, Pa, kPa, %RH, mV, V, Ω, Torr, Kgf	ABS	°C
UNIT NAME OF CHANNEL	0~9, A~Z, Special character (8 characters)	ABS	
Channel #n TAG NAME	0~9, A~Z, Special character (8 characters)	ABS	Channel #n PV
Channel #n T/C DISPLAY	T/C, TC+RJC, RJC	ABS	TC+RJC
Channel #n SENSOR RANGE HIGH	Channel #n,EU (0.0~100%)	Channel #n,EU	Channel #n,EU(100.0%)
Channel #n SENSOR RANGE LOW	Channel #n,RANGE LOW< Channel #n,RANGE HIGH	Channel #n,EU	Channel #n,EU(0.0%)
Channel #n PV WHEN S.OPN	UNSET, UP, DOWN	ABS	UP
Channel #n MEASURE METHOD	NORMAL, MINIMUM, MAXIMUM, AVERAGE	ABS	NORMAL
TIME SET	1~10sec	ABS	1
Channel #n DOT POSITION	0~4	ABS	1
Channel #n SCALE HIGH	-3000.0~3000.0	°C	100.0
Channel #n SCALE LOW	Channel #n,SCALE LOW< Channel #n,SCALE HIGH	°C	0.0

※ #n : 1 ~ 12

[Table 13–3] Type of sensor input

No	Sensor type	Temperature range (°C)	Temperature range (°F)	Sensor group	DISP
1	K1	-200 ~ 1370	-300 ~ 2500	T/C	TC-K1
2	K2	-200.0 ~ 1370.0	-300.0 ~ 1900.0		TC-K2
3	J	-200.0 ~ 1200.0	-300.0 ~ 1900.0		TC-J
4	E	-200.0 ~ 1000.0	-300.0 ~ 1800.0		TC-E
5	T	-200.0 ~ 400.0	-300.0 ~ 750.0		TC-T
6	R	0.0 ~ 1700.0	32 ~ 3100		TC-R
7	B	0.0 ~ 1800.0	32 ~ 3300		TC-B
8	S	0.0 ~ 1700.0	32 ~ 3100		TC-S
9	L	-200.0 ~ 900.0	-300 ~ 1600		TC-L
10	N	-200.0 ~ 1300.0	-300 ~ 2400		TC-N
11	U	-200.0 ~ 400.0	-300.0 ~ 750.0		TC-U
12	W	0 ~ 2300	32 ~ 4200		TC-W
13	Platinel II	0.0 ~ 1390.0	32 ~ 2500		TC-PLA
14	C	0 ~ 2320	32 ~ 4200	TC-C	
15	PT A	-200.0 ~ 850.0	-300.0 ~ 1560.0	RTD	PT A
16	PT B	-200.0 ~ 500.0	-300.0 ~ 1000.0		PT B
17	PT C	-50.00 ~ 150.00	-148.0 ~ 300.0		PT C
18	PT D	-200 ~ 850	-300 ~ 1560		PT D
19	JPT A	-200.0 ~ 500.0	-300.0 ~ 1000.0		JPT A
20	JPT B	-50.00 ~ 150.00	-148.0 ~ 300.0		JPT B


No	Sensor type	Input range	SCALE range	Sensor group	DISP
21	-10 ~ 20mV	-10.00 ~ 20.00mV	-3000.0 ~ 3000.0°C	DCV	-10 ~ 20MV
22	0 ~ 20mV	0.00 ~ 20.00mV			0 ~ 20MV
23	-50 ~ 100mV	-50.00 ~ 100.00mV			-50 ~ 100M
24	0 ~ 100mV	0.00 ~ 100.00mV			0 ~ 100MV
25	-1 ~ 2V	-1.000 ~ 2.000V			-1 ~ 2V
26	0 ~ 2V	0.000 ~ 2.000V			0 ~ 2V
27	0 ~ 5V	0.000 ~ 5.000V			0 ~ 5V
28	1 ~ 5V	1.000 ~ 5.000V			1 ~ 5V
29	-5 ~ 10V	-5.000 ~ 10.000V			-5 ~ 10V
30	0 ~ 10V	0.000 ~ 10.000V			0 ~ 10V
31	-10 ~ 20V	-10.000 ~ 20.000V			-10 ~ 20V
32	0 ~ 20V	0.000 ~ 20.000V			0 ~ 20V

Part 14

Alarm signal

14-1 Alarm signal setting screen 1	73
14-2 Alarm signal setting screen 2	74
14-3 Operation of alarm signal	78



Alarm signal flow chart

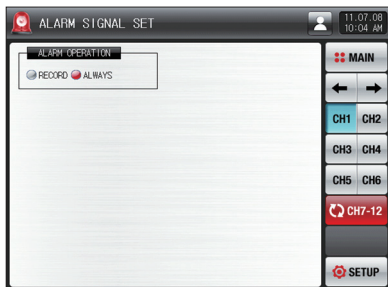

[Fig. 14-1] Alarm signal setting screen 1



[Fig. 14-2] Alarm signal setting screen 2 #1

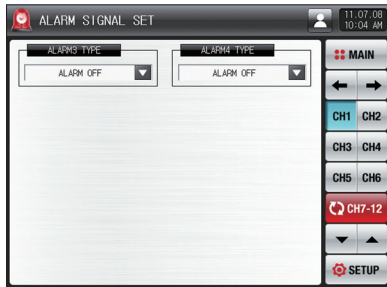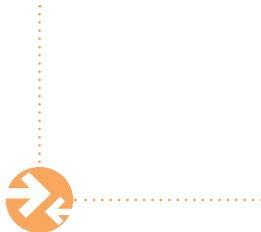


[Fig. 14-3] Alarm signal setting screen 2 #2



14. Alarm signal

14-1. Alarm signal setting screen 1

- When the "Alarm signal" is selected in the [Fig. 12-1 System parameter screen], the parameters related in alarm signal can be set.
- The following table is explanation for channel (1~6) and the screen for channel (7~12) is same with channel (1~6).

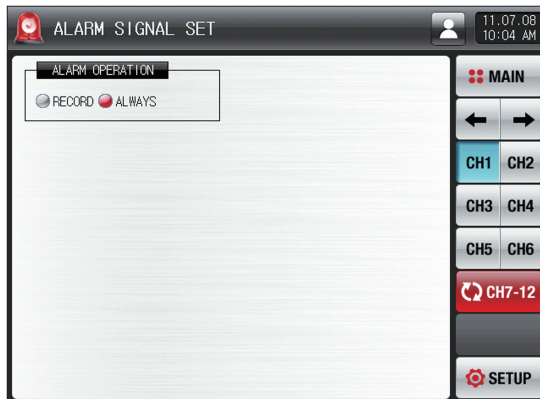

[Fig. 14-1] Alarm signal setting screen 1

Instruction	Description
ALARM OPERATION	Setting the alarm motion
RECORD	The alarming motion is performed in case of saving
ALWAYS	The alarming motion is performed always regardless of save/pause

Parameter	Setting range	Unit	Initial value
Channel #n ALARM OPERATION	RECORD, ALWAYS	ABS	ALWAYS


※ #n : 1 ~ 12

14-2. Alarm signal setting screen 2

- It is the screen to set the alarm for each channel.
- The following table is explanation for channel (1~6) and the screen for channel (7~12) is same with channel (1~6).
- There are 4 channels for alarm signal.
- There are 9 types for alarm signal




[Fig. 14-2] Alarm signal setting screen 2 #1

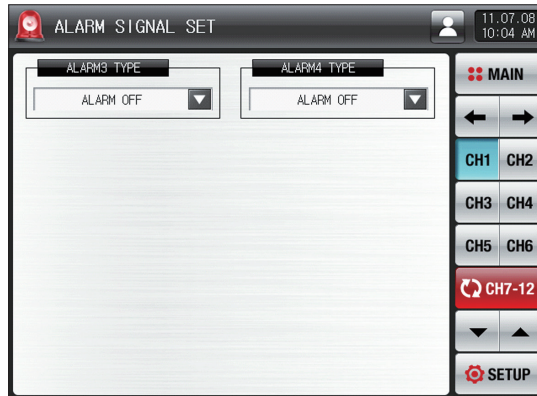


[Fig. 14-3] Alarm signal setting screen 2 #2


Instruction	Description
Alarm type 1	The type of the alarm signal is set.
Alarm type 2	
Alarm type 3	
Alarm type 4	

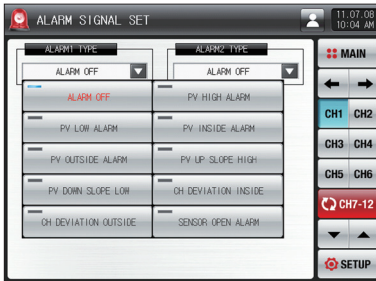


[Fig. 14-4] Alarm signal selection signal

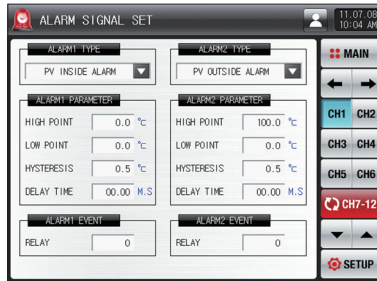


[Fig. 14-6] Screen for setting the internal/external limit of PV

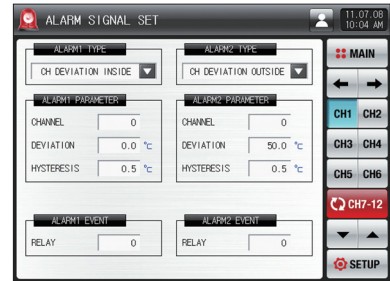


[Fig. 14-8] Screen for setting the internal/external deviation between channels

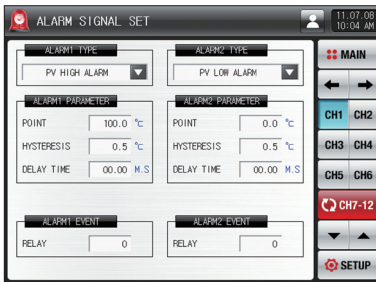

[Fig. 14-5] Screen for setting the upper/lower limit of PV

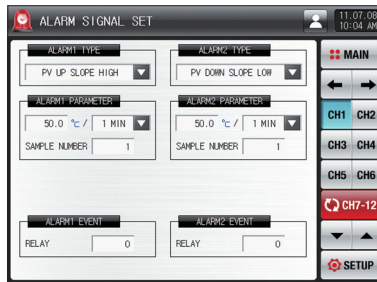

[Fig. 14-7] Screen for setting the increase/decrease change ratio of PV

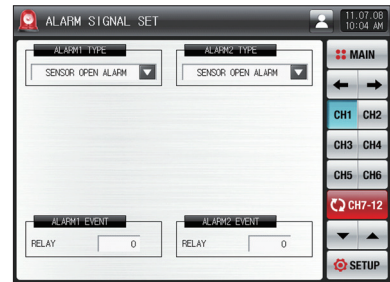


[Fig. 14-9] Screen for setting the sensor open


Parameter	Setting range	Unit	Initial value
Channel #n ALARM#m TYPE	ALARM OFF, PV HIGH ALARM, PV LOW ALARM PV INSIDE ALARM, PV OUTSIDE ALARM, PV UP SLOPE HIGH, PV DOWN SLOPE LOW, CH DEVIATION INSIDE, CH DEVIATION OUTSIDE, SENSOR OPEN ALARM	ABS	ALARM OFF
Channel #n ALARM#m POINT	CHANNEL #n,EU(-5.0~105.5%)	CHANNEL #n,EU	CHANNEL#n,EU(100.0%) / CHANNEL#n,EU(0.0%)
Channel #n ALARM#m HIGH POINT	CHANNEL #n,EU(-5.0~105.5%)	CHANNEL #n,EU	CHANNEL #n,EU(0.0%)
Channel #n ALARM#m LOW POINT	CHANNEL #n,EU(-5.0~105.5%)	CHANNEL #n,EU	CHANNEL #n,EU(0.0%)
Channel #n ALARM#m HYSTERESIS	CHANNEL #n,EUS(0.0~50.0%)	CHANNEL #n,EUS	CHANNEL #n,EUS(0.5%)
Channel #n ALARM#m DELAY TIME	0.00~99.99 (MIN,SEC)	ABS	00.00
Channel #n ALARM#m RELAY	0~12	ABS	0
Channel #n ALARM#m UP SLOPE HIGH	CHANNEL #n,EUS(0.0~50.0%)	CHANNEL #n,EUS	CHANNEL #n,EUS(0.0%)
Channel #n ALARM#m DOWN SLOPE LOW	CHANNEL#n,EUS(0.0~50.0%)	CHANNEL #n,EUS	CHANNEL #n,EUS(0.0%)
Channel #n ALARM#m TENDENCY	0.00~99.99 (HOUR,MIN)	ABS	00.00
Channel #n ALARM#m CHANNEL	0~12	ABS	0
Channel #n ALARM#m SENSOR OPEN	CHANNEL #n,EUS(0.0~50.0%)	CHANNEL #n,EUS	CHANNEL #n,EUS(0.0%)

※ #n : 1 ~ 12


※ #m : 1 ~ 4

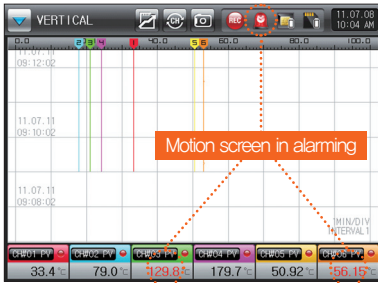


[Fig. 14-10] Operation screen for vertical axis alarm creation

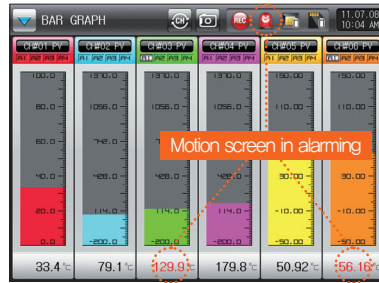

[Fig. 14-12] Operation screen for bar alarm creation

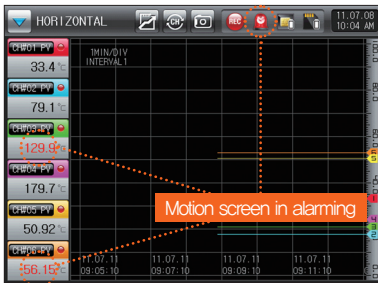

[Fig. 14-11] Operation screen for horizontal axis alarm creation

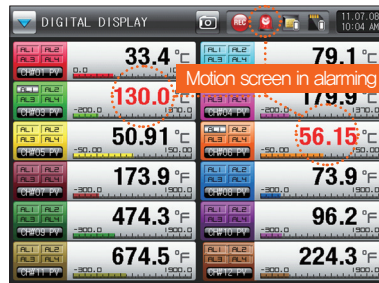






[Fig. 14-13] Operation screen for digital alarm creation

Reference

- ▶ The current value of the corresponding channel is display in red when alarm is operated and the warning lamp is lighted on the right upper corner of the screen.

14-3. Alarm signal motion

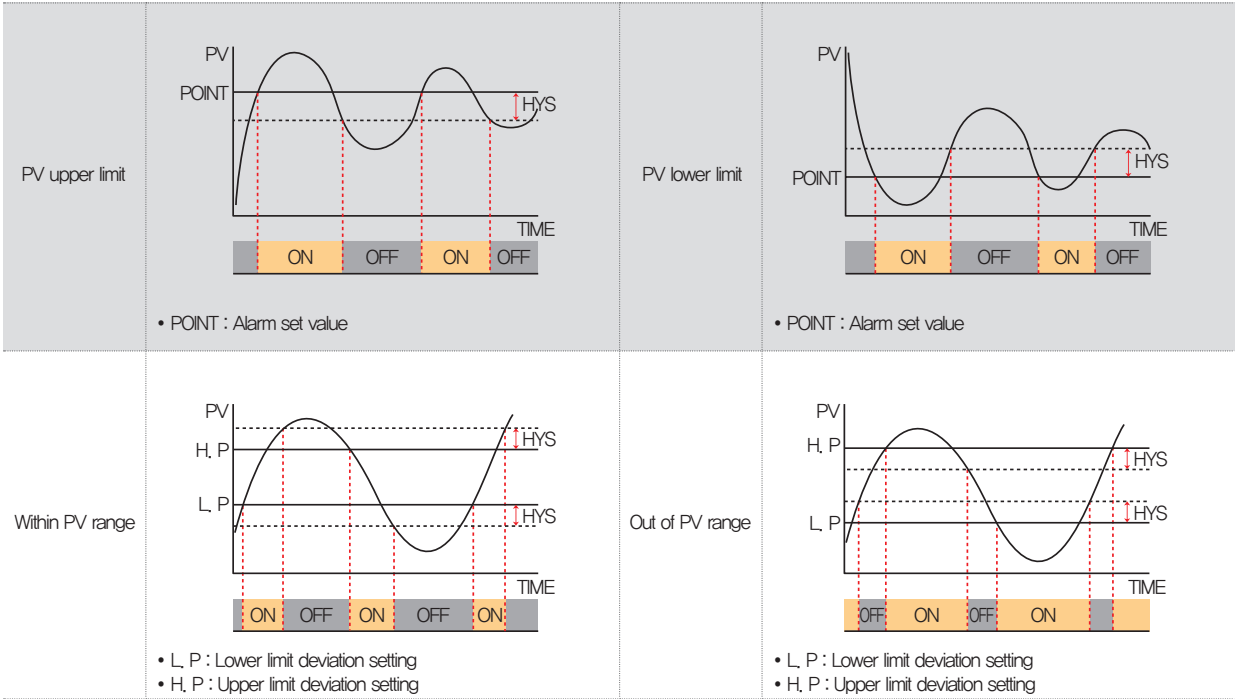
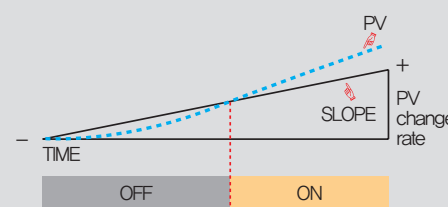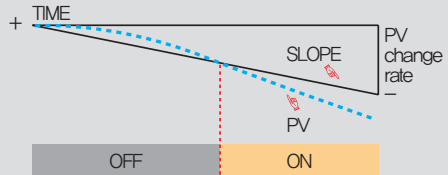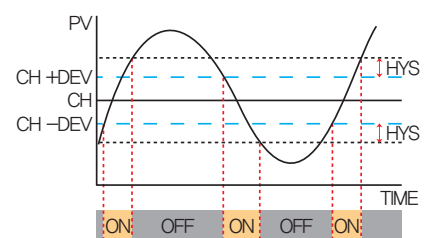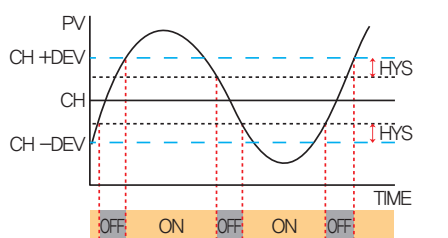
<p>PV increase change rate upper limit</p>	 <ul style="list-style-type: none"> • SLOPE : Set PV increase change rate 	<p>PV decrease change rate lower limit</p>	 <ul style="list-style-type: none"> • SLOPE : Set PV increase change rate
<p>Within deviation between channels</p>	 <ul style="list-style-type: none"> • CH : Channel • DEV : Deviation 	<p>Out of PV deviation between channels</p>	 <ul style="list-style-type: none"> • CH : Channel • DEV : Deviation
<p>Sensor short</p>	<p>Alarming in case of sensor short</p>		


Reference

▶ HYS(HYSTERESIS) : It is a deviation applied in recovery(Off) after alarming (On). The initial value is EUS (0,5%) and it is not operated during setting.


Part 15

User screen

15-1 User screen setting	82
15-2 Setting user screen upload	83
15-3 BMP file creation method	85
15-4 User screen motion	88

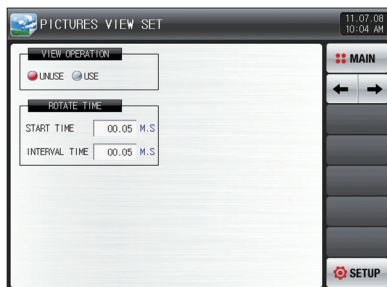

[Fig. 15-1] User screen motion setting

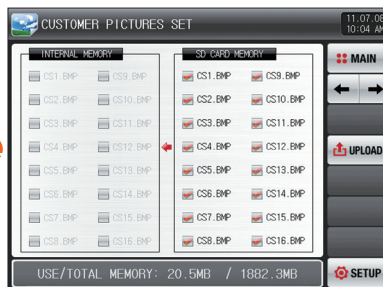


[Fig. 15-2] Photo setting for user screen the 2nd screen #1



15. User screen

15-1. User screen setting

- When the "User screen setting" is selected in the [Fig. 12-1 System parameter screen], the parameters related in User screen setting can be set.

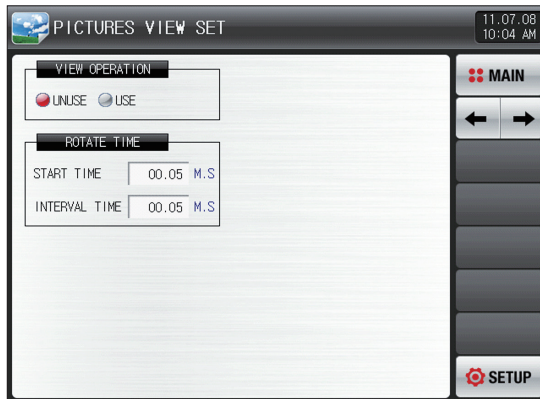


[Fig. 15-1] User screen motion setting


Instruction	Description
VIEW OPERATION	Setting the Y/N for use of user screen • The user screen is operated when more than 1 photo file is selected in the internal memory.
ROTATE TIME	Setting the motion and conversion time of user screen
START TIME	Motion is started when there is no key input during set time
INTERVAL TIME	The photo saved in set time period is converted.


Parameter	Setting range	Unit	Initial value
VIEW OPERATION	UNUSE, USE	ABS	UNUSE
ROTATE TIME	00.05 ~ 99.59(MIN,SEC)	ABS	00.05
INTERVAL TIME	00.01 ~ 99.59(MIN,SEC)	ABS	00.05

15-2. Setting user screen upload

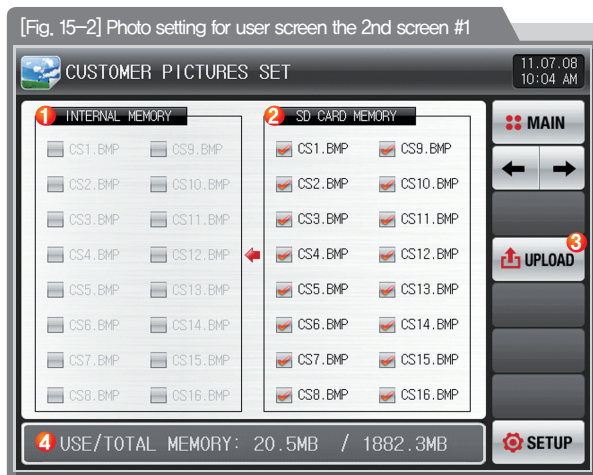

- It is a screen to show the saved photo file (BMP) into the internal memory and SD card.
- SD card without file cannot be selected or uploaded as it is not activated.

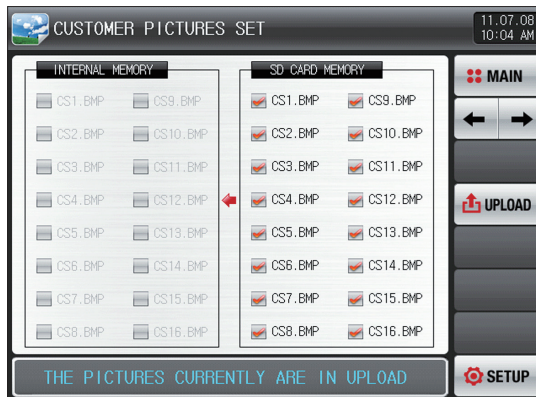


- ① () is inactive because there is no file corresponding to internal memory.
- ② List of the photo file (BMP) saved in SD card
 - Upload the selected file into the internal memory
- ③ Upload the photo files (BMP) saved into SD card into the internal memory
- ④ Display the current SD card capacity
 - Display in case of insertion of SD card




Reference

- ▶ When the upload button  is pressed in [Fig. 15-2 Photo setting for user screen the 2nd screen #1], the only selected photo files on SD card memory is uploaded () to the internal memory.
- ▶ The message of “The upload is processing now” is displayed at the lower part of the screen during uploading.

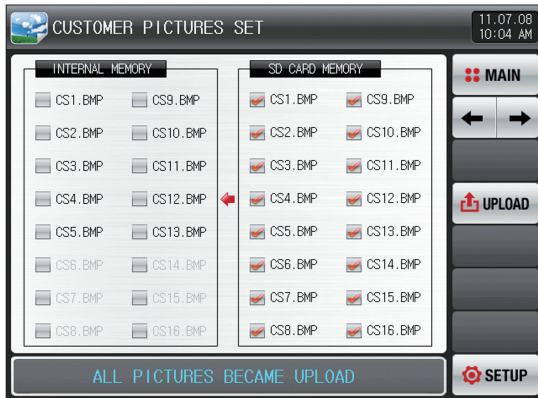

[Fig. 15-4] Photo setting for user screen the 2nd screen #3

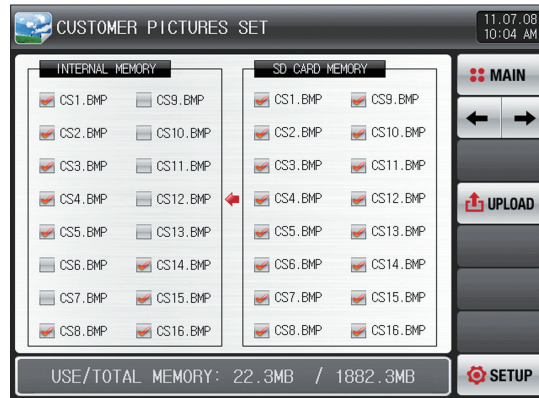

[Fig. 15-5] Photo setting for user screen the 2nd screen #4

Reference

- ▶ The message of “The upload is completed,” is displayed at the lower part of the screen after completion of uploading.
- ▶ When the upload is completed, the photo files () in the internal memory are activated for selection.



Reference



- ▶ The files can be used when the file is selected. ()

15-3. BMP file creation method


• It is a process to make the initial screen and screen wanted by the user.

- 1 **Ps Adobe Photoshop** ▶ The use of [photoshop program] is recommended to make the BMP file.
▶ The “picture plate” which is usually used in the computer cannot be used because the bit map cannot be set in 16 bit

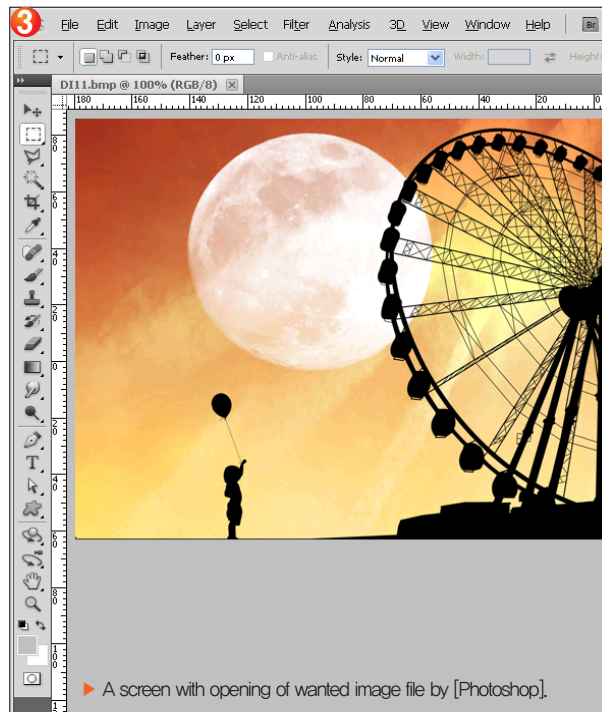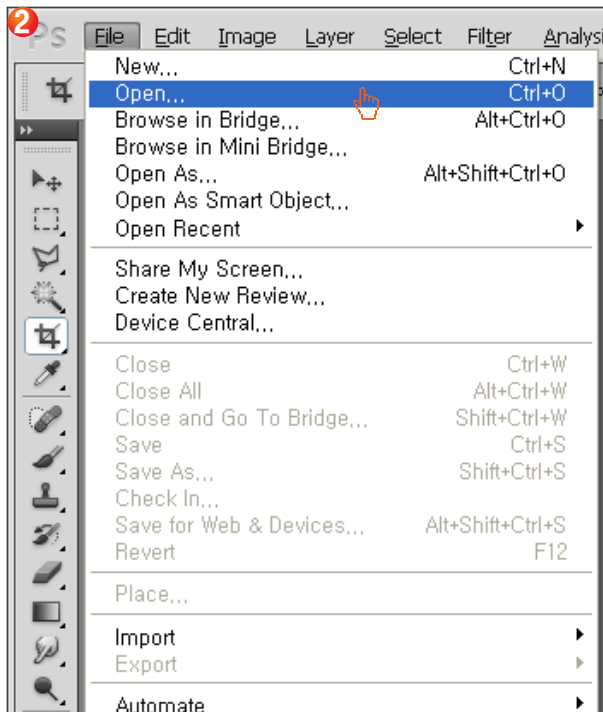

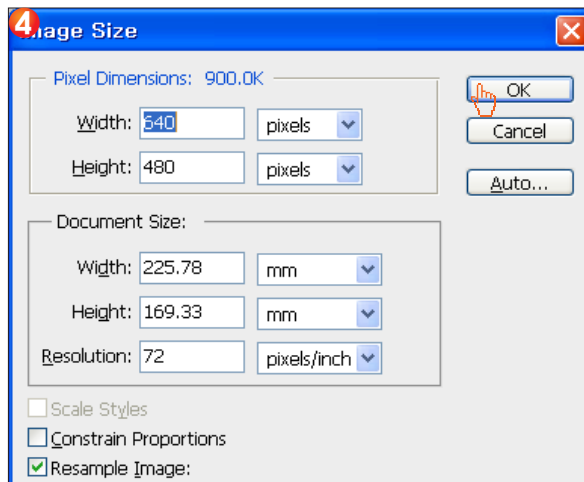
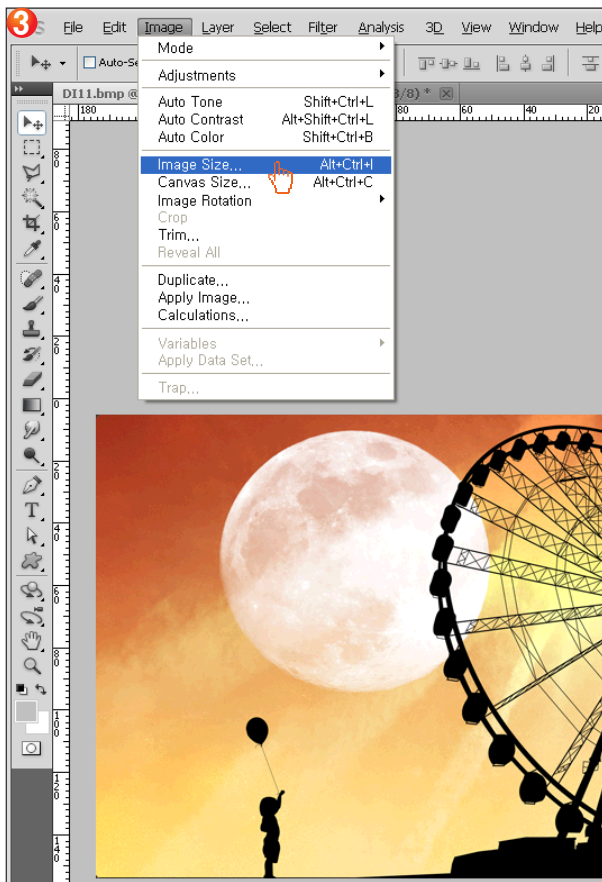


► Image size : User screen, initial screen 640x480 pixel

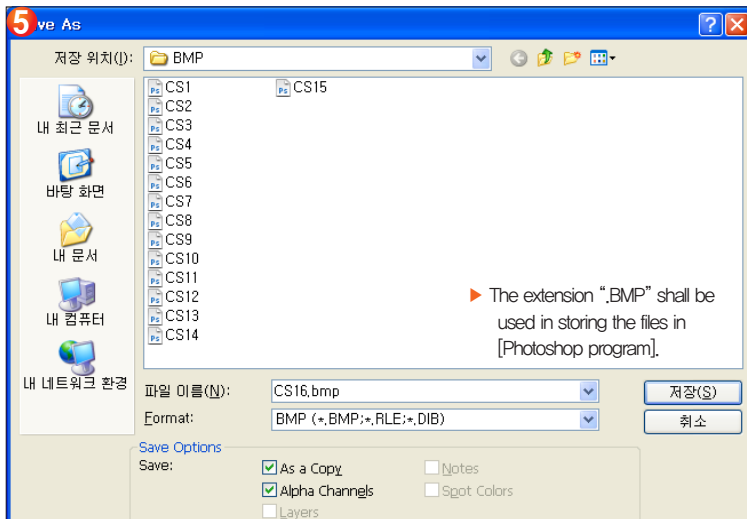


Reference



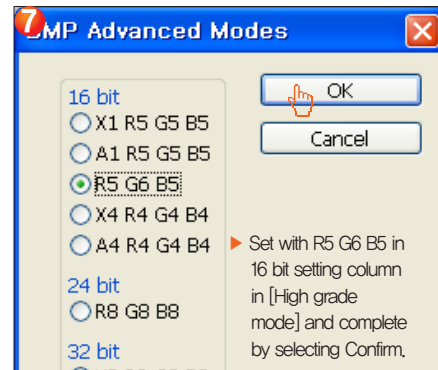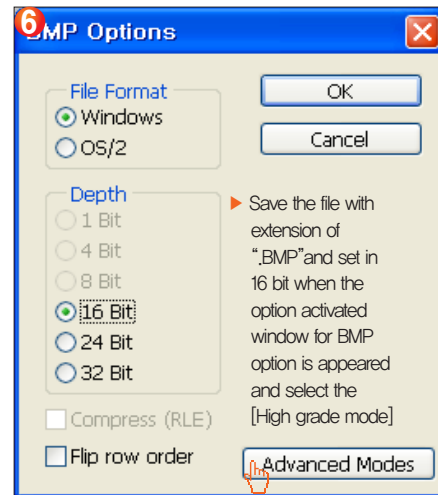



- ▶ BMP file format: 16 bit (R5 G6 B5) BMP
- ▶ File name – user screen : CS1.BMP ~Cs16. BMP (Total 16)
– Initial screen : INT. BMP
- ▶ When it is saved in another file name not by the appointed file name in the user screen and initial screen, it cannot be used.
- ▶ The folder name inside the SD card is appointed in 'BMP.'
- ▶ Download from the information center of our homepage for further details of BMP making manual.



15-4. Operation of user screen

- Maximum 16 photos can be used in user screen.
- It is operated when there is no key action in case of using the user screen.
- The screen is converted and displayed when there are many photos saved in the internal memory.
-  is appeared when anywhere is touched on the screen during the process of user screen.



- | | | |
|---|---|---|
| ① |  | There is not this  button in the user screen |
| ② |  | Move to the previous user screen from the current user screen <ul style="list-style-type: none">• When the user screen file is one, it is not operated |
| ③ |  | Stop of the user screen for a while |
| ④ |  | Move to the previous user screen from the current user screen <ul style="list-style-type: none">• When the user screen file is one, it is not operated |
| ⑤ |  | The user screen is terminated and returned to the operation screen <ul style="list-style-type: none">• The user screen is operated again when the time is elapsed |




No button in the user screen



Use screen CS1.BMP



Use screen CS2.BMP

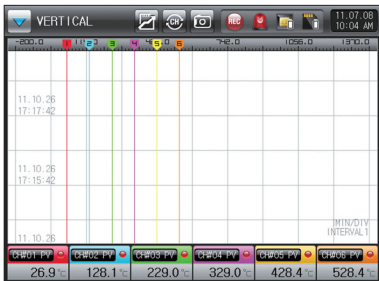

The user screen is terminated and returned to the operation screen.



Use screen CS4.BMP



Use screen CS3.BMP


Part **16**

DI function and operation91




16. DI function and operation

- When the “DI config and operation” is selected in the [Fig. 12-1 System parameter screen], the parameters related in DI function and operation can be set.
- It can be set when the DI option is selected in product purchasing. • Please refer to [2-3 Basic operation flow chart]

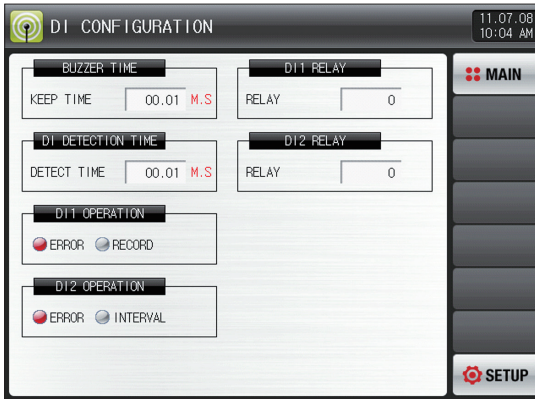

[Fig. 16-1] DI function and operation setting screen

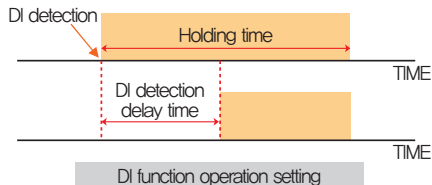

Instruction	Description
BUZZER TIME	The buzzer operating time is set in DI occurrence.
DI DETECTION TIME	Set the DI detection delay time is set.
DI 1 OPERATION	DI1 operation method is set.
ERROR	Buzzer is ringing and recording into the error history
RECORD	Use ON/OFF operation for graph saving
DI 2 OPERATION	DI2 operation method is set.
ERROR	Buzzer is ringing and recording into the error history
INTERVAL	Use for changing the saving period
DI 1 RELAY	The relay output in DI1 creation is set.
DI 2 RELAY	The relay output in DI2 creation is set.

Parameter	Setting range	Unit	Initial value
BUZZER TIME	00,00 ~ 99,59(MIN,SEC)	ABS	00,01
DI DETECTION TIME	00,00 ~ 99,59(MIN,SEC)	ABS	00,01
DI1 OPERATION	ERROR, RECORD	ABS	ERROR
DI2 OPERATION	ERROR, INTERVAL	ABS	ERROR
DI1 RELAY	0 ~ 12	ABS	0
DI2 RELAY	0 ~ 12	ABS	0

Part 17

Communication environment setting


17-1 RS232C/485 Communication setting	93
17-2 Communication environment setting screen	94
17-3 Ethernet communication environment setting screen	96




17. Communication environment setting

17-1. RS232C/485 Communication setting

- When SDR100 is not selected as Ethernet communication option, the default is RS232C/485 communication.
- It is set as RS232C at factory shipments.
- In case of the followings, shift to RS485 is required.
 - ① Serial communication selection cover is separated in the [Fig. 17-1 SDR main body].
 - ② Short pin of RS232C is pulled out and moved to RS485.
 - ③ When changing serial communication, the position of short pin is moved with tweezers(other gadgets).

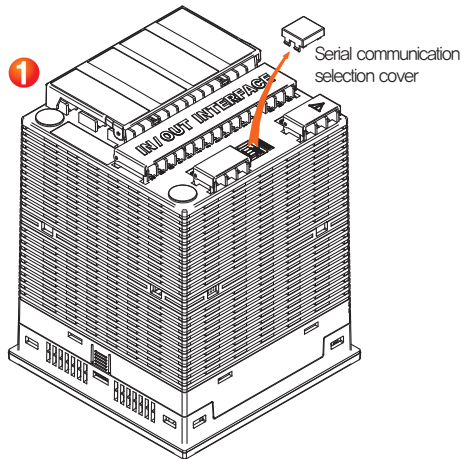


[Fig. 17-1] SDR main body

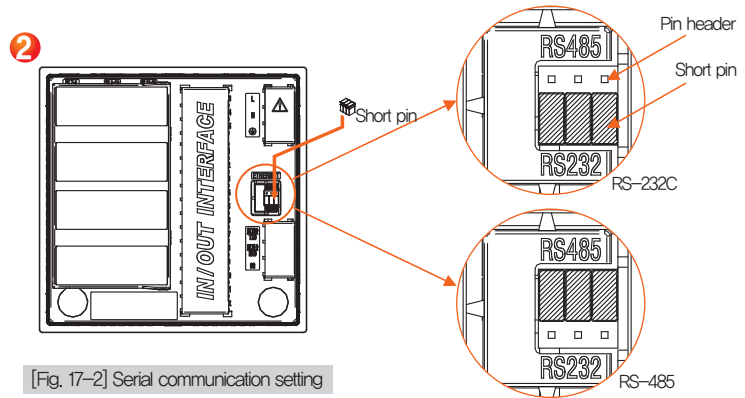


[Fig. 17-2] Serial communication setting

17-2. Communication environment setting screen

- When “Communication environment setting” is selected in the [Fig. 12-1 System parameter screen], parameters related to the communications can be set.
- See the [2-3 Basic operation flow chart] about entering method.

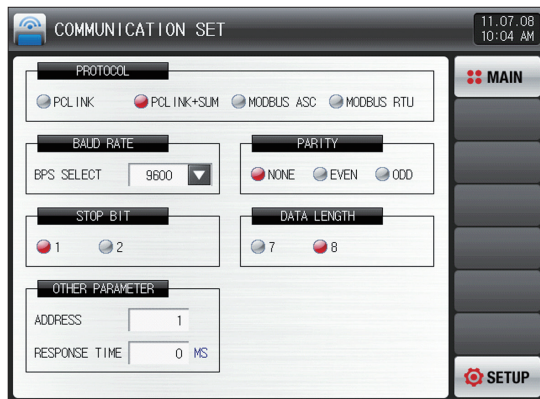

[Fig. 17-3] Communication environment setting screen (RS232C/485)

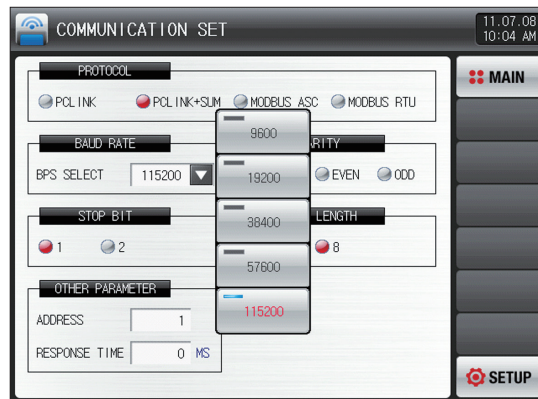


[Fig. 17-4] Communication speed setting screen in communication environment

Instruction	Description
PROTOCOL	Setting the communication protocol.
BAUD RATE	Setting the communication speed. Refer to [Fig. 17-4]
STOP BIT	Setting the stop bit.
OTHER PARAMETER	Setting the communication address and response time.
PARITY	Setting the parity
NONE	No parity
EVEN	Even number parity
ODD	Odd number parity
	Setting the data length
	<ul style="list-style-type: none"> The data length is fixed in 7 when the communication protocol is set in MODBUS ASC. The data length is fixed in 8 when the communication protocol is set in MODBUS RTU.
DATA LENGTH	

Parameter	Setting range	Unit	Initial value
PROTOCOL	PCLINK, PCLINK+SUM, MODBUS ASC, MODBUS RTU	ABS	PCLINK+SUM
BAUD RATE	9600, 19200, 38400, 57600, 115200	ABS	115200
PARITY	NONE, EVEN, ODD	ABS	NONE
STOP BIT	1, 2	ABS	1
DATA LENGTH	7, 8	ABS	8
ADDRESS	1 ~ 99	ABS	1
RESPONSE TIME	0 ~ 10	ABS	0

17-3. Ethernet communication environment setting screen

- This is the screen to set the relevant parameters for Ethernet communication(TCP/IP).

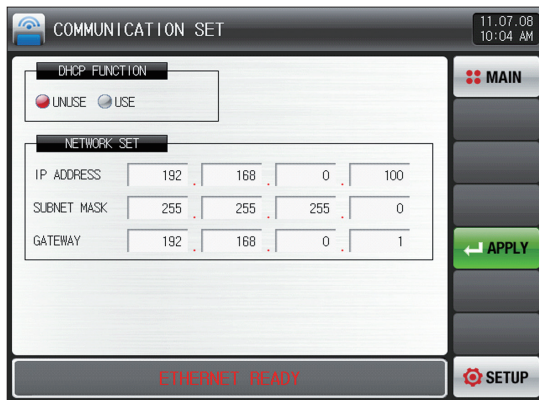

[Fig. 17-5] Screen when not using Ethernet DHCP

Instruction	Description
DHCP operation	Use or not use of automatic network IP setting
Network setting	Manual network IP setting


Symbol	Description
	This is for applying it after changing Ethernet-related parameters.



CAUTION

Cautions

- If not pushing the button after changing network setting, parameter will not be changed.

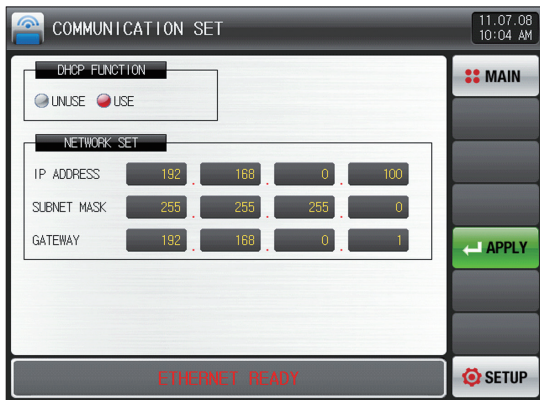


[Fig. 17-6] Screen when using Ethernet DHCP

Reference

- ▶ Communication method is selected between RS232C/485 and Ethernet when it is ordered.
- ▶ In case of selecting Ethernet communication option, serial communication using RS232C/485 is not available.
- ▶ If DHCP is not selected when setting Ethernet, IP address, Subnet mask, and Gateway must be set before using. See the [Fig. 17-5 Screen when not selecting Ethernet DHCP].
- ▶ If DHCP is selected when setting Ethernet, network setting is automatically determined. See the [Fig. 17-6 Screen when selecting Ethernet DHCP].

Reference

Message box

- ▶ ETHERNET APPLY :  When button operates
- ▶ ETHERNET READY : When Ethernet normally operates
- ▶ CONNECTION ERROR : When Ethernet cable is not connected or has problems
- ▶ ETHERNET APPLY – RESP.ERR : When Ethernet communication has problems


Part **18**

System initial setting 99



18. System initial setting

- When the "System Initial display setting" is selected in the [Fig. 12-1 System parameter screen], the parameters related in System initial setting can be set.

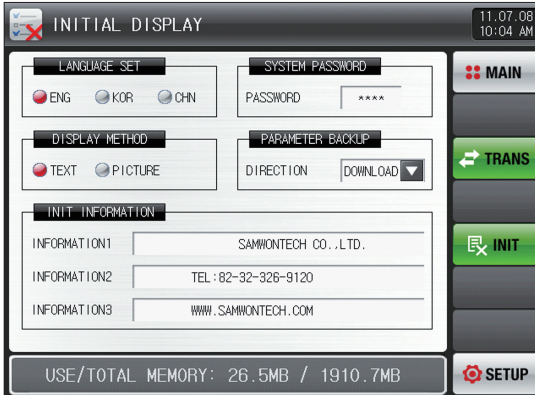

[Fig. 18-1] The screen set with letter for display method




[Fig. 18-2] The screen set with letter in power ON

Symbol	Description
	Upload and download the parameter backup.
	Upload the INIT.BMP (picture file) saved in SD card into internal memory.
	Change the every parameter into factory initialization state



[Fig. 18-3] Upload the file saved in SD card into internal memory

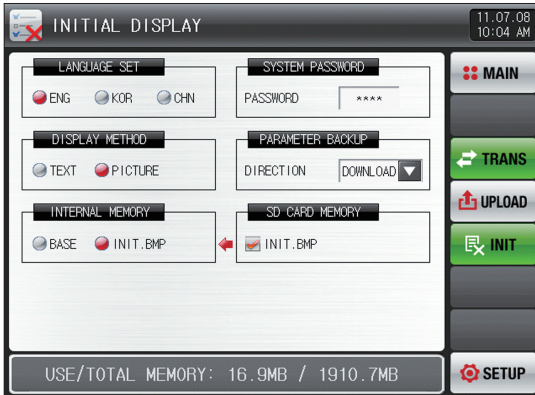

[Fig. 18-4] The screen set with photo for display method

Reference


- ▶ Refer to the P85 (15-3. BMP file making method) for INIT.BMP to set as [Fig. 18-5].
- ▶ When the **UPLOAD** button is pressed, the button is activated to set the INIT.BMP file saved in SD card to set with photo in power ON.



[Fig. 18-5] The screen set with photo in power ON



[Fig. 18-6] Parameters transmission setting from SDR to SD cards

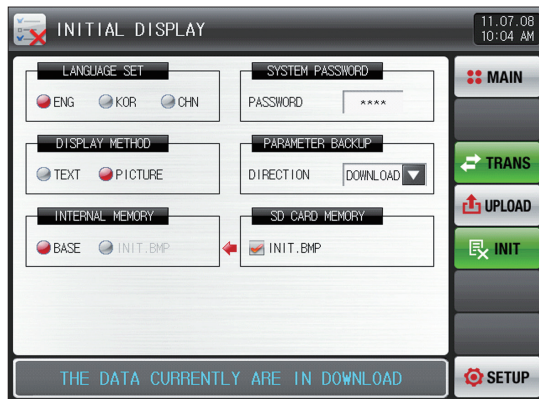

[Fig. 18-8] Parameters transmitting from SDR to SD cards




[Fig. 18-7] File name setting for transmission to SD cards




[Fig. 18-9] Parameter transmission completion from SDR to SD cards



[Fig. 18-10] Screen setting for sending the parameter saved in the SD card to SDR

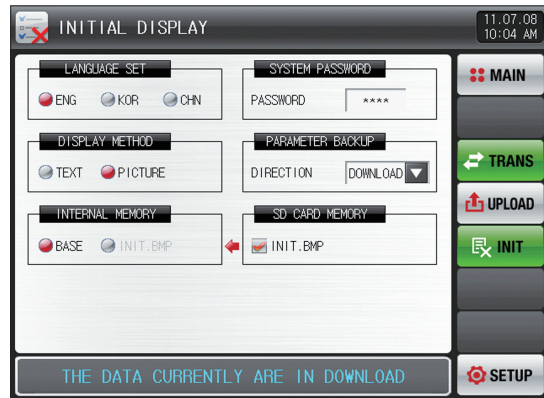

[Fig. 18-12] Screen of sending the parameter saved in the SD card to SDR

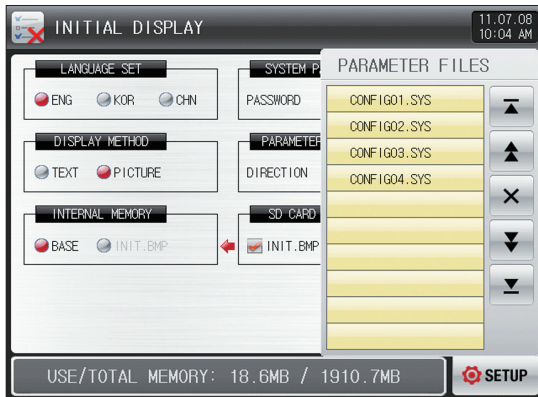

[Fig. 18-11] Screen for parameter file selection to send to SDR




[Fig. 18-13] Screen after sending the saved parameter in the SD card to SDR

Instruction	Description
LANGUAGE SET	Setting the language for use
DISPLAY METHOD	Setting the display in initial screen
TEXT	The information set in the initial screen information is displayed in electricity is ON. Refer to [Fig. 18-2]
PICTURE	The screen in the internal memory is displayed in electricity is ON. Refer to [Fig. 18-4]
INIT INFORMATION	<p>The sentence displayed in the initial screen is displayed in power ON.</p> <ul style="list-style-type: none"> The information display 1,2,3 sentence can be set and maximum 24 characters input is available. The setting is available when the display method is set in letter. .
SYSTEM PASSWORD	<p>Setting the password used in entering to the system screen</p> <ul style="list-style-type: none"> The password was set in '0' in delivery from factory
PARAMETER BACKUP	Setting the data sending direction between SDR and SD card
DOWNLOAD	Sending the SDR parameter to SD card. Refer to [Fig. 18-5]
UPLOAD	Sending the parameter saved in SD card to SDR. Refer to [Fig. 18-6]
INTERNAL MEMORY	Selection of the photo displayed in the initial screen in power ON
SD CARD MEMORY	<p>Display the Y/N of the INIT.BMP file saved in SD card.</p> <p><input type="checkbox"/> is inactive when INT.BMP file does not exist.</p>

Parameter	Setting range	Unit	Initial value
LANGUAGE SET	English, Korea, Japanese, Chinese	ABS	ENG
DISPLAY METHOD	TEXT, PICTURE	ABS	TEXT
SYSTEM PASSWORD	0 ~ 9999	ABS	0
PARAMETER BACKUP	DOWNLOAD, UPLOAD	ABS	DOWNLOAD
INIT INFOR MATION	INFORMATION1	0~9, A~Z, Special character (Maximum 24 characters)	SAMWONTECH CO.,LTD.
	INFORMATION2	0~9 A~Z, Special character (Maximum 24 characters)	TEL : 82-32-326-9120
	INFORMATION3	0~9 A~Z, Special character (Maximum 24 characters)	HTTP://WWW.SAMWONTECH.COM.
INTERNAL MEMORY	Entire capacity 64MB (About 57 days saving is available for 1 sec of saving period <input type="checkbox"/> Based on SDR106)		

Engineering Units - EU, EUS

- ⋮⋮⋮ When the sensor type (IN-T) or the upper limit, lower limit of input range is changed, the parameters expressed in EU(), EUS() are changed in proportion to current data. (However, the upper and lower range setting data is initialized.)
- ⋮⋮⋮ Download the instruction manual and communication manual from the homepage.
- ⋮⋮⋮ EU() : Value of engineering unit depending on the range of instrument
EUS() : Value of engineering unit depending on the span of instrument

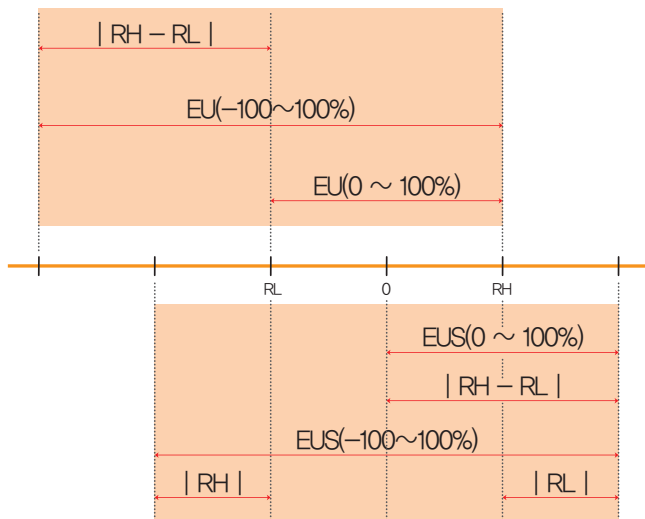

RL: Lower limit of input range
RH: Upper limit of input range

► Range of EU() and EUS()

	Range	Center point
EU(0 ~ 100%)	RL ~ RH	$ RH - RL /2 + RL$
EU(-100 ~ 100%)	$-(RH - RL + RL) \sim RH$	RL
EUS(0 ~ 100%)	$0 \sim RH - RL $	$ RH - RL /2$
EUS(-100 ~ 100%)	$- RH - RL \sim RH - RL $	0

(Example)

- INPUT = T/C(k2)
- RANGE = -200.0°C(RL) ~ 1370.0°C(RH)

	Range	Center point
EU(0 ~ 100%)	-200.0 ~ 1370.0°C	585.0°C
EU(-100 ~ 100%)	-1770.0 ~ 1370.0°C	-200.0°C
EUS(0 ~ 100%)	0 ~ 1570.0°C	785.0°C
EUS(-100 ~ 100%)	-1570.0 ~ 1570.0°C	0.0°C



Queries related with after sales service for SDR 100 series

Please inform the SDR model name, failure condition and contact point for queries of after sales service.

T : 82-32-326-9120

F : 82-32-326-9119



Customer contact for SDR 100 series

Quotation request / Product request

Specification request / Data request/ Other request

- Internet

www.samwontech.com

- E-mail

management : **webmaster@samwontech.com**

sales : **sales@samwontech.com**



(주) 삼원테크 SAMWONTECH CO.,LTD.

(420-733) 202-703 Bucheon Techno-Park, #192 Yakdae-Dong,
Wonmi-Gu, Bucheon-City, Gyeonggi-Do, Korea

T +82-32-326-9120 **F** +82-32-326-9119 **E** webmaster@samwontech.com

2nd Edition of SDR100 Series IM : Nov. 01 2011

