

TEMI1000

Installation Manual (Temperature and Humidity Programmable Controller)



WELCOME

Thank you for purchasing furnace controller production.
Please use after read instruction manual for safety.
Free to contact to our sales Div for
production inquiry and after service.



Various



SAMWON TECH

It is temperature and humidity programmable controller which equips with the recording function by supporting high definition TFT-LCD touch screen

<http://www.samwontech.com>

Being the controller market leader in the 21st century with the best technology



Copyright

Copyright© 2013 Samwontech Co., Ltd

This installation manual is a work protected by the copyright law.

A part or entire of this manual shall not be copied, air sent, distributed, translated or changed into the form to be read by electronic media or machine without prior written consent of Samwontech Co., Ltd.





This manual is used for TEM1000
of Installation method.

Contents

1. Safety instruction (Cautions)

1-1 Product check	4
1-2 Exterior and how to install	6
1-3 Wiring	11
1-4 Display function and name	18
1-5 Control part LED	19
1-6 SD covers the opening and closing and precautions	19

2. System parameter setting

2-1 Setting button operation	21
2-2 System parameter setting screen	22
2-3 System parameter setting sequence	23

3. Sensor input setting

3-1 Sensor input setting	26
3-2 Sectional calibrating input setting	31

4. Control & Transmitting output

4-1 Control output setting	35
4-2 Transmitting output setting screen	41

5. Inner signal(IS)

5-1 Inner signal setting	44
5-2 Inner signal operation	46

6. ON/OFF & Logic

6-1 ON/OFF signal setting	50
6-2 ON/OFF signal operation	52
6-3 Logic signal setting	54

7. Alarm signal

7-1 Alarm signal setting	60
7-2 Alarm signal operation	65

8. PID Group

8-1 PID application range setting screen 1	69
8-2 PID application range setting screen 2	71
8-3 PID application range setting screen	72
8-4 PID group setting screen	74

9. Setting communication environment

9-1 RS232C/485 Communication setting	77
9-2 Communication environment setting screen	78

10. DO relay output

10-1 Relay No. and parameter setting	83
10-2 UP, SOAK, DOWN signal operation	98

11. DI function and Operation

11-1 DI operation setting	102
11-2 DI error name	107
11-3 DI error creation screen	111

12. System initial setting

12-1 Basic screen display setting	114
12-2 State display lamp setting	116

01. Cautions (Instructions) for safety

Thank you for your choice of our Temperature and Humidity Programmable Controller(TEM1000). This manual describes the method of installation of the product.

Cautions in this instruction manual

- Please deliver for the end user to possess always and keep it in the place accessible at any time.
- Use the product after full understanding of this installation manual.
- This installation manual does not warrant any other things because it is a description of the details for the function.
- A part or whole of this manual shall not be edited or copied randomly.
- The descriptions in this manual may be changed randomly without pre notice or warning.
- Even though this manual was made with elaboration, it will be appreciated if you inform to the purchasing point. (Dealer shop and etc) or sales team in our company in case of deficiency, mistake or omission in the contents.

Cautions for the safety and modification (Change) of the product

- Please use this product after full understanding on the safety cautions in this manual for the protection and safety for this product and the system connected to this system.
- Our company is not responsible to the damages occurred by using or handling or unattended using not relying on this installation manual.
- Please install at the outside of this product when the additional protection and safety circuit is installed separately for the protection and safety for this product and the system connected to this system.
- The internal modification (Change) and addition to this product are prohibited.
- Do not disassemble, repair and modify of this product because it becomes the reasons for electric shock, fire and malfunction.
- In case of changing the part or the consumables of this product, please contact to the sales department of our company.
- Do not contact to the moisture with this product. It may cause the failure on this product.
- Do not apply the strong impact on this product. It may cause the damage and failure on this product.

With regard to the exemption for the responsibility of this product

- We are not responsible for any warranty on this product besides the defined cases in the quality assurance condition of our company.
- We are not responsible for the direct or indirect damages on the user of any third party due to the not expectable defect or the natural disaster in use of this product.

With regard to the quality assurance condition of this product

- The warranty period shall be one year from the purchasing of this product. Free of charge repair is available only for the cases of out of order occurred from normal use conditions.
- The repair due to the out of order occurred after the warranty period shall be repaired at the actual cost according to the defined condition by our company.
- The out of order occurred within the warranty period shall be repaired at the actual cost for the following cases in spite of within the warranty period.
 - (1) Out of order due to the mistake or fault of the user (Ex: Initialization by losing the password and etc.)
 - (2) Out of order due to the natural disaster (Ex: Fire and flood and etc)
 - (3) Out of order due to the movement of product after installation.
 - (4) Out of order due to the random disassemble, change or damage on the product.
 - (5) Out of order due to the electric power instability
 - (6) Others
- Please contact to the purchasing points or sales part of our company when after sales service is necessary because of the failure on the product.

Symbol marks for safety



(A) It means the "Handle with care" or "Cautions" In case of violation of this point, it may cause the death, severe injury or the extreme damage on the product.

- Product: It is marked on the points to be acknowledged certainly to protect the human body and device.
- Instruction manual: It describes the cautions to prevent the cases of endangered situation on the life and body of the user due to the electric shock and so on.



(B) It means "Ground terminal"

- Make the earth with the ground in case of product installation and controlling the product.



(C) It means the "supplementary explanation"

- It describes the points to supplement the explanation.



(D) It describes the "references"

- It describes the information and pages of reference to be referred.

Part 01

Safety Instruction (Cautions)

1-1 Product check	4
1-2 External shape and installation	6
1-3 Wiring	11
1-4 Display function and name	18
1-5 Control part LED	19
1-6 SD covers the opening and closing and precautions	19



01. Safety Instruction (Cautions)

1-1. Product check

- When the product is purchased, please check damages on the exterior of the product.

(1) Checking the specification of the ordered product

- Check whether the purchased product is identical with the ordered specification.
- How to check: Check the model name specification code marked on the right of the packing box and on the left label of product case.

TEM11*00-0*/*/*	
<p>— Display part LCD size 3 : 5 inch WIDE / 5 : 5.6 inch / 9 : 9 inch WIDE</p> <p>— Option section N : None / SD : SD card</p>	<p>— I/O board 0 : Relay 12 points +DI 16 points / 1 : Relay 32 points + DI 16 points</p> <p>— Bezel Color B : Black / W : White</p>

(2) How to treat the damaged parts

- In case of product damage after checking the exterior of the product as shown in the above or the accessories are missed, please contact to the purchasing point or the sales part of our company.





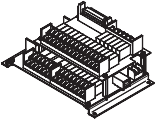
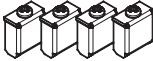
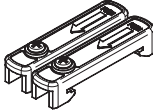



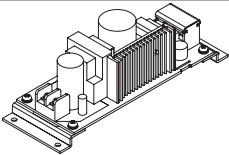



Period of exchange for the part and Expiration

- Please check the corresponding replacing period as shown below and replace prior to the expiration if it is necessary.
 - Relay JQ1P–24V DC, ALD24V Equivalent : Under 300,000 times of ON/OFF
 - Battery CR2030 3V Equivalent : Under 200,000 hours
- The exchange of the product with expiration date, please contact to the purchasing point (Dealer shop) or SAMWONTECH, LTD.

(3) Check the package

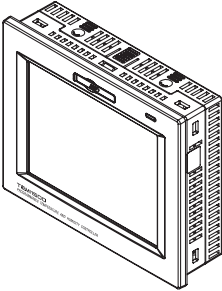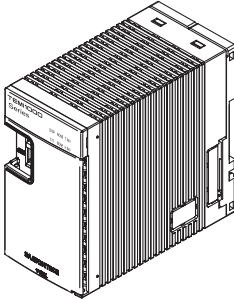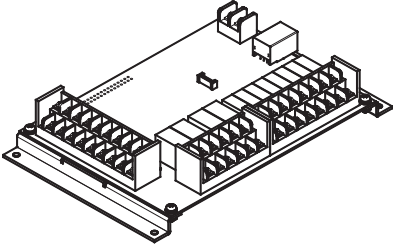- Check whether the following contents are included.

Main body of TEM1000 – Display part		Main body of TEM1000 – Control part		I/O1 BOARD		
						
SD card (In case of option election)	I/O2 BOARD (In case of option election)	Fixing mount	End bar	Cable (2m) PC ↔ Control part or display part	Cable (1m) Control part ↔ I/O1	Cable (3m) Display part ↔ Control part
						
SMPS 24V DC/1.3A(Product for independent selling)		Instruction manual				
						

1-2. Exterior and how to install

(1) Installation location and environment



CAUTION

Cautions for the installation location and environment

- Please manipulate in electricity on state at the installation of this product on the panel because of the electric shock risk. (Caution for electric shock)
- Do not install the product in the following location or environment.
 - A place for contacting the terminal by the human without recognition
 - A place directly exposed for mechanical vibration or impact
 - A place exposed for the corrosive gas or flammable gas
 - A place of temperature fluctuation
 - A place of extremely high (Over 50°C) and low (Under 10°C) temperature
 - A place exposed to the direct sunlight
 - A place influenced with electromagnetic wave
 - A place of moisture (A place with more than 85% of humidity)
 - A place where there are the flammable stuffs at the surrounding
 - A place of dusty and salty
 - A place of receiving the ultra violet light
- Do not use sharp thing or excessive pressure to manipulate the touch screen.
- Please pay attention to the handling of the product because the product is weak to the organic solvent (Chemical substances) as the exterior of the product is made of plastic. (Do not contact the front side of the product to the organic solvent especially.)
- Even though the case of this product is made of non flammable material such as ABS/PC, but do not install in the place where there are the stuffs of easy flammability.




CAUTION

Installation Precautions

- Don't put the device or the wiring which cause the noise near to this product.
- Use the product in 10~50°C, in 20~90% RH (It shall not be dewing.) Don't put the heat radiant device closely.
- Don't install the product in declined position.
- Keep the product in -5~70°C (It shall not be dewing.). Especially, use after full warming up (Switch on) when you use the product under 10 °C.
- The wiring work shall be made after switching off electric power on the machine.
- This product operates in 40V DC, 22V max without special manipulation. There is a risk of the electric shock or fire when the electric power other than the specification.
- Don't work with wet hands. It has the risk of electric shock.
- Follow up the basic cautions to reduce risk of fire, electric shock and injury during using.
- The installation and the use shall be made according to the specified methods in instruction manual.
- Refer to the installation procedure regarding to the description for ground. However, do not make the ground on the water supply pipe, gas pipe, phone line and lightning rod. There is a risk of explosion and fire.
- Do not switch on before finishing the connection of the devices. It may cause the failure.
- Do not close the heat radiating hole on this product. It may cause the failure.
- The level of excessive voltage protection is category II and the use environment is degree II.

(2) External dimension (Unit:mm)


▶ External dimension of display part for each model

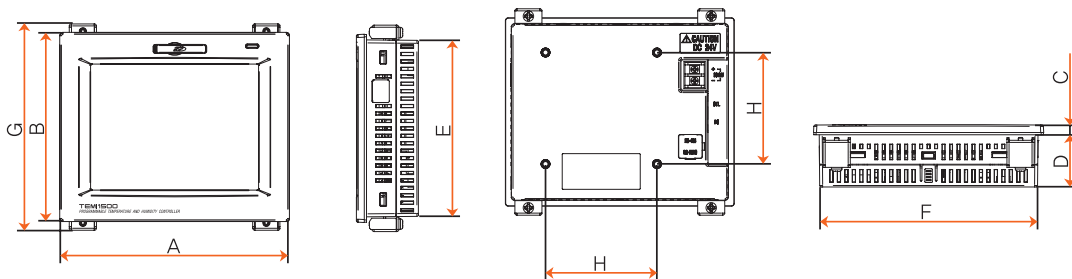


※ Unit : mm

Model name	A	B	C	D	E	F	G	H
TEM11300	151	108	6,8	34,9	102,3	145,3	121,4	75
TEM11500	154	126,6	6,8	34,9	118,9	146,3	138,8	75
TEM11900	239,2	155,7	6,8	34,9	149,8	233,3	168,9	75


▶ External dimension of control part

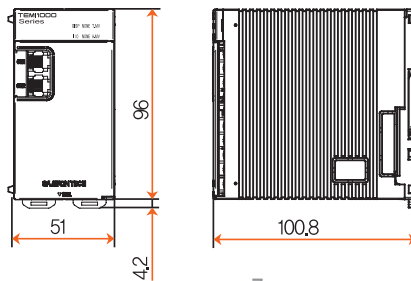

▶ I/O1 board external dimension

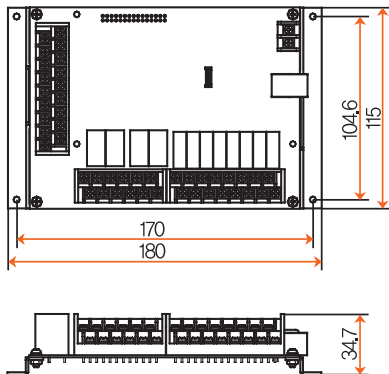


▶ I/O2 board external dimension

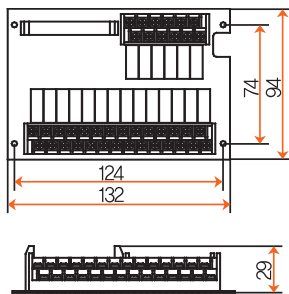

(3) Panel cutting dimension

▶ In case of general attachment

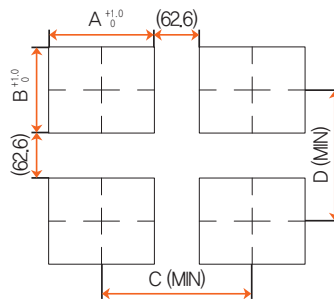


※ Panel cutting dimension for each model Unit : mm

Model name	A	B	C	D
TEM1300	146,3	103,3	208,9	165,9
TEM1500	147,4	120	210	182,6
TEM1900	234,3	150,8	296,9	213,4


(4) How to attach on the panel mount

* How to install the product

▶ How to install the **TEM1500** display unit panel

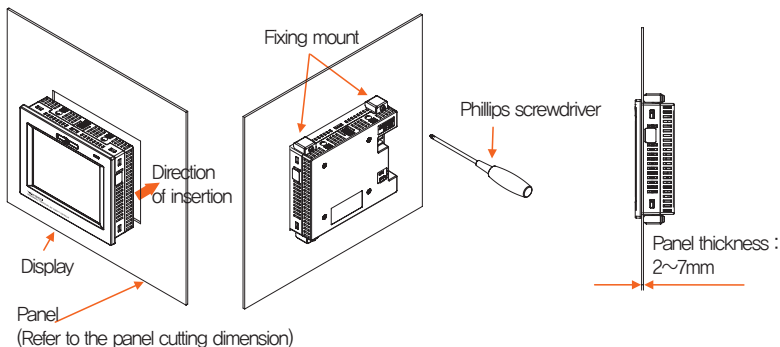

▶ How to install the **TEM1300/1900** display unit panel

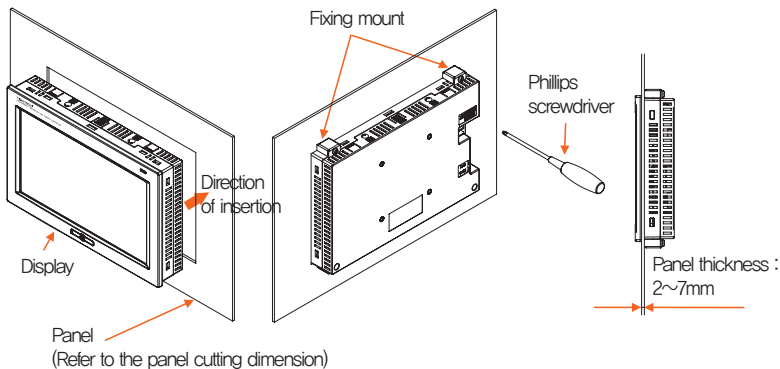

References

- ▶ Cut the panel to be installed. Refer to the [1-2(3) Panel cutting dimension]
- ▶ Insert into the hole from the rear side of the product as shown in the above figure.
- ▶ Fix this product using in fixing mount at the upper/lower part of the product (As shown in the figure) Apply 0,2Nm~0,4Nm of torque in case of assembling the fixing mount (Use the Phillips driver)



CAUTION

Cautions


The clamping screw is too tightened, the panel surface is deformed. It can cause touch not working normally, or likely to decrease waterproof.

References


- ▶ The dimension of vesa (75*75) is same in any product.
- ▶ Apply M4*4L~6L in case of assembling the bolt on the vesa hole.

* How to install the control part

▶ In case of installing on the DIN rail

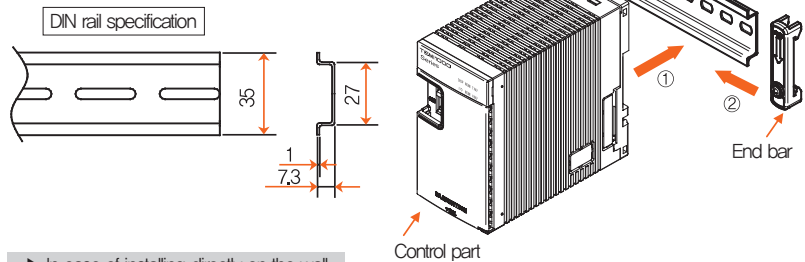


▶ In case of installing directly on the wall

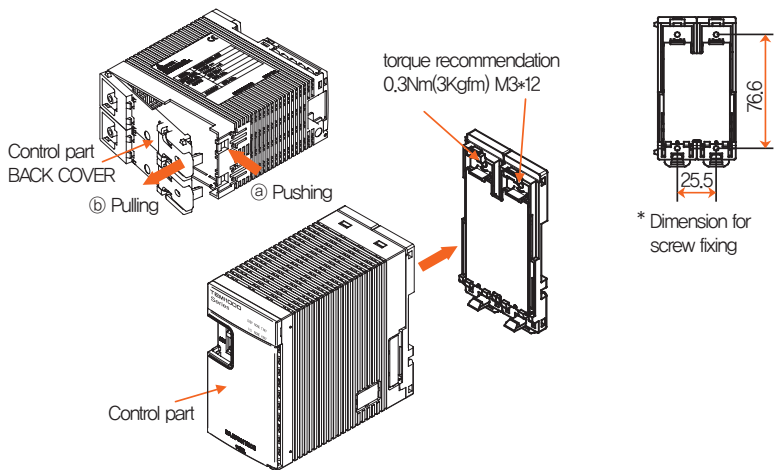

References

- ▶ Install the control part on DIN rail.
- ▶ Fix the control part with end bar from both sides.

▶ In case of installing with vesa mount

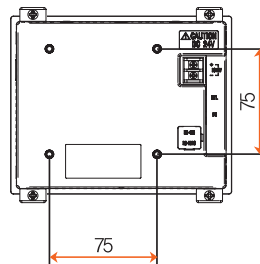

References

- ▶ Separate back cover by pulling part ② on the back cover while ① part on the control panel is pressed.
- ▶ Fix the back cover of control part on the wall with screw.
- ▶ Assemble the main body of control part on the back cover.

1-3. Wiring




Cautions

- Make the wiring after checking whether the wiring cable is applied for current with tester by switching off the main electric power in every supplied instrument.
- Never contact to the terminal because of the risk of electric shock during application of the current (Electric power on).
- Make the wiring after switching off the main electric power certainly.


(1) How to make the wiring

- Recommended specification for electric cable : Vinyl insulated electric cable KSC3304 0.9~2.0mm²
- Recommended specification for terminal : Use the pressed terminal with insulation sleeve which is proper to the M3 screw as shown in [Fig. 1].
- Source of noise
 - (A) Relay and contact point
 - (B) Solenoid coil and solenoid valve
 - (C) Electric power line
 - (D) Induced load
 - (E) Inverter
 - (F) Commutates in motor
 - (G) SCR for controlling the phase angle
 - (H) Wireless communication device
 - (I) Welding machine
 - (J) High pressure ignition device and etc
- Solution for noise
 - (A) Make the wiring with caution for the following points from the noise creation source.
 - (B) Make the wiring for the input circuit with placing the gap from the power circuit and ground circuit.
 - (C) Use the shield line for the noise from the electrostatic induction.
 - (D) Connect the shield line to the ground terminal according to the necessity not to make the 2 point ground.
 - (E) Make the wiring in tight twisting for the noise from the electric induction.

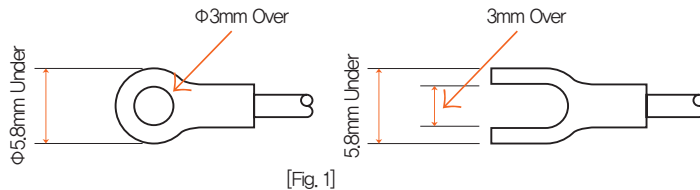

(2) Terminal layout

► TEM1000 display part terminal

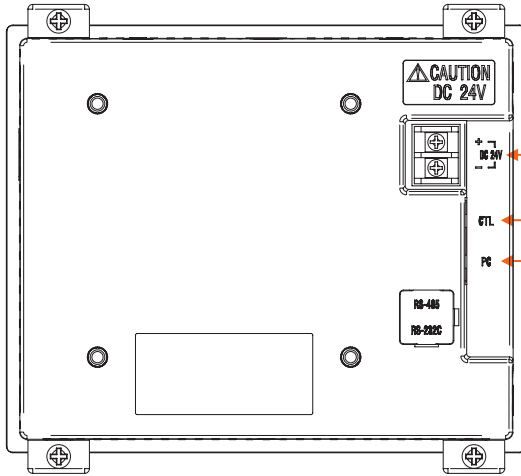


Electric power (24V DC)

COM1
display part To control part connection

COM2
display part To PC connection part

► Control part terminal

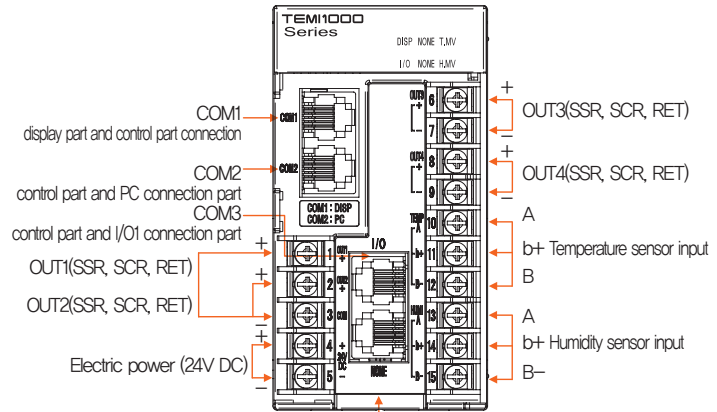

COM1
display part and control part connection

COM2
control part and PC connection part

COM3
control part and I/O1 connection part

OUT1(SSR, SCR, RET)

OUT2(SSR, SCR, RET)

Electric power (24V DC)

COM4 unused

OUT3(SSR, SCR, RET)

OUT4(SSR, SCR, RET)

A

b+ Temperature sensor input


B

A


b+ Humidity sensor input

B-

▶ I/O1 board terminal

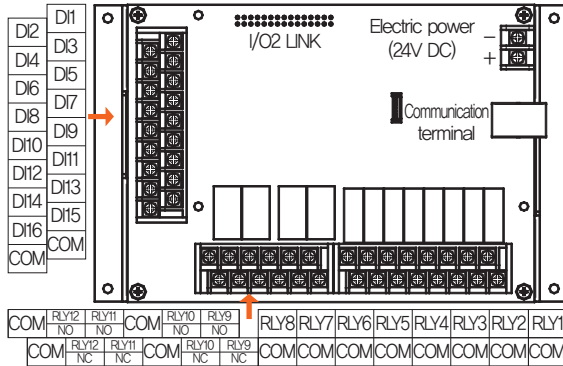

▶ I/O2 board terminal

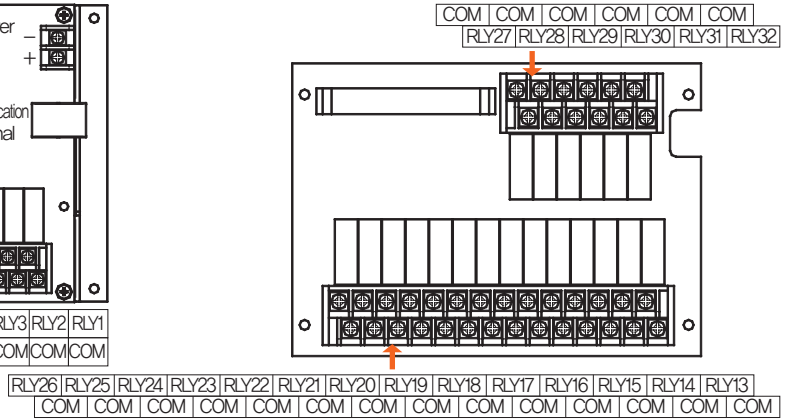

Control part terminal

Setting range



OUT1	Temperature – SSR, SCR, RET
OUT2	Temperature – SSR, SCR, RET
OUT3	Humidity – SSR, SCR, RET
OUT4	Humidity – SSR, SCR, RET

(3) Electric power circuit

- Use the cable with equivalent or above the vinyl insulated cable (KSC3340) or electric cable with vinyl insulated cable.


▶ How to make electric wire for TEM1000

▶ How to connect the electric power for control unit

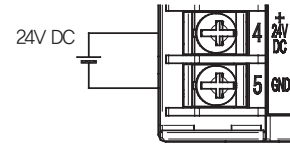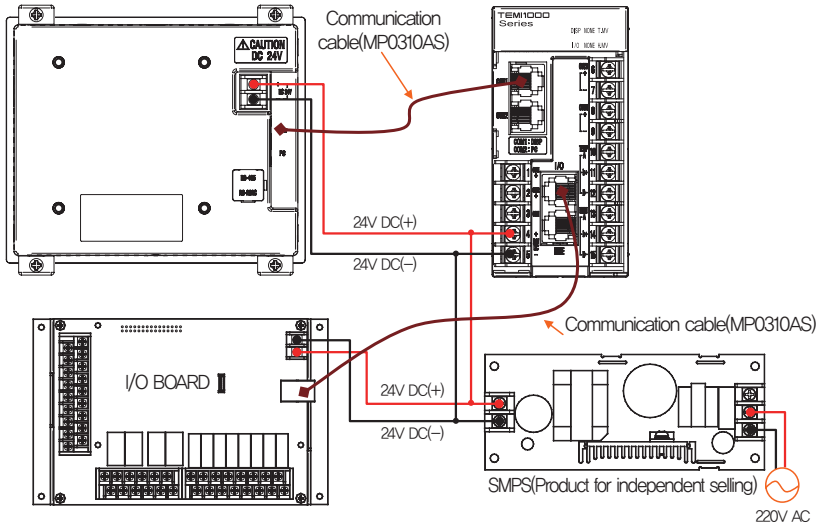

① Connection of measurement input (Analog input)

- Switch "OFF" the power of TEM1000 main body and external power supply certainly for connecting the measurement input because of electric shock risk.
- Use the shield attached input cable and the shield shall be grounded by one point.
- Connect the signal line for measurement input by placing the gap between with electric power cable or ground circuit.
- Use the electric cable with less resistance and no difference in resistance.

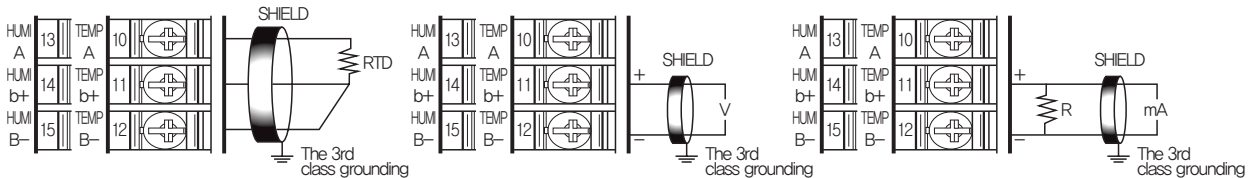

▶ Input of the temperature detecting resistor (RTD)


▶ Input of the direct current voltage (DC voltage)

▶ Input of the direct current (DC current)

② Control output connection (Analog output)

- Connect by using caution for output polarity. The misconnection becomes a reason for failure in main body.
- Use the shield attached output cable and the shield shall be grounded by one point.
- The COM(-) terminal of OUT1 and OUT2 is used for common terminal of COM(-) regardless of the type.


OUT1 and OUT2 electric voltage pulse output (SSR)

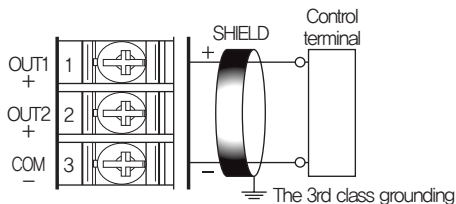

SSR : 24V DC(12V DC min, 600Ω min)

- ▶ Use COM for OUT1, OUT2 output terminal, 24V DC is output in output voltage checking in unloaded state in case of stop or 0% control power. Check the output voltage after connecting the load (SSR).


OUT1 and OUT2 electric current output (SCR/RET)

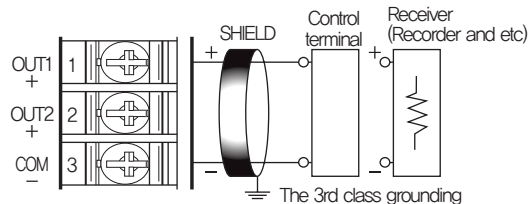

SCR / RET : 4~20mA DC, 600Ω max

- ▶ Use common COM for OUT1, OUT2 output terminal. Connection method is same.


OUT3 and OUT4 voltage pulse output (SSR)

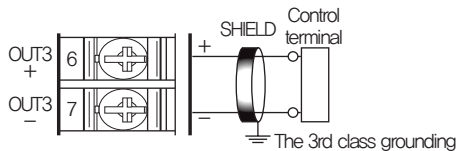

SSR : 24V DC(12V DC min, 600Ω min)

- ▶ Use independent COM for OUT3, OUT4 output terminal. Connection method is same.

OUT3 and OUT4 electric current output (SCR/RET)

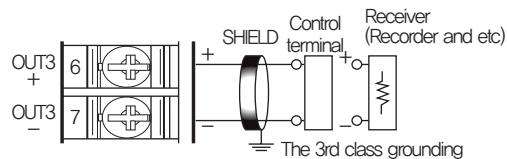


SCR / RET : 4~20mA DC, 600Ω max


- ▶ Use independent COM for OUT3, OUT4 output terminal. Connection method is same.

③ Connection for external contact point output

- Switch "OFF" the power of TEM1000 main body and external power supply certainly for connecting the measurement input because of electric shock risk.
- Contact point output: Under 30V DC 1A, 250V AC 1A for Normal and Open

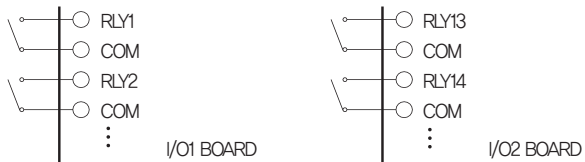

Under 30V DC 1A, 250V AC 1A

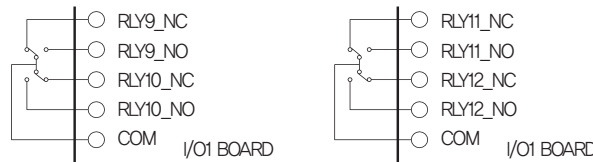


NO (Normal Open): Under 30V DC 1A, 250V AC 1A


NO (Normal Close): Under 30V DC 1A, 250V AC 1A

④ Connection of contact input (DI)

- Use the no voltage contact point (Relay contact point and etc) for the external contact point.
- Use no voltage contact point with sufficient opening and closing function for the terminal voltage (About 5V) "ON" and electric current (About 1mA) in blocking the no voltage contact point.
- Use the open collector for under 2V of both terminal voltage in "ON" for contact point and under 100μA of leaking current in "ON,"

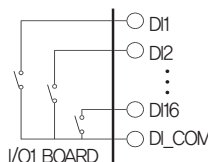


▶ Relay contact point input

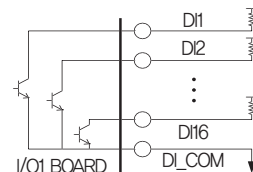


▶ Transistor contact point input

⑤ Use of sub relay

- "ON/OFF" the load by using the sub relay when the resistance load exceeds the relay specification of the product.
- Constitute the spark removing surge suppressor and insert parallel with the CR filter (In case of using AC) or diode (In case of using DC.) certainly because the use of the same inductance (L) load such as sub relay or solenoid valve becomes a reason for mal function or failure in the relay.
- CR filter recommendation
 - Sungho Electronics Co., Ltd : BSE104120 (20 25V (0.1 μ +120 Ω))
 - Hana Parts Co., Ltd : HN2EAC
 - Songmi Electric Equipment Co., Ltd : CR unit 953, 955
 - Jiwo Electric Equipment Manufacturing Co., Ltd : SKV, SKVB etc
 - Shinyong Communication Industry Co., Ltd : CR-CFS, CR-U etc

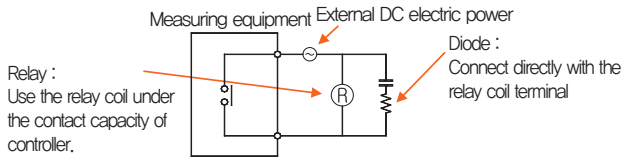


▶ In case of DC relay

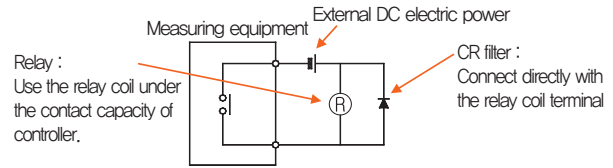


▶ In case of AC relay

⑥ How to connect the communication for TEM11000 display part

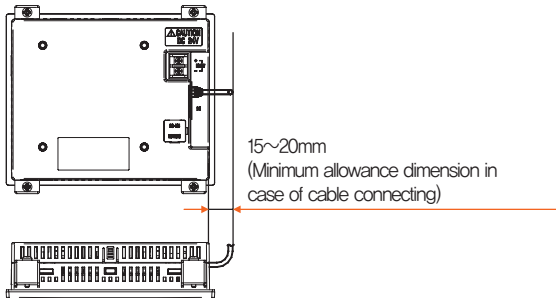


1-4. Display function and name

▶ TEM1500 display part

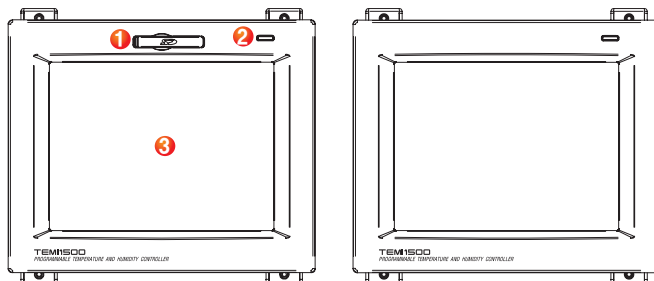


- ① SD card insertion part (Use for SD card option)
- ② Lamp (Lighting in "OFF" of backlight/Run: Green, Stop: Red)
- ③ Screen display part

▶ TEM1300/1900 display part

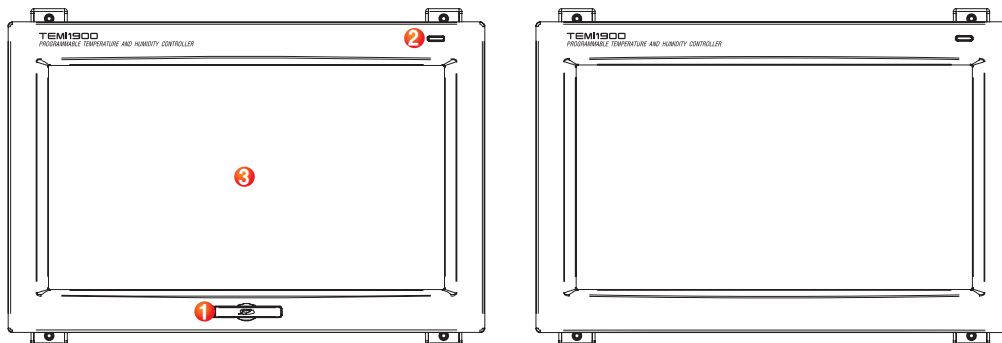

1-5. Control part LED


- The lamps for displaying the state of each part

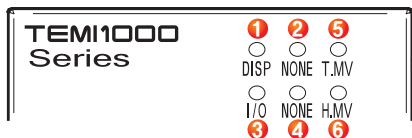

- | | |
|---|---|
| ① | Communication state display lamp for display part and control part
(The lamp flashes in normal communication.) |
| ② | unused |
| ③ | Communication state display lamp between the control part and I/O1 board
(The lamp flashes in normal communication.) |
| ④ | unused |
| ⑤ | Temperature side control output display lamp
(The lamp flashes depending on the control output of temperature.) |
| ⑥ | Humidity side control output display lamp
(The lamp flashes depending on the control output of humidity.) |

1-6. SD covers the opening and closing and precautions

- When you open the SD cover, ① the projection of the direction of the push up the next area.
- When you close the SD cover, push the SD cover groove.
- SD cover after open, do not pull or force 0.4kgf.

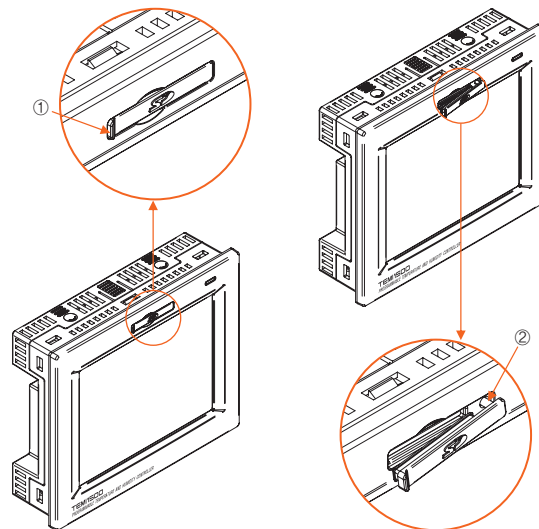

CAUTION Cautions

- SD cover after open, do not pull or force 0.4kgf.
Pulling force of more ② parts will be damaged.

Part 02

System parameter setting

2-1 Setting button operation	21
2-2 System parameter setting screen	22
2-3 System parameter setting sequence	23




02. System parameter setting

2-1. Setting button operation


Button type	Button operation
<input type="text"/>	It is used for inputting the general numbers and name.
<input type="text"/> ▼	It is used for selection for one out of many types.
<input checked="" type="radio"/> <input type="radio"/> <input type="radio"/>	It is used for selection for one out of more than 2 parameter setting. (ON/OFF/Inactive state)
<input checked="" type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>	It is used for selection of Y/N for the corresponding parameter. (ON/OFF/Inactive state)
Next	It is used for screen conversion.
▲ ▼	It is used for increasing or decreasing of the page within the screen.
◀ ▶	It is used for the page conversion by the decrease and increase in time axis on the same screen.

2-2. System parameter setting screen


- This product is a Temperature and Humidity Programmable Controller designed in dialogue type touch screen for easy use.
- Please refer to the [1-1 Basic operation flow chart] in [operation manual].
- When ① and ② on the [Fig. 2-1 Main screen] are pressed sequentially, the password box to move to the system parameter setting screen is activated.
- When the password in input in [Fig. 2-2 password input screen] is input, it is converted to [Fig. 2-3 system parameter setting screen]
 - The password in case of outgoing from the factory is set in the beginning.
 - Set the password in [12-1 Basic screen display setting] certainly at the necessity of blocking the access of the general user.

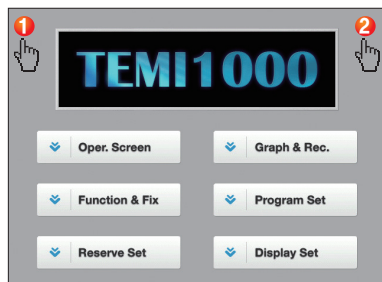

[Fig. 2-1] Main screen (Basic screen)

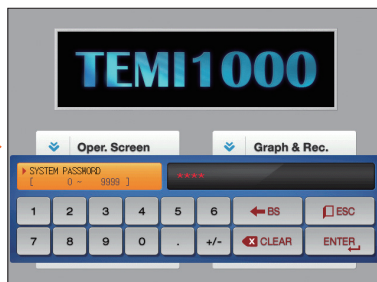

[Fig. 2-2] Password input screen

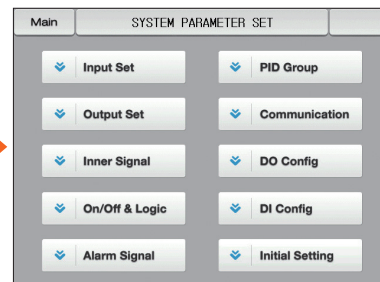


[Fig. 2-3] System parameter setting screen

Item	Function
Sensor input setting	Setting of parameter related with the type of input sensor and sensor input [Refer to 3-1]
Control & transmitting output	Setting of parameter related with the output type and output [Refer to 4-1]
Inner signal	Setting of parameter related with inner signal [Refer to 5-1]
ON/OFF signal	Setting of parameter related with ON/OFF signal [Refer to 6-1]
Alarm signal	Setting of parameter related with alarm signal [Refer to 7-1]
PID group	Setting of parameter related with PID [Refer to 8-1]
Setting of communication environment	Setting of parameter related with communication [Refer to 9-1]
DO relay setting	Setting of parameter related with I/O board relay output signal [Refer to 10-1]
DI function and Operation	Setting of parameter related to the external contact input signals [Refer to 11-1]
System initial setting	Setting of parameter related with the basic setting for screen configuration [Refer to 12-1]

2-3. System parameter setting sequence

- The sequence of parameter setting in priority for product installation is as follows.

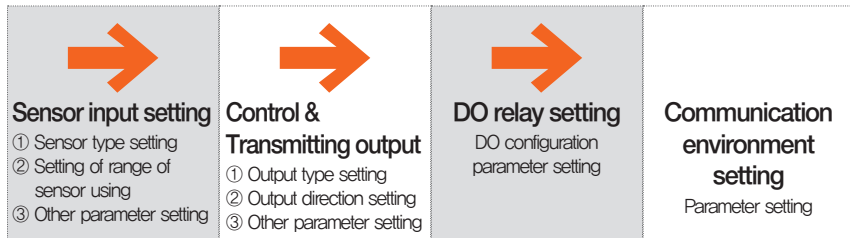

References


- The device may be mal operated in case of changing the setting data is changed into wrong data inside the system setting screen.

Part 03


Sensor input setting

3-1 Sensor input screen	26
3-2 Sectional calibrating input setting	31


Sensor input flow chart

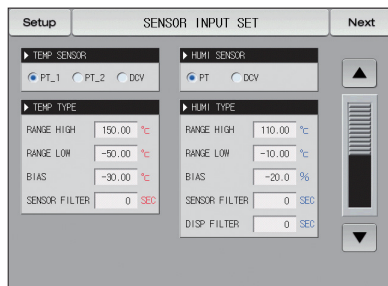


[Fig. 3-1] In case of setting for sensor input PT_1

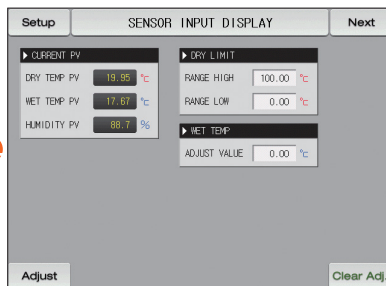

[Fig. 3-4] Sensor input display screen

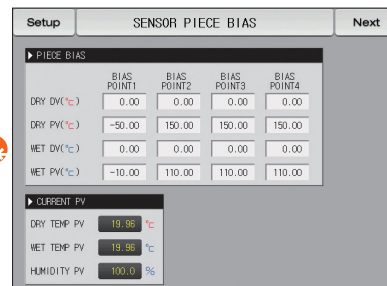

[Fig. 3-5] In case of setting the sensor input for each range

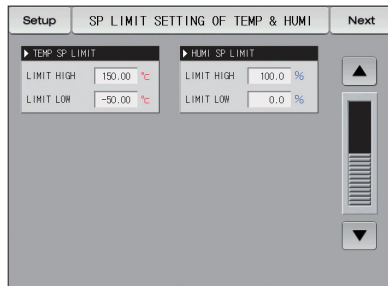

[Fig. 3-3] TEMP & HUMI limitation setting screen




03. Sensor input setting

3-1. Sensor input setting

(1) Sensor input screen 1

- Select the sensors for temperature (PT_1, PT_2 and DCV) and humidity (PT, DCV).
- The sensors shall be set firstly certainly because when the sensor selected, the parameters will be initialized.
- While Operating is run, the temperature sensor, humidity sensor, sensor type, upper limit range and lower limit shall not be changed.

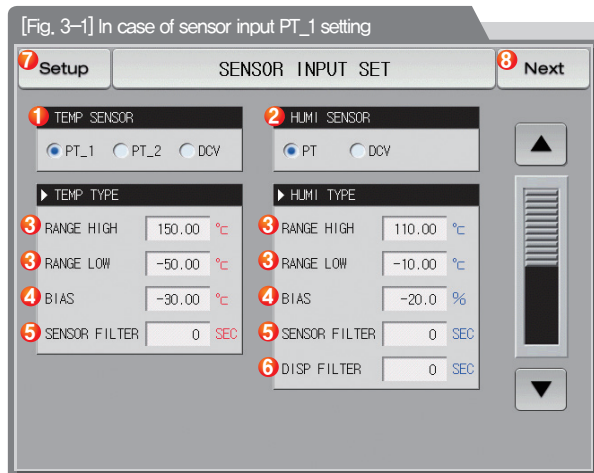

Setting of the temperature sensor

①

- In case of changing the sensor, the parameters with expression of EU and EUS are changed in proportion to the current data. However, the setting value for upper and lower limit will be initialized

Setting of the humidity sensor

②

- In case of changing the sensor, the parameters with expression of EU and EUS are changed in proportion to the current data. However, the setting value for upper and lower limit will be initialized

Setting the use range of the sensor

③

- The parameters related with EU and EUS such as the inner signal and alarm are changed in proportion to the current data in case of changing the lower range (RL) and upper range (RH)
- Refer to [Table 3-1]

④

Input calibration (BIAS function)

- Calibrate the temperature and humidity input error

Sensor filter

⑤

- Setting of the sensor filter time when high frequency noise is included into the input signal

⑥


It is set to relax the shaking of indicator for PV due to the sensitive response of sensor during normal control status.

⑦

Move to [Fig. 2-3 System parameter setting screen]

⑧


Move from the current screen to the next screen

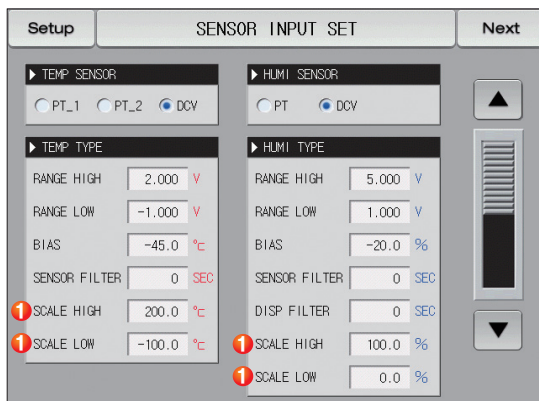

[Fig. 3-2] Screen for selection of sensor input DCV

- ① It is displayed in case that temperature and humidity sensor set as DCV

(2) Sensor input screen 2

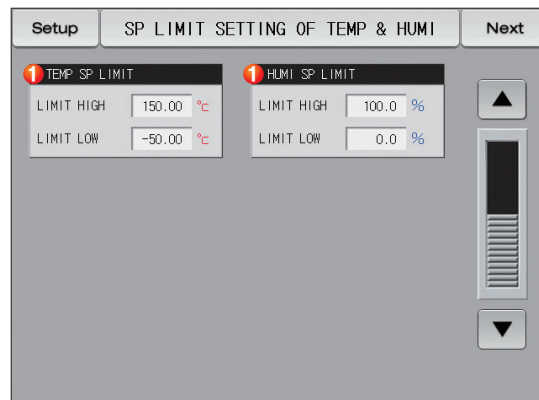

[Fig. 3-3] TEMP & HUMI limitation setting screen


- ① Set to the range of setting TEMP&HUMI values to be controlled.

Parameter	Setting range	Unit	Initial data
SP upper limit setting	EU(0.0 ~ 100.0%)	EU	EU(100.0%)
SP lower limit setting	EU(0.0 ~ 100.0%)	EU	EU(0.0%)

[Table 3-1] Sensor input setting screen #1 parameter

Parameter		Setting range	Unit	Initial data
Temperature	Sensor	PT_1 (-90.00 ~ 200.00°C) PT_2 (-100.0 ~ 300.0°C) DCV (-1,000 ~ 2,000V)	ABS	PT_1
	Upper limit range	T,EU(0.00 ~ 100.00%)	T,EU	T,EU(100.00%) However, sensor set as PT_1, it will be "150.00".
	Lower limit range	Lower limit range < Upper limit range	T,EU	T,EU(0.00%) However, sensor set as PT_1, it will be "-50.0"
	Input calibration	T,EUS (-100.00 ~ 100.00%)	T,EUS	T,EUS(0.00%)
	Sensor filter	0 ~ 120 SEC	ABS	0
	Scale upper limit	-100.0 ~ 200.0°C	°C	200.0
	Scale lower limit	Scale lower limit < Scale upper limit	°C	-100.0
	Humidity	Sensor	PT (-10.0 ~ 110.0°C) DCV (1,000 ~ 5,000V)	ABS
Upper limit range		H,EU(0.0 ~ 100.0%)	H,EU	H,EU(100.0%)
Lower limit range		Lower limit range < Upper limit range	H,EU	H,EU(0.0%)
Input calibration		H,EUS (-100.0 ~ 100.0%)	H,EUS	H,EUS(0.0%)
Sensor filter		0 ~ 120 SEC	ABS	0
Display filter		0 ~ 120 SEC	ABS	0
Scale upper limit		0.0 ~ 100.0°C	%	100.0
Scale lower limit		Scale lower limit < Scale upper limit	%	0.0

(3) Sensor input screen 3

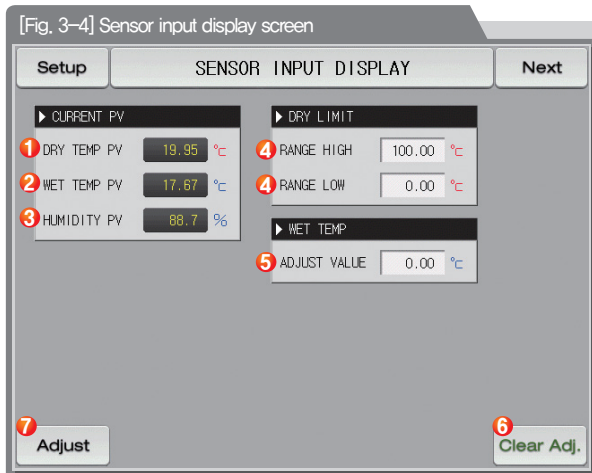


- ① Display present value (PV) of dry-bulb temperature
 - Impossible to change by touching as it is for reading only
- ② Display present value (PV) of wet-bulb temperature
 - Impossible to change by touching as it is for reading only
- ③ Display present value (PV) of relative humidity
 - Impossible to change by touching as it is for reading only
- ④ Set the upper, lower limit of relative humidity display condition range (Dry Limit)
 - Set to display the relative humidity within the wished dry-bulb temperature.
- ⑤ It adjusts the sensor data of wet-bulb temperature
 - It is available only when temperature /humidity sensor type is "PT"
- ⑥ It deletes the sensor adjusted data of wet-bulb temperature.
 - It is available only when temperature /humidity sensor type is "PT"
 - The button is inactive during operation.
- ⑦ It mates the temperature data of wet-bulb and dry-bulb through automatic calculation of sensor adjusted data in wet-bulb temperature.
 - It is available only when temperature /humidity sensor type is "PT"
 - Firmly used before installing the gauze on the temperature sensor in wet-bulb
 - The button is inactive during operation.

Parameter		Setting range	Unit	Initial data
Relative-Humidity display condition (DRY)	Upper limit range	0.00 ~ 100.00	°C	100.00
	Lower limit range	Lower limit range < Upper limit range	°C	0.00
Wet bulb temperature (Wet)	Sensor adjusted data	H,EUS (-100.00 ~ 100.00%)	H,EUS	H,EUS(0.00%)

※ When input line disconnected, It displays "S.OPEN", and the control output data is fixed in 0,0%.

(4) Sensor input screen 4

- It adjusts Input ranges of temperature and humidity as per the type of humidity sensor.
- The calibration for each range is made in a linear equation method between the calibration points.

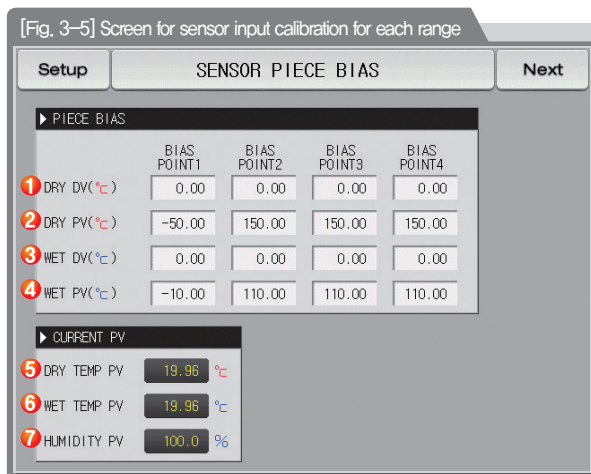


- ① It adjusts the calibration temperature of dry-bulb temperature in each standard temperature.
- ② It adjusts the calibration temperature of each basic point for calibration of dry-bulb temperature.
- ③ It adjusts the calibration temperature in each basic temperature of wet-bulb temperature.
 - It displays in humidity (%) in case of DCV input type.
- ④ It sets the temperature for each basic point for calibration of wet-bulb temperature.
 - It displays in humidity (%) in case of DCV input type.
- ⑤ It displays the dry-bulb temperature which is applied input calibration adjusting
 - Impossible to change by touching as it is for reading only
- ⑥ It displays the wet-bulb temperature which is applied input calibration adjusting
 - Impossible to change by touching as it is for reading only
- ⑦ It displays the humidity which is applied input calibration adjusting
 - Impossible to change by touching as it is for reading only

Parameter		Setting range	Unit	Initial data
DRY	DV	T.EUS(-10.00 ~ 10.00%)	T.EUS	T.EUS(0.00%)
	PV	T.EU(0.00 ~ 100.00%)	T.EU	T.EU(0.00%)
WET	DV	H.EUS(-10.00 ~ 10.00%)	H.EUS	H.EUS(0.00%)
	PV	H.EU(0.00 ~ 100.00%)	H.EU	H.EU(0.00%)

3-2. Sectional calibration input setting

- It displays the range input calibration adjusting of dry-bulb temperature.
- The input calibration adjusting between wet-bulb temperature and humidity is same with the case for dry-bulb temperature.

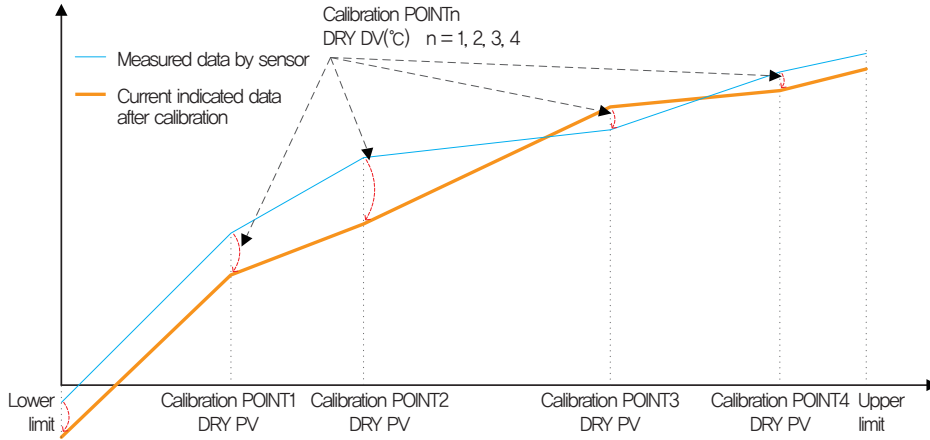

References

- Calculation for each calibration section
- ① Temperature at the lower limit ~ calibration 1 point after calibration = Measured data by sensor + calibration 1 point
- ② Temperature at the calibration 1 point ~ calibration 2 point after calibration = Measured data by sensor +

$$\begin{aligned}
 & (\text{Measured data by sensor} - \text{calibration 1 point DRY PV}) \times \frac{(\text{Calibration 2 point DRY PV} - \text{Calibration 1 point DRY PV})}{(\text{Calibration 2 point DRY PV} - \text{Calibration 1 point DRY PV})} + \text{Data at calibration 1 point DRY PV}
 \end{aligned}$$



References

③ Temperature at the calibration 2 point~ calibration 3 point after calibration = Measured data by sensor +

$$(\text{Measured data by sensor} - \text{calibration 2 point DRY PV}) \times \frac{(\text{Calibration 3 point DRY PV} - \text{Calibration 2 point DRY PV})}{(\text{Calibration 3 point DRY PV} - \text{Calibration 2 point DRY PV})} + \text{Data at calibration 1 point DRY PV}$$

④ Temperature at the calibration 3 point~ calibration 4 point after calibration = Measured data by sensor +

$$(\text{Measured data by sensor} - \text{calibration 3 point DRY PV}) \times \frac{(\text{Calibration 4 point DRY PV} - \text{Calibration 3 point DRY PV})}{(\text{Calibration 4 point DRY PV} - \text{Calibration 3 point DRY PV})} + \text{Data at calibration 3 point DRY PV}$$


⑤ Temperature at the calibration 4 point~ Temperature at the upper limit after calibration = Measured data by sensor + Calibration 4 point DRY PV

Part 04


Control & Transmitting output

4-1 Control output setting	35
4-2 Transmitting output setting screen	41


Control & Transmitting output flow chart

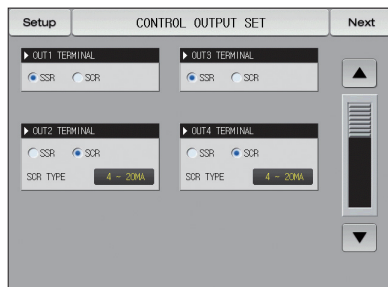


[Fig. 4-1] Output type selection screen

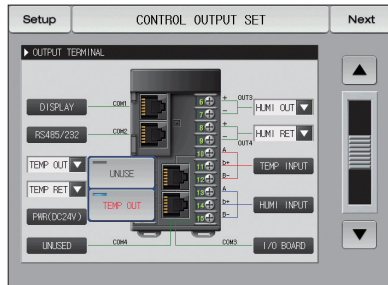

[Fig. 4-2] OUT1 output terminal setting screen

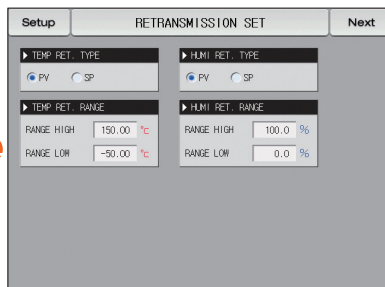

[Fig. 4-9] Transmitting output setting screen
(In case of PV, SP setting)

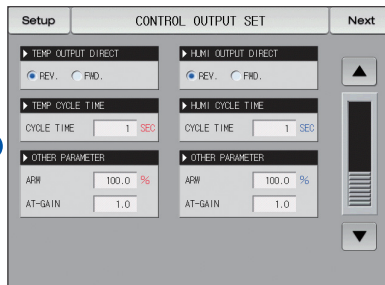

[Fig. 4-4] Output setting screen




04. Control & Transmitting output

4-1. Control output setting

(1) Output setting screen 1

- It sets the type of temperature and humidity control output terminal.

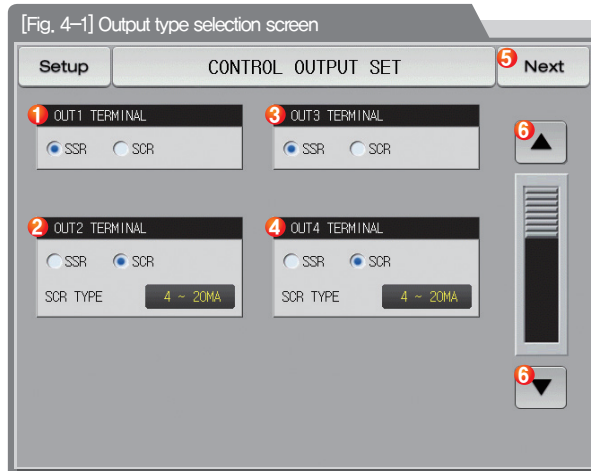

Setting the output type of OUT1

- ①
 - SSR : Setting in case of using temperature control output
 - SCR : Setting in case of using the temperature control output, temperature transmitting output

Setting the output type of OUT2

- ②
 - SSR : Setting in case of using temperature control output
 - SCR : Setting in case of using the temperature control output, temperature transmitting output

Setting the output type of OUT3

- ③
 - SSR : Setting in case of using humidity control output
 - SCR : Setting in case of using the humidity control output, humidity transmitting output

Setting the output type of OUT4


- ④
 - SSR : Setting in case of using humidity control output
 - SCR : Setting in case of using the humidity control output, humidity transmitting output

⑤ Moving from current screen to the next screen

⑥ Moving to the next or previous screen using the up/down button

(2) Output setting screen 2


- The following figure is a screen to check/set the setting on the product with graphic.

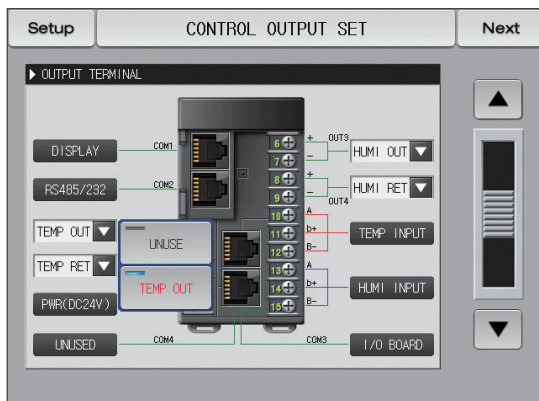

[Fig. 4-2] OUT1 output terminal selection screen (General)

References

- The temperature control output and unused setting screen are display as shown when SSR was set in OUT1 output terminal.

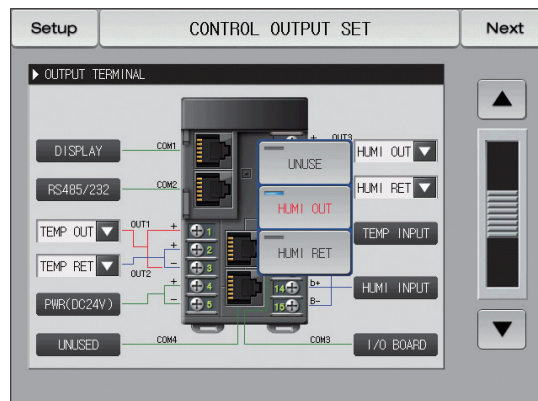

[Fig. 4-3] OUT3 output terminal selection screen (General)


References

- The humidity control output, humidity transmitting output setting screen are display as shown when SCR was set in OUT3 output terminal.

Parameter		Setting range	Unit	Initial data
OUT1 output	SSR : No use, Temperature output	SCR : No use, Temperature output, Temperature transmitting	ABS	Temperature output
OUT2 output	SSR : No use, Temperature output	SCR : No use, Temperature output, Temperature transmitting	ABS	Temperature transmitting
OUT3 output	SSR : No use, Humidity output	SCR : No use, Humidity output, Humidity transmitting	ABS	Humidity output
OUT4 output	SSR : No use, Humidity output	SCR : No use, Humidity output, Humidity transmitting	ABS	Humidity transmitting

(3) Output setting screen 3


- It sets the parameter to temperature and humidity control

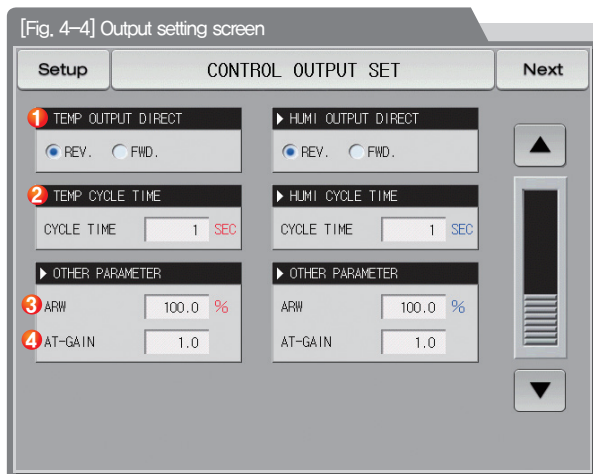

- ① Setting the PID control operation method
 - Refer to [① Operation direction]
- ② Setting the period for the operation of control output when control output is "SSR (SOLID STATE RELAY)"
 - Setting the anti reset wind-up ratio (Data) adopted in anti reset wind-up function operation
 - Refer to [③ Anti reset wind-up]
- ③ Use to control the PID data at once depending on the characteristics of the system after Autotuning
 - Control output = PID x Control time constant (Gain)
 - Refer to [④ Control time constant]


Parameter	Setting range	Unit	Initial data
Operation direction	Reversed operation, normal operation	ABS	Reversed operation
Output period	1~300 SEC	ABS	1
Anti reset wind-up	0.0(AUTO), 0.0 ~ 200.0%	%	100.0
Control time constant	0.1~10.0	ABS	1.0

① Operation direction

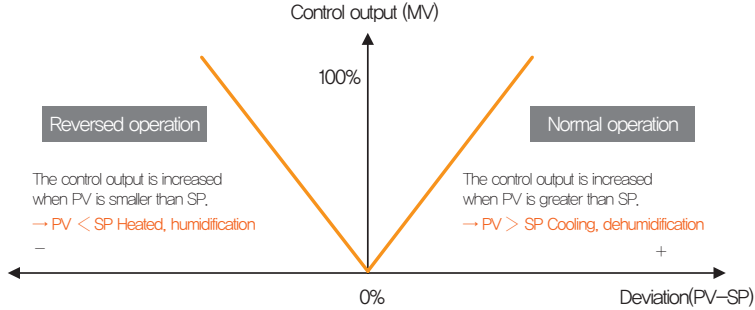

② Output period


- It is applied when the control output type is "SSR(Solid State Relay)".
- It means the time of 1 cycle of "ON/OFF" in the set time.
- "SSR" when output period is 10 seconds.

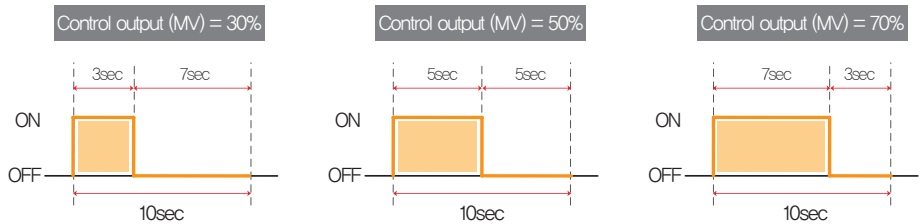

③ Anti reset wind-up

- It is one of the methods for effective control in case of external disturbance.
- It is a function to inhibit the over shoot by anti reset wind-up when the control output reached to the maximum point.
- When $I = 0$, it is not operated in the PID setting data.

► When there is no anti reset wind-up (ARW) function

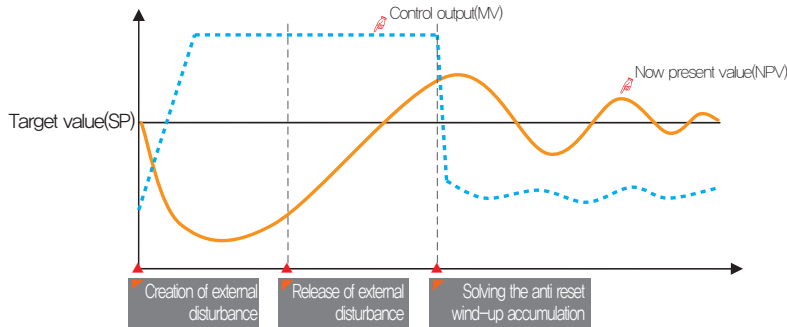

Creation of external disturbance

: The now present value (NPV) is decreased and control output data (MV) is increased at the moment of external disturbance creation.

Release of external disturbance

: The control output value (MV) is 100% output by the accumulated anti reset wind-up at the moment of release of external disturbance


Solving the anti reset wind-up accumulation

: Control output value (MV) is decreased by solving the anti reset wind-up accumulation



NOTE The over shoot is big as the time to solve the anti reset wind-up accumulation gets longer even though the external disturbance is released and it takes time for now present value to be stabilized.

► When there is anti reset wind-up (ARW) function

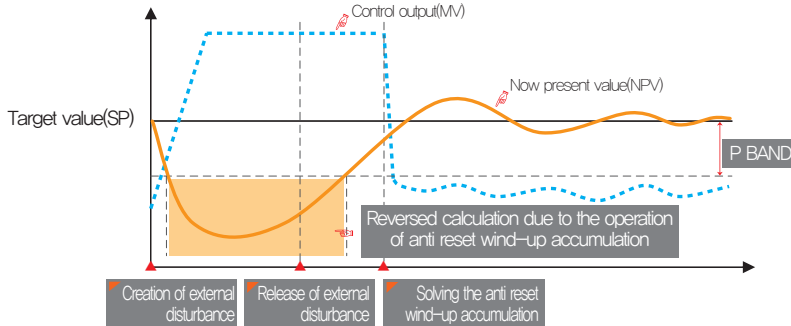

Creation of external disturbance

: The now present value (NPV) is increased and control output data (MV) is increased at the moment of external disturbance creation,

Release of external disturbance

: The control output value (MV) is 100% output by the accumulated anti reset wind-up at the moment of release of external disturbance

Solving the anti reset wind-up accumulation

: Control output value (MV) is decreased by solving the anti reset wind-up accumulation




NOTE The overshoot is small as the time to solve the anti reset wind-up accumulation gets shorter by reversed calculation of the anti reset wind-up before entering of now present value (NPV) to $\pm P$ Band and now present value is stabilized soon.

Example what is the P Band for input upper limit (RH) = 100.0°C, Input lower limit (RL) = -100.0°C, Proportional band (P) = 10.0%, anti reset wind-up (ARW) = 200%?

- Answer**
- ① Input range = Input upper limit (RH) - Input lower limit (RL) = 100.0°C - (-100.0°C) = 200.0°C
 - ② Input range Proportional band (P) = 200.0°C x 10.0% = 20.0°C
 - ③ P Band = ② x Anti reset wind-up (ARW) = 20.0°C x 200% = 40.0°C

④ Control time constant

- It is used to change the control characteristics based on the set PID value after auto tuning.
- It can control the control time constant depending on the object of control and characteristics.
 - Control time constant < 1.0 → The response speed is fast, but the hunting is severe.
 - Control time constant > 1.0 → The overshoot is reduced, but the response speed becomes slower.

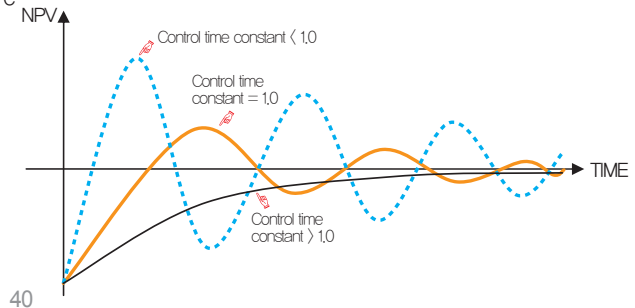

Part 05

Inner signal(IS)

5-1 Inner signal setting	44
5-2 Inner signal operation	46



Setup		INNER SIGNAL SET	
▶ IS1 TARGET	▶ IS2 TARGET		
<input checked="" type="radio"/> TEMP <input type="radio"/> HUMI	<input checked="" type="radio"/> TEMP <input type="radio"/> HUMI		
▶ IS1 TYPE	▶ IS2 TYPE		
<input checked="" type="radio"/> SP <input type="radio"/> PV <input type="radio"/> TSP	<input checked="" type="radio"/> SP <input type="radio"/> PV <input type="radio"/> TSP		
▶ IS1 BAND	▶ IS2 BAND		
<input checked="" type="radio"/> IN-B <input type="radio"/> OUT-B	<input checked="" type="radio"/> IN-B <input type="radio"/> OUT-B		
▶ IS1 RANGE & DELAY	▶ IS2 RANGE & DELAY		
RANGE HIGH <input type="text" value="-50.00"/> °C	RANGE HIGH <input type="text" value="-50.00"/> °C		
RANGE LOW <input type="text" value="-50.00"/> °C	RANGE LOW <input type="text" value="-50.00"/> °C		
DELAY TIME <input type="text" value="00.00"/> M.S	DELAY TIME <input type="text" value="00.00"/> M.S		



Setup		INNER SIGNAL SET	
▶ IS9 TARGET	▶ IS10 TARGET		
<input checked="" type="radio"/> TEMP <input type="radio"/> HUMI	<input checked="" type="radio"/> TEMP <input type="radio"/> HUMI		
▶ IS9 TYPE	▶ IS10 TYPE		
<input checked="" type="radio"/> SP <input type="radio"/> PV <input type="radio"/> TSP	<input checked="" type="radio"/> SP <input type="radio"/> PV <input type="radio"/> TSP		
▶ IS9 BAND	▶ IS10 BAND		
<input checked="" type="radio"/> IN-B <input type="radio"/> OUT-B	<input checked="" type="radio"/> IN-B <input type="radio"/> OUT-B		
▶ IS9 RANGE & DELAY	▶ IS10 RANGE & DELAY		
RANGE HIGH <input type="text" value="-50.00"/> °C	RANGE HIGH <input type="text" value="-50.00"/> °C		
RANGE LOW <input type="text" value="-50.00"/> °C	RANGE LOW <input type="text" value="-50.00"/> °C		
DELAY TIME <input type="text" value="00.00"/> M.S	DELAY TIME <input type="text" value="00.00"/> M.S		

[Fig. 5-1] Inner signal setting screen #1



[Fig. 5-2] Inner signal setting screen #2



05. Inner signal (IS)

5-1. Inner signal setting

- It is a screen to set the object of application, type and operation of each inner signal.
- Setting of 10 (IS1~IS10) inner signal operations is available
- The operation range and delay time of inner signal can be set in [Fig. 5-1] Inner signal setting screen #1.

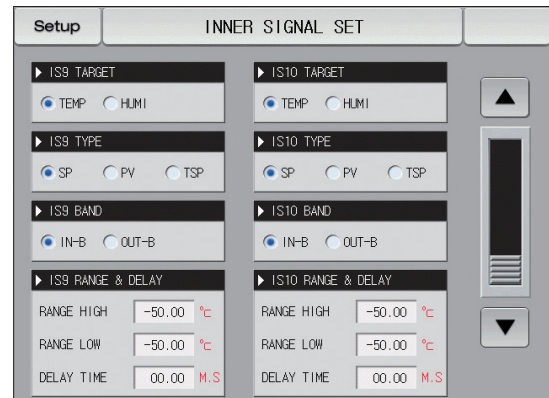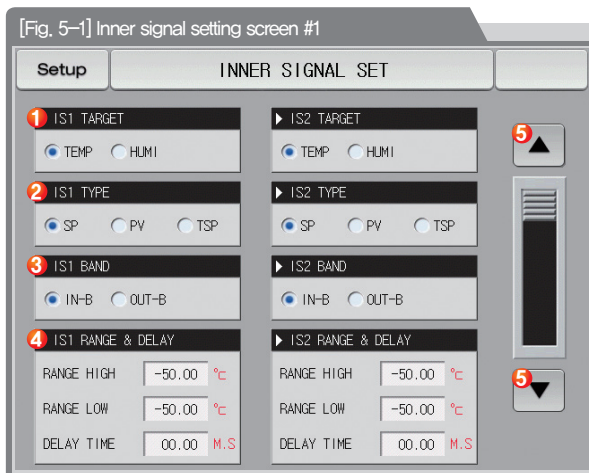

① Setting the application target of inner signal.


Setting the application type of inner signal.

- SP : Set value
- PV : Present value (It has EUS 0.5% fixed hysteresis when PV is selected.)
- TSP : Target set value in program control


②

Setting of inner signal operation band

- Within the range : The operation of inner signal is "ON" when the selected application

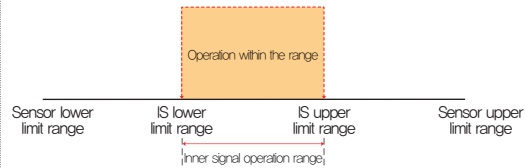

- ③
- Out of range: The operation of inner signal is "ON" when the selected application from application type of inner signal (SP, PV and TSP) is located out of the upper and lower limit of operation range.

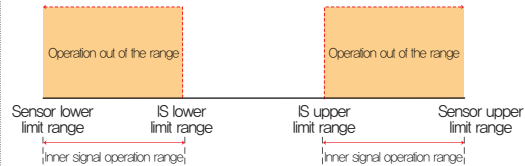

Setting of the upper,lower limit of the operation range and delay time.

- Upper limit range,lower limit range: Setting the operation range of inner signal application
- Delay time: Setting of the delay time to be applied in inner signal operation

④

⑤


Moving to the previous or next screen using up/down button.

Parameter		Setting range	Unit	Initial data
Inner signal #n target		Temperature, Humidity	ABS	Temperature
Inner signal #n application		SP, PV, TSP	ABS	SP
Inner signal #n operation band		Within the range, out of range	ABS	Within the range
Inner signal #n operation range	Upper limit	T.EU(0,00~100,00%) Inner signal #n lower limit range ≤ Inner signal #n upper limit range	T.EU/H.EU	T.EU(0,00%)
	Lower limit	H.EU(0,00~100,00%) Inner signal #n lower limit range ≤ Inner signal #n upper limit range	T.EU/H.EU	T.EU(0,00%)
	Delay time	00,00~99,59 (MIN,SEC)	ABS	00,00


※ It can be set for #n = 1 ~ 10.

5-2. Inner signal operation


- When the change rate (Slope) is set in stationary operation, the “Target set value (TSP)” operates the same motion with “Target set value (TSP)” of program control, but, when the change rate (Slope) is not set, the “Target set value (TSP)” operates in “Now present value (SP)”

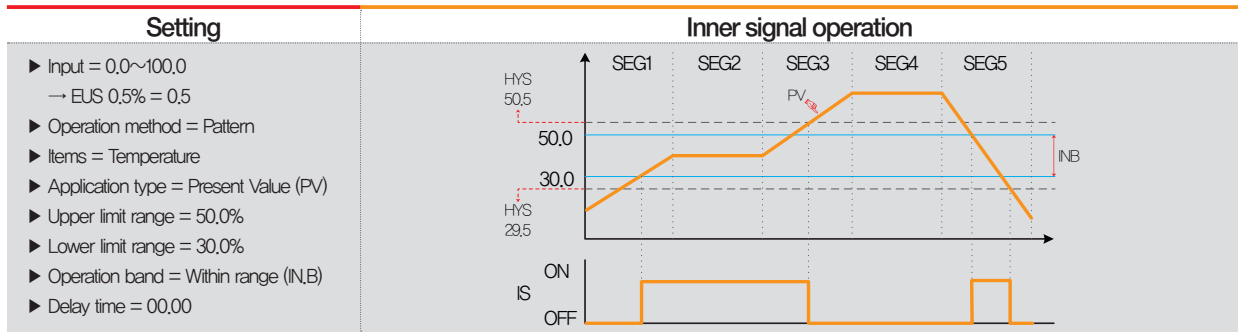


- ▶ Input = 0.0~100.0
→ EUS 0.5% =0.5
- ▶ Operation method = Pattern
- ▶ Items = Humidity
- ▶ Application type = Present Value (PV)
- ▶ Upper limit range = 50.0%
- ▶ Lower limit range = 30.0%
- ▶ Operation band = Out of range (OUT.B)
- ▶ Delay time = 00.00

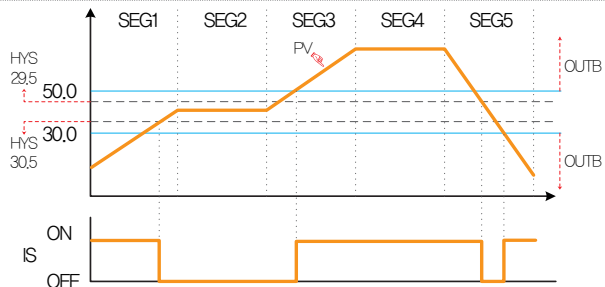

- ▶ Input = 0.0~100.0
- ▶ Operation method = Pattern
- ▶ Items = Humidity
- ▶ Application type = Present Value (PV)
- ▶ Upper limit range = 50.0%
- ▶ Lower limit range = 30.0%
- ▶ Operation band = Within range (IN.B)
- ▶ Delay time = 00.10

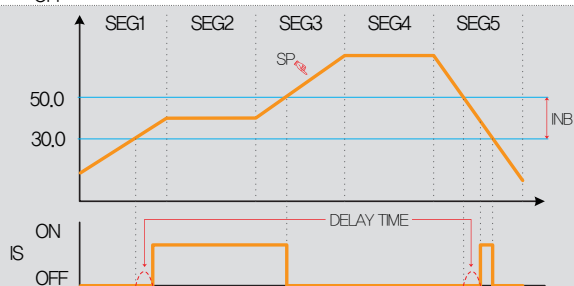

- ▶ Input = 0.0~100.0
- ▶ Operation method = Pattern
- ▶ Items = Humidity
- ▶ Application type = Present Value (PV)
- ▶ Upper limit range = 50.0%
- ▶ Lower limit range = 30.0%
- ▶ Operation band = Out of range (OUT.B)
- ▶ Delay time = 00.00

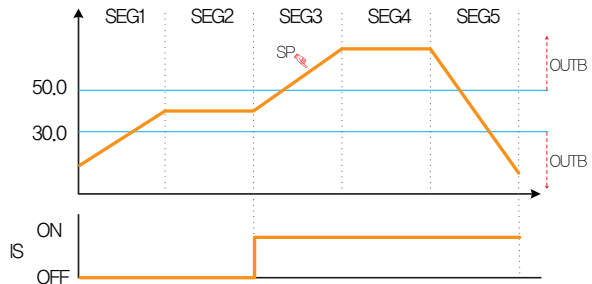

Part 06

ON/OFF & Logic

6-1 ON/OFF signal setting	50
6-2 ON/OFF signal operation	52
6-3 Logic signal setting	54



Setup TEMPERATURE ON/OFF SIGNAL Next

▶ T1 ~ T9 SIGNAL

	LOW SP	MIDDLE SP	HIGH SP	HIGH DEV	LOW DEV
T1(°C)	-50.00	-50.00	-50.00	0.00	0.00
T2(°C)	-50.00	-50.00	-50.00	0.00	0.00
T3(°C)	-50.00	-50.00	-50.00	0.00	0.00
T4(°C)	-50.00	-50.00	-50.00	0.00	0.00
T5(°C)	-50.00	-50.00	-50.00	0.00	0.00
T6(°C)	-50.00	-50.00	-50.00	0.00	0.00
T7(°C)	-50.00	-50.00	-50.00	0.00	0.00
T8(°C)	-50.00	-50.00	-50.00	0.00	0.00
T9(°C)	-50.00	-50.00	-50.00	0.00	0.00

[Fig. 6-1] Temperature ON/OFF signal setting screen

Setup LOGICAL SIGNAL SET Next

▶ LOGICAL SIGNAL1

FALSE	TRUE	FALSE	TRUE
A-TYPE	A-TYPE	A-TYPE	A-TYPE
00.00 M.S	00.00 M.S	00.00 M.S	00.00 M.S

AND AND AND AND

▶ LOGICAL SIGNAL2

FALSE	TRUE	FALSE	TRUE
A-TYPE	A-TYPE	A-TYPE	A-TYPE
00.00 M.S	00.00 M.S	00.00 M.S	00.00 M.S

AND AND AND AND

[Fig. 6-3] Logic signal setting screen

Setup HUMIDITY ON/OFF SIGNAL Next

▶ H1 ~ H4 SIGNAL

	LOW SP	MIDDLE SP	HIGH SP	HIGH DEV	LOW DEV
H1(%)	0.0	0.0	0.0	0.0	0.0
H2(%)	0.0	0.0	0.0	0.0	0.0
H3(%)	0.0	0.0	0.0	0.0	0.0
H4(%)	0.0	0.0	0.0	0.0	0.0

[Fig. 6-2] Humidity ON/OFF signal setting screen

Setup LOGICAL SIGNAL SET Next

▶ LOGICAL SIGNAL7

FALSE	TRUE	FALSE	TRUE
A-TYPE	A-TYPE	A-TYPE	A-TYPE
00.00 M.S	00.00 M.S	00.00 M.S	00.00 M.S

AND AND AND AND

▶ LOGICAL SIGNAL8

FALSE	TRUE	FALSE	TRUE
A-TYPE	A-TYPE	A-TYPE	A-TYPE
00.00 M.S	00.00 M.S	00.00 M.S	00.00 M.S

AND AND AND AND



[Fig. 6-3] Logic signal setting screen



06. ON/OFF & Logic

6-1. ON/OFF signal setting

- It is a screen to set the range, upper, lower deviation of ON/OFF signal.
- Can set nine pcs of temperature ON/OFF signals and four pcs of humidity ON/OFF signals
- Setting of relay number and delay time is available in [10-1(3) Temperature ON/OFF and Humidity ON/OFF signal relay setting screen].

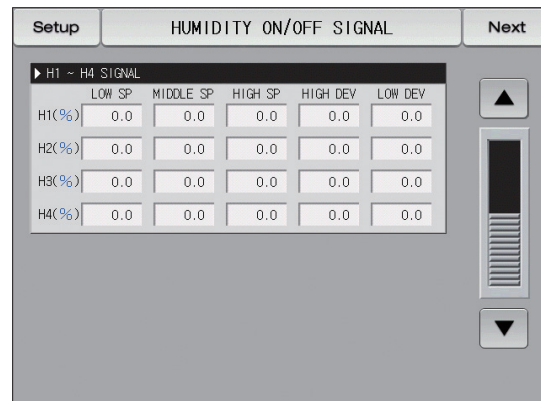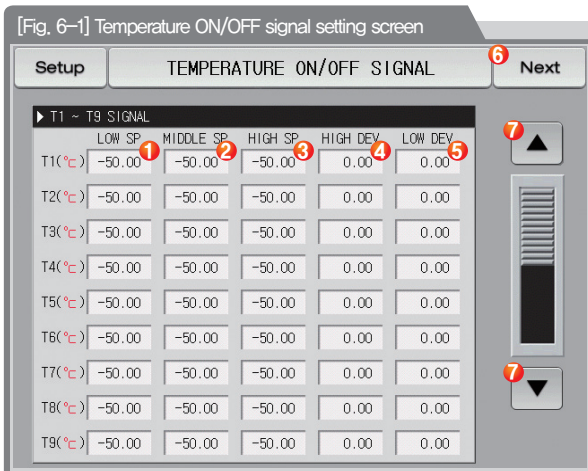

[Fig. 6-2] Humidity ON/OFF signal setting screen

- ① Setting of lower limit SP boundary in ON/OFF signal operation
- ② Setting of medium limit SP boundary in ON/OFF signal operation
- ③ Setting of upper limit SP boundary in ON/OFF signal operation

- ④ Setting of operation point in upper limit range
- ⑤ Setting of operation point in lower limit range
- ⑥ Moving from current screen to next screen
- ⑦ Moving to the next and previous screen using up/down button.

Parameter	Setting range	Unit	Initial data
Temperature T#n LOW SP	T.EU(0.00~100.00%)	T.EU	T.EU(0.00%)
Temperature T#n MIDDLE SP	Temp lower limit rang ≤ Temp T#n LOW SP < Temp T#n	T.EU	T.EU(0.00%)
Temperature T#n HIGH SP	MIDDLE SP < Temp T#n HIGH SP ≤ Temp upper limit range	T.EU	T.EU(0.00%)
Temperature T#n HIGH deviation	T.EUS(0.00~20.00%)	T.EUS	T.EUS(0.00%)
Temperature T#n LOW deviation	T.EUS(0.00~20.00%)	T.EUS	T.EUS(0.00%)
Humidity H#m LOW SP	H.EU(0.0~100.0%)	H.EU	H.EU(0.0%)
Humidity H#m MIDDLE SP	Humi lower limit rang ≤ Humi H#m LOW SP < Humi H#m	H.EU	H.EU(0.0%)
Humidity H#m HIGH SP	MIDDLE SP < Humi H#m HIGH SP ≤ Humi upper limit range	H.EU	H.EU(0.0%)
Humidity H#m HIGH deviation	H.EUS(0.0~10.0%)	H.EUS	H.EUS(0.0%)
Humidity H#m LOW deviation	H.EUS(0.0~10.0%)	H.EUS	H.EUS(0.0%)

※ It can be set for #n= 1~9. ※ It can be set for #m= 1~4.


References

- ▶ High, low deviation motion explanation
 - High deviation operation
 - ① Middle SP < Present value (PV) ≤ In case of upper limit SP
Present value (PV) ≥ Present set value (SP) + High deviation : The operation is "ON"
Present value (PV) < Present set value (SP) + High deviation : The operation is "OFF"
 - Low deviation operation
 - ② Lower limit SP ≤ Present value (PV) < In case of middle SP
Present value (PV) ≥ Present set value (SP) – Low deviation : The operation is "ON"
Present value (PV) < Present set value (SP) – High deviation : The operation is "OFF"
- ※ Refer to [6-2 ON/OFF signal operation]


6-2. ON/OFF signal operation

- Delay time is the set time in ON/OFF signal delay time in DO relay setting.
- LSP = LOW SP, MSP = MIDDLE SP, HSP = HIGH SP, NPV = NOW PV, NSP = NOW SP
- LD = LOW Deviation, HD = HIGH Deviation, T = ON/OFF signal


▶ ON/OFF signal operation depending on PV

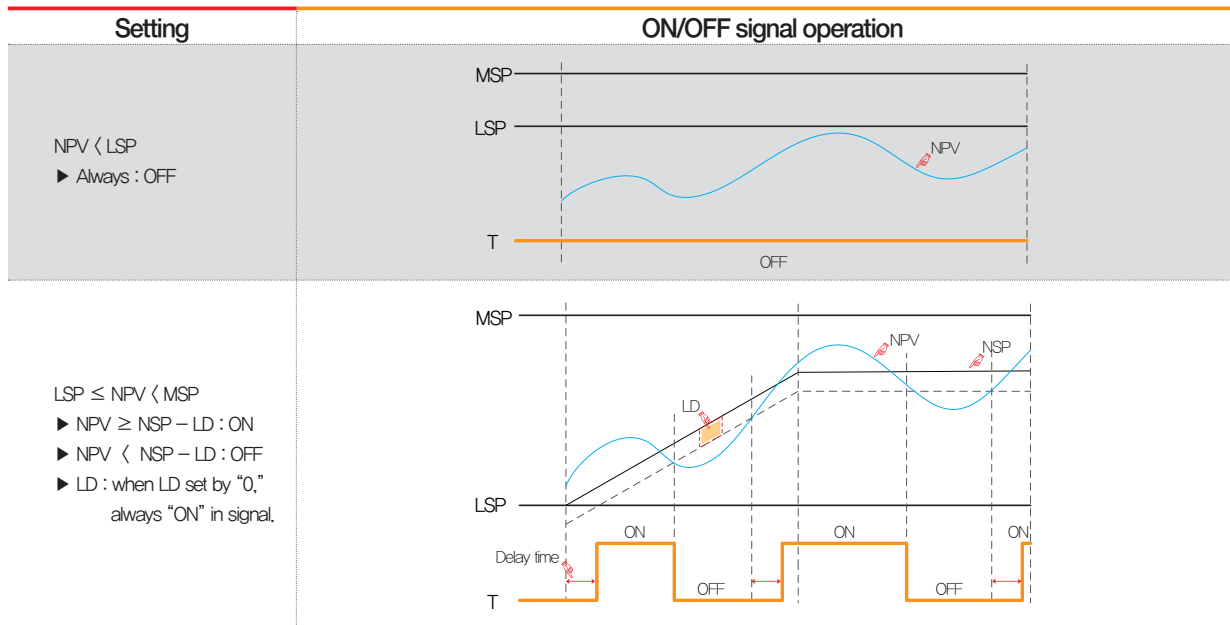

- $MSP < NPV \leq HSP$
- ▶ $NPV \geq NSP + HD$: ON
 - ▶ $NPV < NSP + HD$: OFF
 - ▶ HD : when HD set by "0,"
always "OFF" in signal.


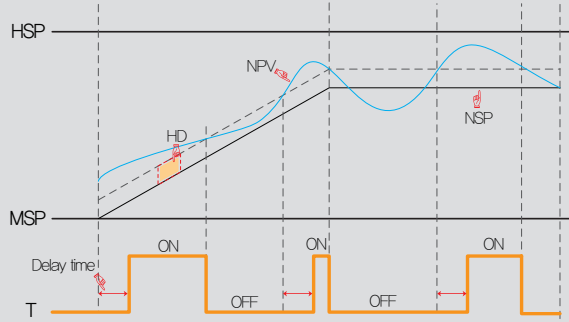


- $NPV > HSP$
- ▶ Always : OFF

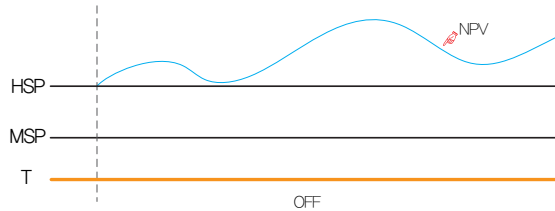

6-3. Logic signal setting

- It is a screen to set the logic signal.
- The logic signal can be set up to 8.

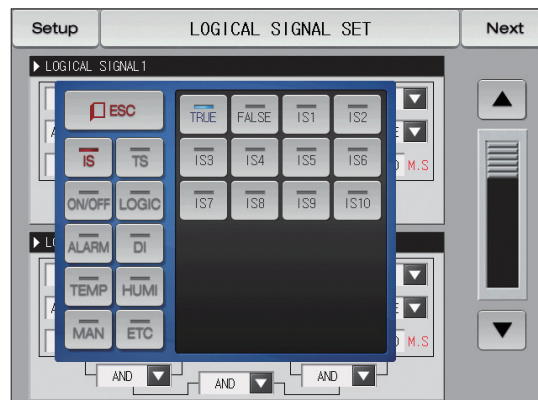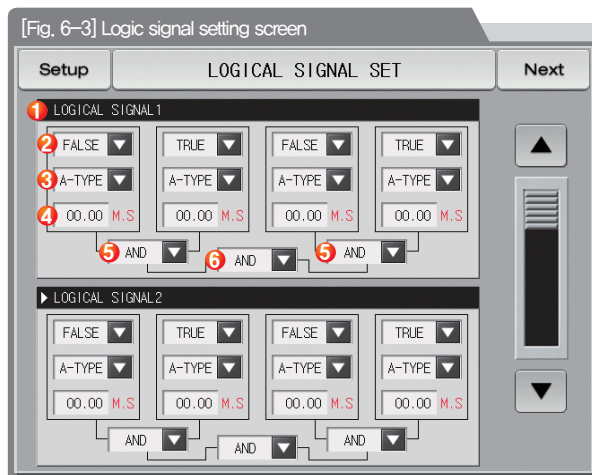


[Fig. 6-4] Applicable object of logic signal setting screen

- ① Set to operation condition for logic signal
- ② Select to applicable object of logic signal
 - Refer to [Table 6-1]
- ③ Set to output method of application of the operation signal
 - A-Contact : Output contact is connected, when signal of applicable object is activated
 - B-Contact : Output contact is disconnected, when signal of applicable object is activated


- ④ Set to delay time when the output of the application of the logic signal is activated
- ⑤ Set to applicable operator when logic signal works.
- ⑥ Set to applicable operator for two logic groups calculated from number ⑤

References


- ▶ It does not apply to delay time and method of output when selecting a TRUE / FALSE.

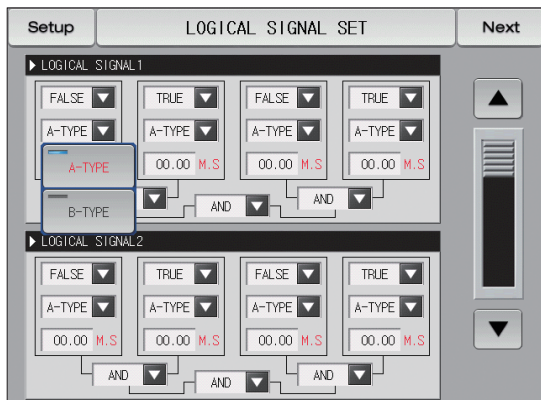


[Fig. 6-5] Setting screen of the sensing method of the logic signal

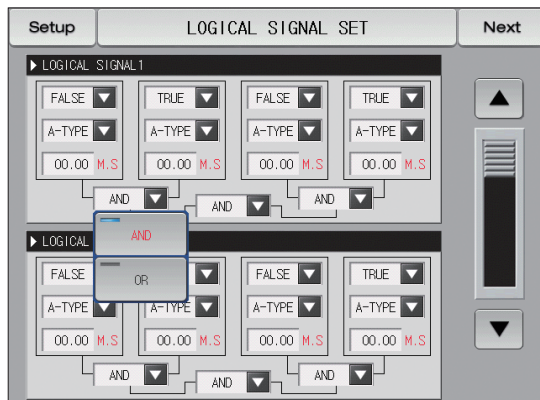

[Fig. 6-7] Logic signal operator setting screen

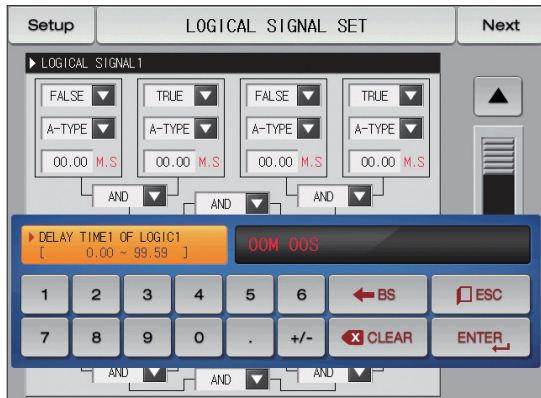

[Fig. 6-6] Logic signal delay time setting screen

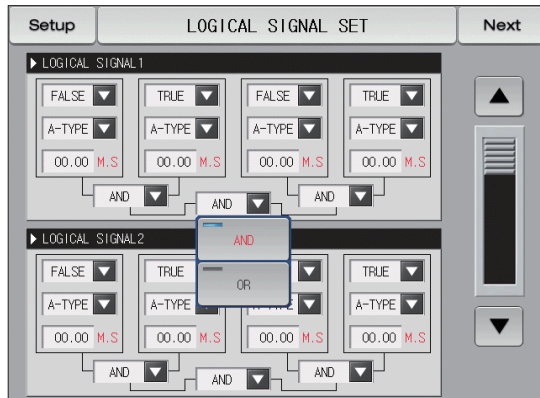

[Fig. 6-8] Logic signal operation setting screen


[Table 6-1] Forms of logic signal parameter

Parameter	Setting range		Unit	data
	Display	Logic type		
Logic signal#n applicable object	IS	TRUE, FALSE, IS1~IS10	ABS	FALSE
	TS	TRUE, FALSE, TS1~TS4	ABS	FALSE
	ON/OFF	TRUE, FALSE, T1~T10, H1~H5	ABS	FALSE
	LOGIC	TRUE, FALSE, LOG1~LOG8	ABS	FALSE
	ALARM	TRUE, FALSE, AL1~AL8	ABS	FALSE
	DI	TRUE, FALSE, DI 1~DI 16	ABS	FALSE
	TEMP	TRUE, FALSE, T.RUN, T.SOPN, T.WAIT, T.UP, T.SOAK, T.DOWN, T.FTM	ABS	FALSE
	HUMI	TRUE, FALSE, H.RUN, H.SOPN, H.WAIT, H.UP, H.SOAK, H.DOWN, H.FTM	ABS	FALSE
	MAN	TRUE, FALSE, MAN1~MAN12	ABS	FALSE
	ETC	TRUE, FALSE, U-KEY, F.END, PT.END, DRAIN, ERROR, 1.REF, 2.REF, HOLD	ABS	FALSE
Logic signal#n output method	A-Contact, B-Contact		ABS	A-Contact
Logic signal#n delay time	00.00~99.99 (MIN,SEC)		ABS	00.00
Logic signal#n operator	AND, OR		ABS	AND

※ #n : 1 ~ 8

References

- ▶ AND : When both ON, the logic output relay is "ON"
- ▶ OR : Arithmetic output relay is "ON", when more than one of logic signal object outputs are "ON".
- ▶ TRUE : Outputs of logic signal applicable object are calculated to "ON"
- ▶ FALSE : Outputs of logic signal applicable object are calculated to "OFF"

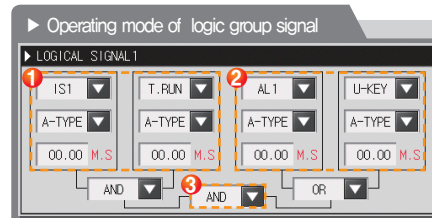

Example) Logic group signal parameter

1 Logic group 1		
IS1	T.RUN	Output
OFF	OFF	OFF
OFF	ON	OFF
ON	OFF	OFF
ON	ON	ON

⟨Logic group 1 AND Output⟩

2 Logic group 2		
AL1	U-KEY	Output
OFF	OFF	OFF
OFF	ON	ON
ON	OFF	ON
ON	ON	ON

⟨Logic group 2 OR Output⟩

※ When select to B-contact as output condition, operation of the ON / OFF is reversed.

3 Logic group 1 Output (AND) Logic group 2 Output		
Logic group 1 Output	Logic group 2 Output	Output
OFF	OFF	OFF
OFF	ON	OFF
ON	OFF	OFF
ON	ON	ON

⟨Logic group 1 and Logic group 2 AND Output⟩

Part **07**

Alarm signal

7-1 Alarm signal setting	60
7-2 Alarm signal operation	65

Alarming signal flow chart



Next Flow chart




Flow chart



[Fig. 7-1] Alarm signal selection #1 in screen 1



[Fig. 7-3] Alarm signal selection #1 in screen 2

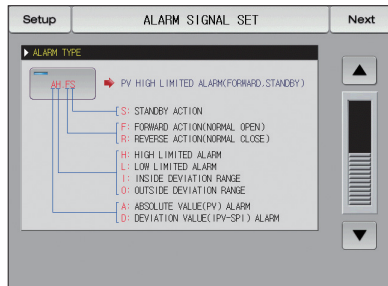

[Fig. 7-2] Alarm signal selection #2 in screen 1




[Fig. 7-3] Alarm signal selection #1 in screen 2



07. Alarm signal

7-1. Alarm signal setting

(1) Alarm signal setting screen 1

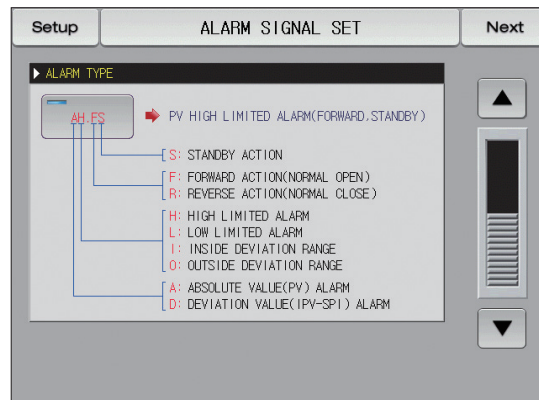

[Fig. 7-2] Alarm signal selection #2 in screen 1

Set the alarm operate condition 1~8

- ①
- Operation : The alarm operation is performed only during operation.
 - Always : The alarm operation is performed always regardless of operation/stop.


② Moving from current screen to next screen

③ Moving to the next and previous screen using up/down button.

Parameter	Setting range	Unit	Initial data
Alarm operation	Run, Always	ABS	Always

(2) Alarm signal setting screen 2

- It is a screen to set the alarm for temperature and humidity
- Alarm signals can be set max. 8 points
- There are 20 types of alarm signal.

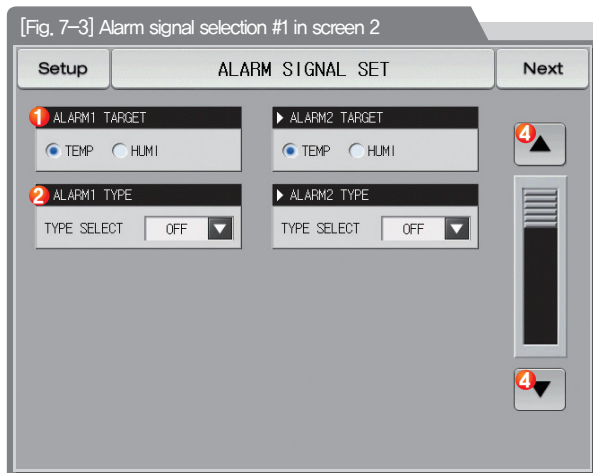

- ① Setting of alarm signal target
- ② Setting of alarm signal type
- ③ Selection of the alarm signal type to be used
 - Refer to [Table 7-1 Alarm type]
- ④ Moving to the next and previous screen using up/down button.

[Fig. 7-5] Alarm signal selection #3 in screen 2

Setup	ALARM SIGNAL SET	Next
ALARM1 TARGET		
TEMP <input checked="" type="radio"/> HUM1 <input type="radio"/>		
ALARM1 TYPE		
TYPE SELECT AH.F ▼		
ALARM1 PARAMETER		
1 POINT	150.00 °C	
2 HYSTERESIS	1.00 °C	
3 DELAY TIME	00.00 M.S	
ALARM2 TARGET		
TEMP <input checked="" type="radio"/> HUM1 <input type="radio"/>		
ALARM2 TYPE		
TYPE SELECT DO.F ▼		
ALARM2 PARAMETER		
4 HIGH POINT	200.00 °C	
5 LOW POINT	200.00 °C	
2 HYSTERESIS	1.00 °C	
3 DELAY TIME	00.00 M.S	

References

▶ When the alarm type was set in AH,F and DO,F in [Fig. 7-4 Alarm signal selection screen #2], the following screen is displayed.

- ① Setting of alarm setting data
- ② Setting of hysteresis data to be applied to release after alarming
- ③ Setting of delay time to be applied during alarm signal operation
- ④ Setting of upper limit deviation data in alarming for deviation
- ⑤ Setting of lower limit deviation data in alarming for deviation


Parameter	Setting range	Unit	Initial data
Alarm #n target	Temperature, Humidity	ABS	Temperature
Alarm #n type	No use, AH,F, AL,F, DH,F, DL,F, DH,R, DL,R DO,F, DI,F, AH,R, AL,R, AH,FS, AL,FS DH,FS, DL,FS, DH,RS, DL,RS, DO,FS, DI,FS, AH,RS, AL,RS	ABS	No use
Alarm #n POINT	T,EU(-5.00~105.00%) / H,EU(-5.0~105.0%)	T,EU / H,EU	EU(100.0%) (Alarm#n type = is not one of alarming for deviation)
Alarm #n upper limit POINT	T,EUS(-100.00~100.00%) / H,EUS(-100.0~100.0%)	T,EUS / H,EUS	EUS(0.0%) (Alarm#n type = is one of alarming for deviation)
Alarm #n lower limit POINT			
Alarm #n hysteresis	T,EUS(0.00~100.00%) / H,EUS(0.0~100.0%)	T,EUS / H,EUS	T,EUS(0.50%) / H,EUS(0.5%)
Alarm #n delay time	00,00~99,59 (MIN,SEC)	ABS	00,00


※ #n : 1 ~ 8

[Table 7-1] Alarm type

Display	Alarm type		Output direction		Standby motion	
	Absolute data operation	Deviation motion	Normal operation	Reverse operation	Yes	No
AH,F	Indicated data upper limit		■		■	
AL,F	Indicated data upper limit		■		■	
DH,F		Deviation upper limit	■		■	
DL,F		Deviation lower limit	■		■	
DH,R		Deviation upper limit		■	■	
DL,R		Deviation lower limit		■	■	
DO,F		Out of upper limit,lower limit deviation range	■		■	
DI,F		Within upper limit,lower limit deviation range	■		■	
AH,R	Indicated data upper limit			■	■	
AL,R	Indicated data upper limit			■	■	
AH,FS	Indicated data upper limit		■			■
AL,FS	Indicated data upper limit		■			■
DH,FS		Deviation upper limit	■			■
DL,FS		Deviation lower limit	■			■
DH,RS		Deviation upper limit		■		■
DL,RS		Deviation lower limit		■		■
DO,FS		Out of upper limit,lower limit deviation range	■			■
DI,FS		Within upper limit,lower limit deviation range	■			■
AH,RS	Indicated data upper limit			■		■
AL,RS	Indicated data upper limit			■		■

7-2. Alarm signal operation

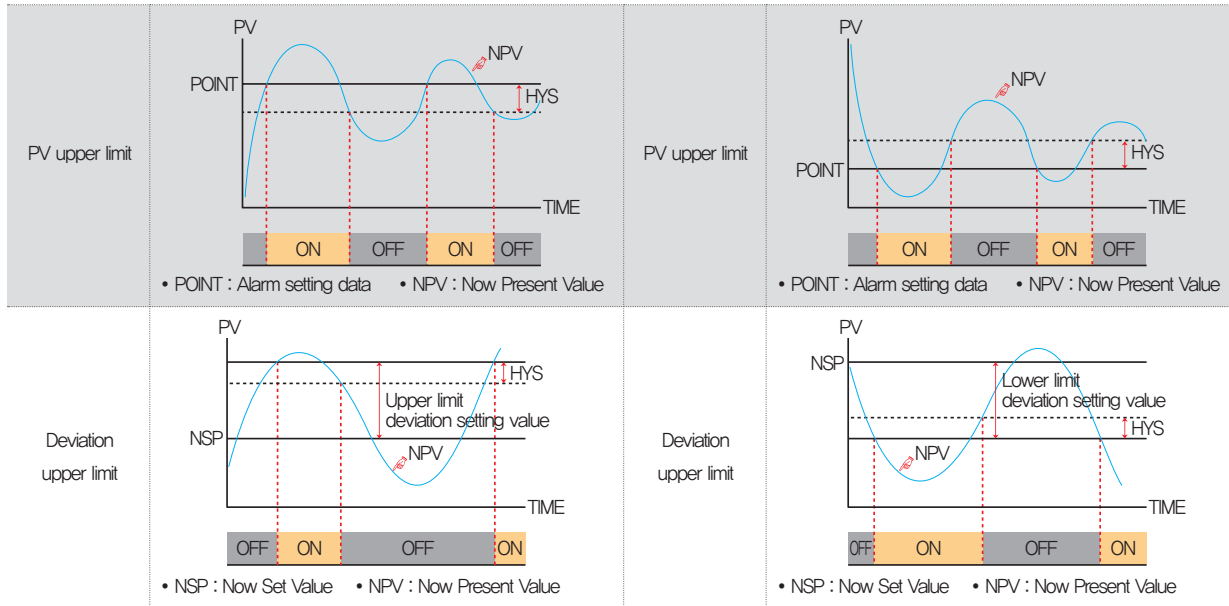

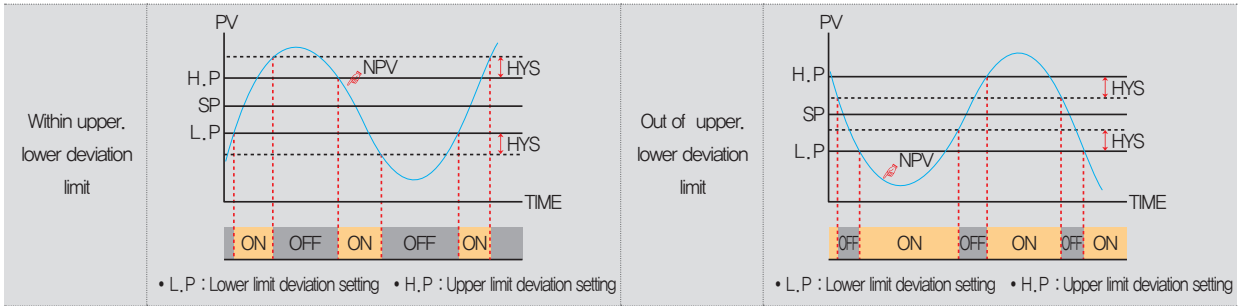

References

▶ HYS(HYSTERESIS) : HYS (Hysterisis): It is a deviation applied in recovery (OFF) after alarming (ON). The initial data is EUS (0.5%) and it is not operated when EUS(0.0%) is set.

Main	FIX OPERATION RUN		Next
TEMPERATURE °C 19.95 SP: 50.00 MV: 19.5%		HUMIDITY % 100.0 SP: 30.0 MV: 13.2%	
		IS1	IS2
		IS3	IS4
		IS5	IS6
		IS7	IS8
		TS1	TS2
		TS3	TS4
		AL1	AL2
		AL3	AL4
RUNNING PID NUMBER: 1		AL5	AL6
TOTAL PROCESS TIME: 0000H00M06S		AL7	T.RUN
		H.RUN	1.REF
		2.REF	DRAIN
14.02.26 09:48 PM		Temp-AT	Humi-AT
		Stop	

[Fig. 7-6] Alarm operation screen

Part 08

PID Group

8-1 PID application range setting screen 1	69
8-2 PID application range setting screen 2	71
8-3 PID application range setting screen	72
8-4 PID group setting screen	74

PID Group flow chart



Next Flow chart



Flow chart

Setup	PID RANGE SET	Next
<p>TEMP & HUMI</p> <p>TEMP: 3, 6, 2, 5, 1, 4</p> <p>HUMI: FH 100.0 %, H2 66.7 %, HI 33.3 %, RL 0.0 %</p> <p>DRY L 0.00 °C, T1 50.00 °C, DRY H 100.00 °C</p>		

[Fig. 8-1] PID application range setting screen #1

Setup	PID RANGE SET	Next
<p>TEMP ONLY</p> <p>7, 8, 9</p> <p>RL -50.00 °C, T2 16.67 °C, T3 83.33 °C, RH 150.00 °C</p>		

[Fig. 8-2] PID application range setting screen #2

Setup	CONTROL PROPERTY	Next
<p>TUNING KEY DISPLAY: <input type="radio"/> HIDE <input checked="" type="radio"/> DISPLAY</p> <p>HUMI CONTROL MODE: <input type="radio"/> MODE0 <input checked="" type="radio"/> MODE1</p> <p>TUNING POINT: TEMPERATURE 0.10 %, HUMIDITY 0.10 %</p> <p>PID COPY: SOURCE 1, TARGET 1</p> <p>Copy</p>		

[Fig. 8-3] PID application range setting screen #3



Setup	PID GROUP 1	Next
<p>TEMP PID: P 5.0 %, I 120 SEC, D 30 SEC</p> <p>HUMI PID: P 5.0 %, I 120 SEC, D 30 SEC</p> <p>TEMP OUTPUT LIMIT: HIGH LIMIT 100.0 %, LOW LIMIT 0.0 %</p> <p>HUMI OUTPUT LIMIT: HIGH LIMIT 100.0 %, LOW LIMIT 0.0 %</p>		

[Fig. 8-4] PID group setting screen



Setup	PID GROUP 9	Next
<p>TEMP PID: P 5.0 %, I 120 SEC, D 30 SEC</p> <p>TEMP OUTPUT LIMIT: HIGH LIMIT 100.0 %, LOW LIMIT 0.0 %</p>		


[Fig. 8-4] PID group setting screen



08. PID Group

8-1. PID application range setting screen 1

- It is composed of six pcs of temperature + humidity PID and three pcs of temperature only PID.
- It is displayed in light yellowish green in the corresponding PID No. in stationary program operation.

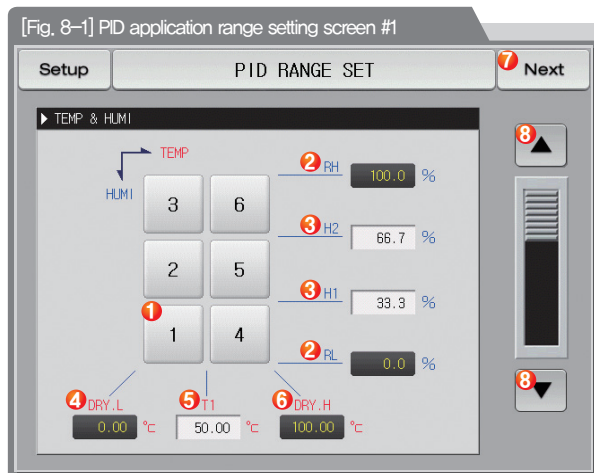


- ① Moving to the corresponding PID group setting screen when the number is pressed.
 - Moving to the PID group setting screen when **Next** is pressed.
- ② RH, RL : It displays the range for entire range of humidity.
 - Not changeable as it is only for reading
- ③ H1, H2 : It sets the boundary value of the PID range for entire humidity scale.
- ④ DRY.L : It displays the lower limit of the dry-bulb temperature input for displaying the humidity.
 - Not changeable as it is only for reading
- ⑤ T1 : It sets the boundary value to classify the range PID for the dry-bulb temperature span for humidity.
- ⑥ DRY.H : It displays the upper limit of the dry-bulb temperature input for displaying the humidity.
 - Not changeable as it is only for reading
- ⑦ Moving from current screen to next screen
- ⑧ Moving to the next and previous screen using up/down button.

Parameter	Setting range	Unit	Initial data
Temperature boundary value1 (T1)	DRY.L < T1 < DRY.H	ABS	(DRY.L + DRY.H) / 2
Humidity boundary value1 (H1)	H.EU(0.0 ~ 100.0%)	H.EU	(RH - RL) / 3
Humidity boundary value2 (H2)	RL < H1 < H2 < RH	H.EU	2(RH - RL) / 3


► Proportion band(P) : It controls to the direction to reduce the deviation between Now Present Value (NPV) and target value (SP)

Proportion band(P) increase



Now Present Value (NPV) approaches slowly to the target value (SP), but overshoot is reduced.


Proportion band(P) decrease

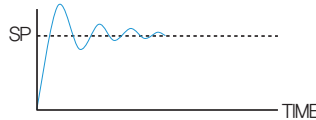

Now Present Value (NPV) approaches to the target value (SP) faster, but overshoot and hunting are taken place.


► Integral time(I) : It controls to the direction to reduce the residual deviation which can be taken place in proportion(P) control.

Integral time(I) increase



The approaching time of Now Present Value (NPV) to the target value (SP) becomes longer, but overshoot and hunting are reduced.


Integral time(I) decrease



The hunting is created and Now Present Value (NPV) approaches to the target value (SP) faster, but it can reach to the uncontrollable condition.


► Derivative time(D) : It controls to the direction to reduce the changing rate of deviation between the Now Present Value (NPV) and target value (SP) in abrupt temperature change.

Derivative time(D) increase



The overshoot and undershoot are decreased, but minor hunting can be taken place.


Derivative time(D) decrease



The overshoot and undershoot are created and it takes time for Now Present Value (NPV) to reach to the target value (SP).

8-2. PID application range setting screen 2

- It is a screen which shows temperature PID group only

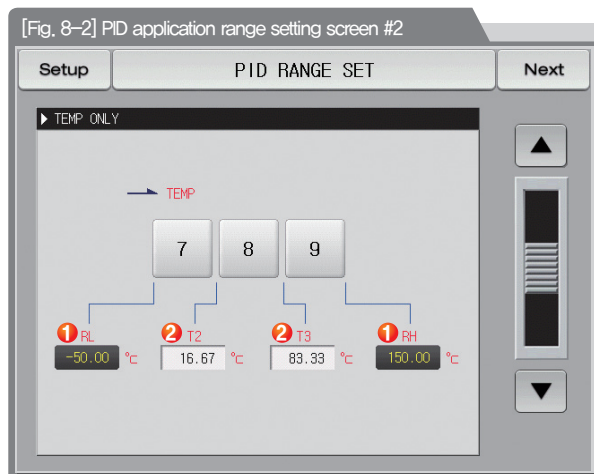


- ① RH, RL : It displays the whole range of temperature span without displaying the humidity.
 - Not changeable as it is only for reading
- ② T2, T3 : It sets the boundary value to classify the whole temperature range PID (Zone PID without displaying the humidity.

Parameter	Setting range	Unit	Initial data
Temperature boundary value2 (T2)	T,EU(0.00 ~ 100.00%)	T,EU	$RL + (RH - RL) / 3$
Temperature boundary value3 (T3)	$RL < T2 < T3 < RH$	T,EU	$RL + 2(RH - RL) / 3$

8-3. PID application range setting screen

- It is a screen to set the parameters related to the control characteristics in PID control and to copy the time constant between PID groups.

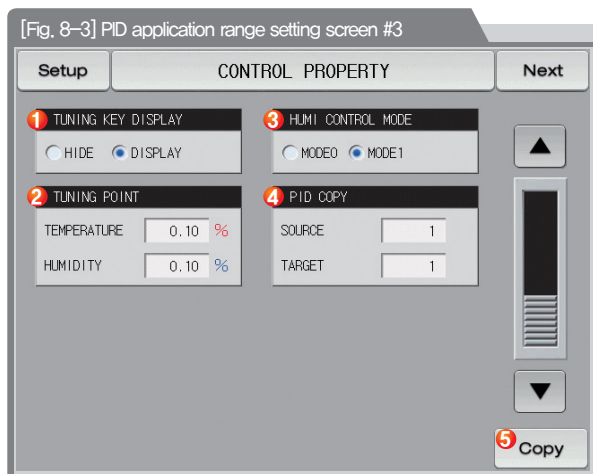

- | | |
|---|---|
| ① | <p>Setting the Y/N for displaying the auto tuning key in operation screen</p> <ul style="list-style-type: none"> Refer to [Fig. 3-6 Stationary operation operation screen #2] and [Fig. 3-13 Program operation operation screen #2] in [Operation manual] |
| ② | <p>It sets the Auto-Tuningpoint of temperature, humidity applied during Auto-Tuning.</p> |
| ③ | <p>It sets types of humidity control method.</p> <ul style="list-style-type: none"> Mode 0 : Used in case of adopting the direct reading sensor (DCV) for humidity. Plus, for better stabilized results, recommend using at wider internal area controlling. Mode 1 : Used in case of adopting PT or DCV sensor for humidity side. Plus, for better stabilized results, recommend using at smaller internal area controlling. |
| ④ | <p>It sets for the original and target number to be copied.</p> <ul style="list-style-type: none"> Set copy both temperature PID data and humidity PID data if the original PID is 1 to 6 and target PID is 1 to 6 or (ALL). However, PID 7 to 9 copy the temperature data only. Set Copy only temperature PID data, if the original PID is 7 to 9 and target PID is 7 to 9 or (ALL). However, PID 1 to 6 copy the temperature data only. |
| ⑤ | <p>Copy the set PID time constant</p> |

Parameter		Setting range	Unit	Initial data
Y/N for tuning key display		Hiding, Display	ABS	Display
Temperature Auto-Tuning criticality value		0.01 ~ 1.00%	%	0.10
Humidity Auto-Tuning criticality value		0.01 ~ 1.00%	%	0.10
Humidity control type		Mode 0, Mode 1	ABS	Mode 1
Copy	Original to be copy	1 ~ 9	ABS	1
	Target to be copy	0(ALL) ~ 9	ABS	1

8-4. PID group setting screen

- It is a screen to set the details for each PID group.
- It sets PID group 1~6 in temperature and humidity respectively.
- It sets PID group 7~9 in temperature.



Proportion (P) range : It controls to the direction to reduce the deviation between Set Value (SP) and Present Value (PV)

- ① When the proportional constant is small, the present value (PV) approaches to the set value (SP) quickly, but the control output value (MV) is oscillated and it makes bad influence on the stability of control.
- When the proportional constant is large, the present value (PV) approaches to the set value (SP) quickly, but there is a possibility to create the residual deviation.

Integral time (I) : When the integral time becomes longer, the time to approach to the set value (SP) is extended as the control output value (MV). When the integral time becomes shorter, the time to approach to the set value(SP) is shortened as the control output value (MV) becomes larger.

- ②
- The integral motion removes the residual deviation to be created in P operation.
- The control is impossible when the integral time is too short.

Derivative (D) time : It prevents the change of deviation (PV-SP) by calculating the control output (MV) corresponding to the deviation (PV-SP) change rate.

- ③
- The approach to the set value (SP) becomes speedier and it prevents the abrupt change or external disturbance in present value (PV).

Output upper limit · lower limit : Setting the upper · lower value of the control output operation range

- ④
- It is operated in 0%, 100% output data regardless of the set limit value and upper limit for output during auto tuning.

Parameter	Setting range	Unit	Initial data
#n Temperature proportional band	0.1~1000.0	%	5.0
#n Temperature integral time	0~6000	SEC	120
#n Temperature derivative time	0~6000	SEC	30
#n Temperature output upper limit	0.0~100.0 %	ABS	100.0
#n Temperature output lower limit	#n Temp output lower limit < #n Temp output upper limit	ABS	0.0
#m Humidity proportional band	0.1~1000.0	%	5.0
#m Humidity integral time	0~6000	SEC	120
#m Humidity derivative time	0~6000	SEC	30
#m Humidity output upper limit	0.0~100.0 %	ABS	100.0
#m Humidity output lower limit	#m Humi output lower limit < #m Humi output upper limit	ABS	0.0

※ #n : 1 ~ 9

※ #m : 1 ~ 6

Part 09

Setting communication environment

9-1 RS232C/485 Communication setting	77
9-2 Communication environment setting screen	78




09. Setting communication environment

9-1. RS232C/485 Communication setting


- When TEM1000 is RS232C/485 communication is provided basically.
- It was set in RS232C at the delivery from the factory.
- The necessity of changing into RS 485 is shown as follows.
 - ① To disassemble the cover, Insert and push into the right side crack on communication part with small driver from [Fig 9-1 TEM1000 display part]
 - ② Take out short pin in RS232C and move to RS485.
 - ③ Move the location of short pin using pincer (other device).
 - ④ Finally, Insert Cover of communication writed RS-485 into the crack and press side of writed RS-232C for assembling.

Be carefull not to change the upper/lower of communication COVER when assemble this. (Caution 1)

[Fig. 9-1] TEM1000 Display part

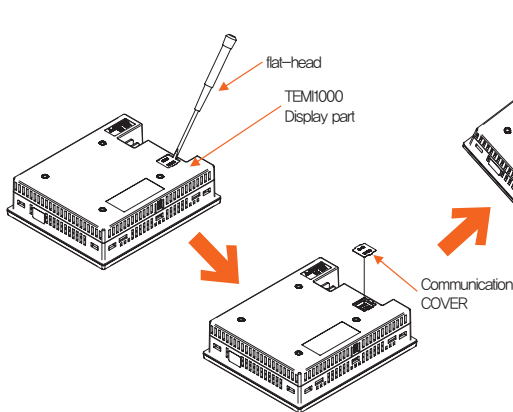


[Fig. 9-2] Serial communication setting

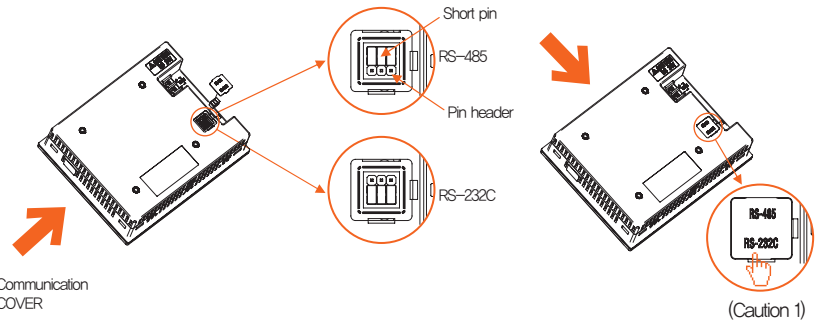

9-2. Communication environment setting screen

- It is a screen to set the communication conditions such as communication protocol and speed.

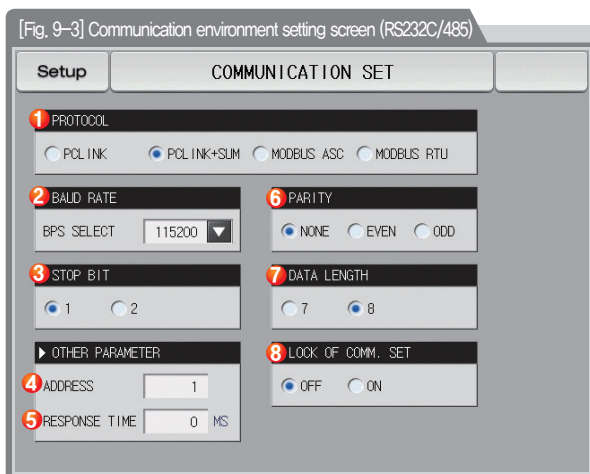

- ① Setting the communication
 - Setting the communication speed
- ②
 - Refer to [Communication speed setting screen in [Fig. 9-4 in communication environment]
- ③ Setting the stop beat
 - Setting the communication address
- ④
 - In case of RS485 communication, it can be used by defining address differently up to maximum 99
- ⑤ Setting the response time
 - Setting the parity
 - NONE: No parity
 - EVEN: Even number parity
 - ODD: Odd number parity
 - Setting the data length
 - ⑦ • The data length is fixed in 7, when communication protocol is set in MODBUS ASC.
 - The data length is fixed in 8, when communication protocol is set in MODBUS RTU.
- ⑧ Set to lock operation for related communication COMMAND transmitting / receiving
 - Operation setting of communication parameters can not be changed

Setup	COMMUNICATION SET	
▶ PROTOCOL		
<input type="radio"/> PC LINK <input checked="" type="radio"/> PC LINK+SUM <input type="radio"/> MODBUS ASC <input type="radio"/> MODBUS RTU		
▶ BAUD RATE		▶ PARITY
BPS SELECT	115200	<input type="radio"/> EVEN <input type="radio"/> ODD
▶ STOP BIT		▶ DATA LENGTH
<input checked="" type="radio"/> 1 <input type="radio"/> 2		<input checked="" type="radio"/> 8
▶ OTHER PARAMETER		▶ COMM. SET
ADDRESS	1	<input type="radio"/> ON <input type="radio"/> OFF
RESPONSE TIME	0 MS	

[Fig. 9-4] Communication speed setting screen in communication environment

Parameter	Setting range	Unit	Initial data
Communication protocol	PC LINK, PC LINK + SUM, MODBUS ASC, MODBUS RTU	ABS	PC LINK + SUM
Communication speed	9600, 19200, 38400, 57600, 115200	ABS	115200
Stop beat	1, 2	ABS	1
Parity	NONE, EVEN, ODD	ABS	NONE
Data length	7, 8	ABS	8
Communication address	1 ~99	ABS	1
Response time	0~10	ABS	0

Part 10

DO relay output

10-1 Relay No. and parameter setting	83
10-2 UP, SOAK, DOWN signal operation	98

DO relay output flow chart

Next Flow chart

Setup	DO CONFIGURATION				Next
▶ INNER SIGNAL					
IS1 RELAY	<input type="checkbox"/> 0	ISS RELAY	<input type="checkbox"/> 0		
IS2 RELAY	<input type="checkbox"/> 0	IS7 RELAY	<input type="checkbox"/> 0		
IS3 RELAY	<input type="checkbox"/> 0	ISS RELAY	<input type="checkbox"/> 0		
ISA RELAY	<input type="checkbox"/> 0	IS9 RELAY	<input type="checkbox"/> 0		
ISS RELAY	<input type="checkbox"/> 0	IS10 RELAY	<input type="checkbox"/> 0		
▶ I/O BOARD					
ITEM	TYPE OF DO OUTPUT	NUMBER			
STANDARD	RELAY(A CONTACT)	1 ~ 8			
	RELAY(C CONTACT)	9 ~ 12			
OPTION	RELAY(A CONTACT)	13 ~ 32			

[Fig. 10-1] Inner signal relay setting screen

Setup	DO CONFIGURATION				Next
▶ TIME SIGNAL					
TS1 RELAY	<input type="checkbox"/> 0	TS3 RELAY	<input type="checkbox"/> 0		
TS2 RELAY	<input type="checkbox"/> 0	TS4 RELAY	<input type="checkbox"/> 0		
▶ ALARM SIGNAL					
AL1 RELAY	<input type="checkbox"/> 0	AL5 RELAY	<input type="checkbox"/> 0		
AL2 RELAY	<input type="checkbox"/> 0	AL6 RELAY	<input type="checkbox"/> 0		
AL3 RELAY	<input type="checkbox"/> 0	AL7 RELAY	<input type="checkbox"/> 0		
AL4 RELAY	<input type="checkbox"/> 0	AL8 RELAY	<input type="checkbox"/> 0		
▶ USER KEY SIGNAL					
U-KEY RELAY	<input type="checkbox"/> 0	OPER. TIME	<input type="text"/> 00.00	M.S	

[Fig. 10-2] Time signal/Alarm signal/User key signal relay setting screen

Setup	DO CONFIGURATION				Next
▶ TEMP ON/OFF SIGNAL					
T1 RELAY	<input type="checkbox"/> 0	DELAY TIME	<input type="text"/> 00.00	M.S	▲ ▼
T2 RELAY	<input type="checkbox"/> 0	DELAY TIME	<input type="text"/> 00.00	M.S	
T3 RELAY	<input type="checkbox"/> 0	DELAY TIME	<input type="text"/> 00.00	M.S	
T4 RELAY	<input type="checkbox"/> 0	DELAY TIME	<input type="text"/> 00.00	M.S	
T5 RELAY	<input type="checkbox"/> 0	DELAY TIME	<input type="text"/> 00.00	M.S	
T6 RELAY	<input type="checkbox"/> 0	DELAY TIME	<input type="text"/> 00.00	M.S	
T7 RELAY	<input type="checkbox"/> 0	DELAY TIME	<input type="text"/> 00.00	M.S	
T8 RELAY	<input type="checkbox"/> 0	DELAY TIME	<input type="text"/> 00.00	M.S	

[Fig. 10-3] Temp ON/OFF signal relay setting screen

Setup	DO CONFIGURATION				Next	
▶ RUN SIGNAL						
TEMP RELAY	<input type="checkbox"/> 0	DELAY TIME	<input type="text"/> 00.00	M.S	▲ ▼	
HUMI RELAY	<input type="checkbox"/> 0	DELAY TIME	<input type="text"/> 00.00	M.S		
▶ SENSOR OPEN SIGNAL						
TEMP RELAY	<input type="checkbox"/> 0	KEEP TIME	<input type="text"/> 00.00	M.S		
HUMI RELAY	<input type="checkbox"/> 0	KEEP TIME	<input type="text"/> 00.00	M.S		
▶ WAIT SIGNAL						
TEMP RELAY	<input type="checkbox"/> 0	KEEP TIME	<input type="text"/> 00.00	M.S	▲ ▼	
HUMI RELAY	<input type="checkbox"/> 0	KEEP TIME	<input type="text"/> 00.00	M.S		

[Fig. 10-8] Sub output relay setting screen #1


Setup	DO CONFIGURATION				Next
▶ MANUAL SIGNAL					
MAN1 RELAY	<input type="checkbox"/> 0	MAN7 RELAY	<input type="checkbox"/> 0		
MAN2 RELAY	<input type="checkbox"/> 0	MAN8 RELAY	<input type="checkbox"/> 0		
MAN3 RELAY	<input type="checkbox"/> 0	MAN9 RELAY	<input type="checkbox"/> 0		
MAN4 RELAY	<input type="checkbox"/> 0	MAN10 RELAY	<input type="checkbox"/> 0		
MAN5 RELAY	<input type="checkbox"/> 0	MAN11 RELAY	<input type="checkbox"/> 0		
MAN6 RELAY	<input type="checkbox"/> 0	MAN12 RELAY	<input type="checkbox"/> 0		
MAN1		MAN2		MAN3	
MAN7		MAN8		MAN9	
MAN10		MAN11		MAN12	

[Fig.10-6] Manual signal relay setting screen


Setup	DO CONFIGURATION				Next
▶ DI SIGNAL					
D11 RELAY	<input type="checkbox"/> 0	D19 RELAY	<input type="checkbox"/> 0		
D12 RELAY	<input type="checkbox"/> 0	D110 RELAY	<input type="checkbox"/> 0		
D13 RELAY	<input type="checkbox"/> 0	D111 RELAY	<input type="checkbox"/> 0		
D14 RELAY	<input type="checkbox"/> 0	D112 RELAY	<input type="checkbox"/> 0		
D15 RELAY	<input type="checkbox"/> 0	D113 RELAY	<input type="checkbox"/> 0		
D16 RELAY	<input type="checkbox"/> 0	D114 RELAY	<input type="checkbox"/> 0		
D17 RELAY	<input type="checkbox"/> 0	D115 RELAY	<input type="checkbox"/> 0		
D18 RELAY	<input type="checkbox"/> 0	D116 RELAY	<input type="checkbox"/> 0		

[Fig. 10-5] DI signal relay setting screen


DO relay output flow chart

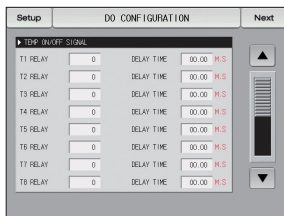


[Fig. 10-3] Temp ON/OFF signal relay setting screen

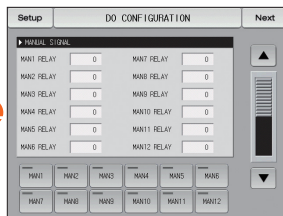


[Fig.10-6] Manual signal relay setting screen

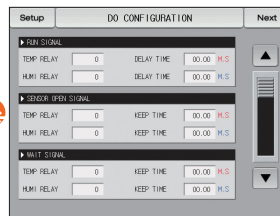

[Fig. 10-8] Sub output relay setting screen #1

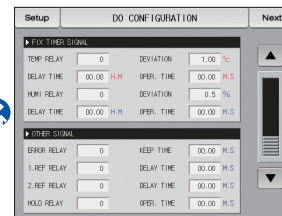

[Fig. 10-11] Sub output relay setting screen #4

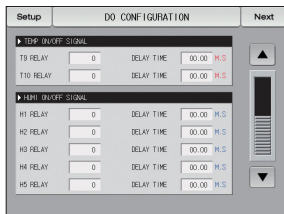


[Fig. 10-4] Humi ON/OFF signal relay setting screen



[Fig.10-7] Logical signal relay setting screen



[Fig. 10-9] Sub output relay setting screen #2

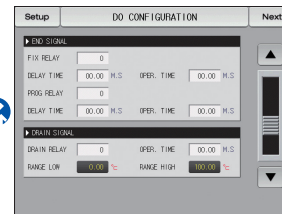

[Fig. 10-10] Sub output relay setting screen #3




10. DO relay output

10-1. Relay No. and parameter setting

- When various states created during operation are output to the I/O relay board, the relay number for the corresponding state is set.
- The relay operates (“OR” condition) when any signal out of the set signals is output when the set relay number is overlapped.
- Relay number 13~32 can be used when I/O2 board option is added.
- 33~64 relay numbers are an internal relay numbers. It is used when using the logic signal

(1) Inner signal/time signal relay setting screen

- The Inner signal relay set screen.
- It outputs the Contact Point Output via the set relay when inner signal occurs.

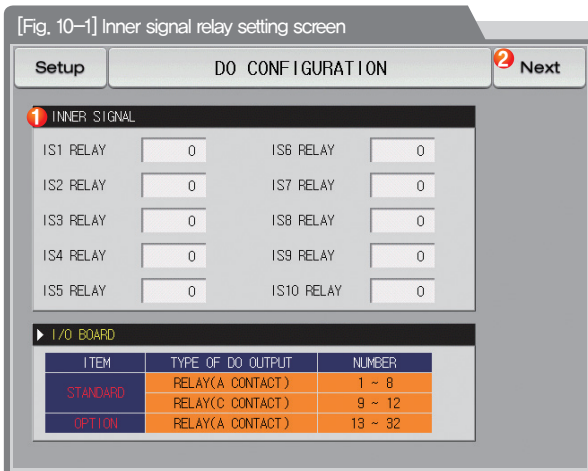

- ① Setting the relay number of inner signal
- ② Moving from current screen to the next screen

Parameter	Setting range	Unit	Initial data
inner signal1~ inner signal10 relay	0~32	ABS	0

(2) Time signal/Alarm signal/User key signal relay setting screen

- The time signal relay /alarm signal relay /user signal relay set screen.
- It outputs the the Contact Point Output via the set relay when time signal/alarm signal /user signal occurs

[Fig. 10-2] Time/Alarm/User key signal relay setting screen

Setup
DO CONFIGURATION
Next

1 TIME SIGNAL

TS1 RELAY	0	TS3 RELAY	0
TS2 RELAY	0	TS4 RELAY	0

2 ALARM SIGNAL

AL1 RELAY	0	AL5 RELAY	0
AL2 RELAY	0	AL6 RELAY	0
AL3 RELAY	0	AL7 RELAY	0
AL4 RELAY	0	AL8 RELAY	0

3 USER KEY SIGNAL

U-KEY RELAY	0	OPER. TIME	00.00	M.S
-------------	---	------------	-------	-----


- ① Setting the relay number of time signal
 - ② Setting the relay number of alarm signal
- Setting the user button relay
- Y/N for use of the button is set in [13. System initial setting]
 - When the user button is set, the user can use the wanted relay by setting in [10. DO relay output] and the set relay is operated when
- ③ User-Key is pressed at the screen for stationary, program stop/operation and the corresponding button is displayed on the operation screen.
 - Operation time : When user signal relay is "ON", after settled operation time, relay turn to "OFF"

Parameter	Setting range	Unit	Initial data
Time signal~ Time signal4 relay	0~32	ABS	0
Alarm signal~ Alarm signal8 relay	0~32	ABS	0
User output button relay	0~32	ABS	0
Operation time	00,00~99,59(MIN,SEC)	ABS	00,00

※ #n : 1 ~ 4

(3) Temperature ON/OFF and Humidity ON/OFF signal relay setting screen

- It sets the relay number of temperature & humidity ON/OFF signal and delayed time for each ON/OFF signal.
- This set ON/OFF signal outputs the contact output after passing the set time for delay time when the signal generation condition is fulfilled.

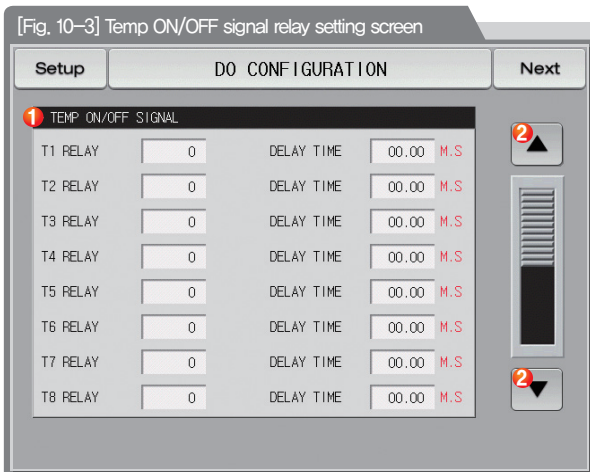

- ① Setting the relay number of temperature ON/OFF signal and delay time
 - The set relay is "ON" after elapsing the set relay time
 - Delay time: Setting of delay time to be applied in ON/OFF signal operation
- ② Moving to the next or previous screen using the up/down button

Parameter	Setting range	Unit	Initial data
Temp ON/OFF signal1 ~ Temp ON/OFF signal10 relay	0~32	ABS	0
Temp ON/OFF signal1 delay time ~ Temp ON/OFF signal10 delay time	00.00~99.59 (MIN,SEC)	ABS	00.00

[Fig. 10-4] Humi ON/OFF signal relay setting screen

Setup
DO CONFIGURATION
Next

▶ TEMP ON/OFF SIGNAL

T9 RELAY DELAY TIME M.S

T10 RELAY DELAY TIME M.S

① HUMI ON/OFF SIGNAL

H1 RELAY DELAY TIME M.S

H2 RELAY DELAY TIME M.S

H3 RELAY DELAY TIME M.S

H4 RELAY DELAY TIME M.S

H5 RELAY DELAY TIME M.S

Setting the relay number of humidity ON/OFF signal and delay time

- ① • The set relay is "ON" after elapsing the set relay time
- Delay time: Setting of delay time to be applied in ON/OFF signal operation

Parameter	Setting range	Unit	Initial data
Humi ON/OFF signal1 ~ Humi ON/OFF signal5 relay	0~32	ABS	0
Humi ON/OFF signal1 delay time ~ Humi ON/OFF signal5 delay time	00.00~99.59 (MIN,SEC)	ABS	00.00

References

- ▶ T10 operation: It operates after T9 operation and T10 delay time.
- ▶ H5 operation: It operates after H4 operation and H5 delay time.

(4) DI signal relay setting screen

- It is a screen to set the relay number for DI signal.
- DI signal transmits the set actual contact point output in DI error creation for corresponding number.




Setting the relay number of DI signal (DI1~DI16)

- ①
- DI signal operates when the operation method is set in "Error" in [11~2 DI error name]

Parameter	Setting range	Unit	Initial data
DI signal1 ~DI signal 16 relay	0~32	ABS	0

(5) Manual signal relay setting screen

- It is a screen to set the relay number for manual signal.
- It is used to transmit a certain relay manually.

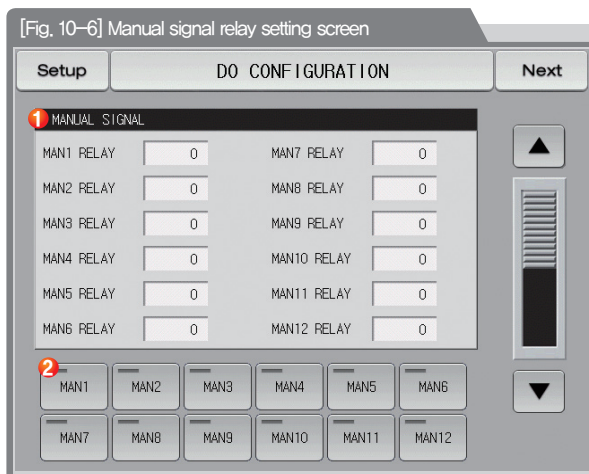

- ① Setting the relay number of manual signal (Manual1~Manual12)


Switch "ON" the relay for the corresponding number manually.

- ②
- Key operation: The output of relay "5" is "ON" when "Manual 1" button is pressed after inputting "5" on the "Manual1" relay column.

Parameter	Setting range	Unit	Initial data
Manual signal1 ~ Manual signal 12 relay	0~32	ABS	0

(6) Logic signal relay setting screen

- It is a screen to set the logic relay signal.
- The logic signal can be set up to 8.

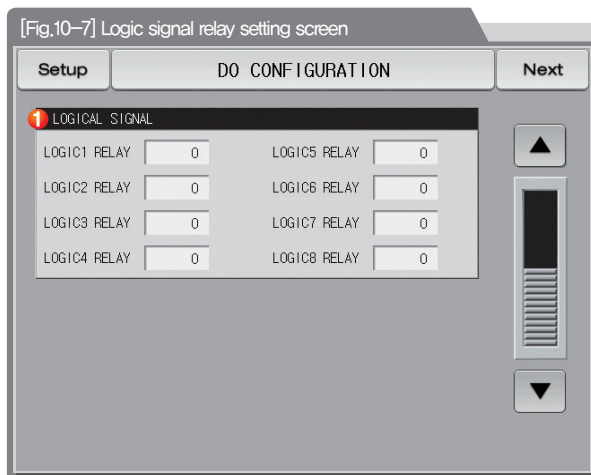


① Setting the relay number of logic signal

Parameter	Setting range	Unit	Initial data
Logic relay #n	0~32	ABS	0

※ #n = 1 ~ 8

(7) Sub output relay setting screen

- It is a screen to set the sub output relay signal.
- It transmits the contact point output to the set sub output relay when sub output signal is created.

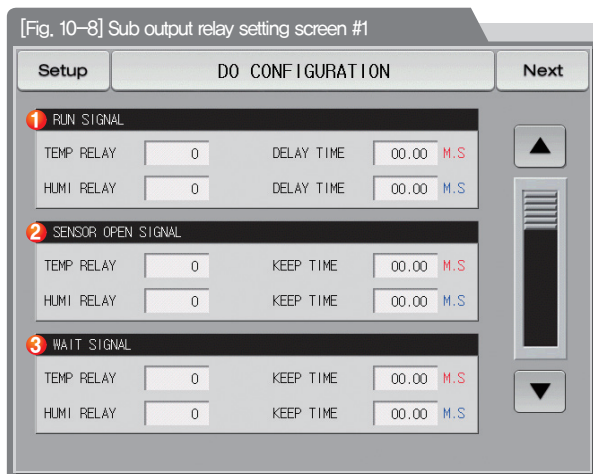

Setting the temp, humi operation(RUN) signal relay and delay time

- Temp relay : The set temp relay is "ON" in stationary or program operation
- Humi relay : The set humi relay is "ON" in stationary or program operation
However, the humidity relay will be "OFF" when the present value (PV) for humidity is ----.-%
- Delay time : The set relay is "ON" after set delay time is elapsed.

Setting the temp, humi sensor short relay and Holding Time

- Temp relay : When the temp sensor is short, the set relay is "ON"
- Humi relay : When the sensor is short, the set relay is "ON"
- Holding Time : The relay is "ON" during the set Holding Time and the operating state is maintained later on when the sensor is short.

Setting the temp, humi wait signal relay and Holding Time

- Temp relay : The set relay is "ON" during standby in program operation
- Humi relay : The set relay is "ON" during standby in program operation
- Holding Time : The relay is "ON" during the set Holding Time and the operating state is maintained later on depending on the standby operation condition.

Parameter	Setting range	Unit	Initial data
Temp Operation signal relay	0~32	ABS	0
Temp Operation signal delay time	00,00~99,59 (MIN,SEC)	ABS	00,00
Humi Operation signal relay	0~32	ABS	0
Humi Operation signal delay time	00,00~99,59 (MIN,SEC)	ABS	00,00
Temp Sensor short signal relay	0~32	ABS	0
Temp Sensor short signal Holding Time	00,00~99,59 (MIN,SEC)	ABS	00,00
Humi Sensor short signal relay	0~32	ABS	0
Humi Sensor short signal Holding Time	00,00~99,59 (MIN,SEC)	ABS	00,00
Temp Standby signal relay	0~32	ABS	0
Temp Standby signal Holding Time	00,00~99,59 (MIN,SEC)	ABS	00,00
Humi Standby signal relay	0(OFF)~32	ABS	0
Humi Standby signal Holding Time	00,00~99,59 (MIN,SEC)	ABS	00,00

[Fig. 10-9] Sub output relay setting screen #2

Setup	DO CONFIGURATION		Next	
1 UP SIGNAL				
TEMP RELAY	<input type="text" value="0"/>	TSP - NSP 0.00 °C	▲ ▬ ▼	
HUMI RELAY	<input type="text" value="0"/>	TSP - NPV 0.0 %		
2 SOAK SIGNAL				
TEMP RELAY	<input type="text" value="0"/>	KEEP TIME <input type="text" value="00.00"/> M.S		
HUMI RELAY	<input type="text" value="0"/>	KEEP TIME <input type="text" value="00.00"/> M.S		
1 DOWN SIGNAL				
TEMP RELAY	<input type="text" value="0"/>	TSP - NSP 0.00 °C		
HUMI RELAY	<input type="text" value="0"/>	TSP - NPV 0.0 %		

- ①
- Up relay : Setting the relay number of up signal
 - Down relay : Setting the relay number of down signal
 - Operation condition : Setting the operation condition of up and down signal and
 - Application deviation : Setting the application deviation in operation of up and down signal

※ |TSP - NSP| operation

- Up signal : The relay is "ON" in up range when the Now set value (NSP) < [Target set value (TSP) - Applied deviation], and it is "OFF" when the set value (SP) > [Target set value (TSP) - Applied deviation]
- Down signal : The relay is "ON" in down range when the Now set value (NSP) > [Target set value (TSP) + Applied deviation], and it is "OFF" when the set value (SP) < [Target set value (TSP) + Applied deviation]

①

- Even |TSP-NSP| is set in stationary operation, it operates in |TSP-NPV|

※ |TSP - NPV| operation

- Up signal : The relay is "ON" in up range when the Now Present Value (NPV) < [Target set value (TSP) - Applied deviation], and it is "OFF" when the Now Present Value (NPV) > [Target set value (TSP) - Applied deviation]
- Down signal : The relay is "ON" in down range when the Now Present Value (NPV) > [Target set value (TSP) + Applied deviation], and it is "OFF" when Now Present Value (NPV) < [Target set value (TSP) + Applied deviation]

Keeping relay : Setting the relay number of the keeping signal
 Holding Time : Setting the Holding Time to be maintained during the keeping signal operation

- ②
- The keeping relay is "ON" when it is entered into the keeping range while it is in the Program operation . Plus, In case of "Keeping SEG operation time=Keeping SEG setting time - Holding Time," the relay is "OFF."
 - The state lamp is displayed in the operation screen in the Stationary Operation and the relay output is not created.

Parameter	Setting range	Unit	Initial data
Temp Up signal relay	0~32	ABS	0
Temp Up signal deviation	EUS(0.0~10.0%)	EUS	EUS(0.0%)
Humi Up signal relay	0~32	ABS	0
Humi Up signal deviation	EUS(0.0~10.0%)	EUS	EUS(0.0%)
Temp Keeping signal relay	0~32	ABS	0
Temp Signal Holding Time	00.00~99.59(MIN,SEC)	ABS	00.00
Humi Keeping signal relay	0~32	ABS	0
Humi Signal Holding Time	00.00~99.59(MIN,SEC)	ABS	00.00
Temp Down signal relay	0~32	ABS	0
Temp Down signal deviation	EUS(0.0~10.0%)	EUS	EUS(0.0%)
Humi Down signal relay	0~32	ABS	0
Humi Down signal deviation	EUS(0.0~10.0%)	EUS	EUS(0.0%)

[Fig. 10-10] Sub output relay setting screen #3

Setup	DO CONFIGURATION		Next
1 END SIGNAL			
FIX RELAY	<input type="text" value="0"/>		
DELAY TIME	<input type="text" value="00.00"/> M.S	OPER. TIME	<input type="text" value="00.00"/> M.S
PROG RELAY	<input type="text" value="0"/>		
DELAY TIME	<input type="text" value="00.00"/> M.S	OPER. TIME	<input type="text" value="00.00"/> M.S
2 DRAIN SIGNAL			
DRAIN RELAY	<input type="text" value="0"/>	OPER. TIME	<input type="text" value="00.00"/> M.S
RANGE LOW	<input type="text" value="0.00"/> °C	RANGE HIGH	<input type="text" value="100.00"/> °C

Setting the stationary operation, program operation termination relay and delay time operation time

- FX relay : The set relay is "ON" when the stationary time set operation is terminated.
- ① • PROG relay : The set relay is "ON" when the program operation is terminated.
- Delay time : The set relay is "ON" when the set delay time is passed.
- Operation time : The relay is "OFF" when the stationary or program termination signal relay is "ON" after the set operation time is passed.

It sets the Drain signal relay and operation time.

- The display for upper / lower limit is set in the [Relative humidity display condition] in [3-1(2) Sensor input screen #2].
- Power ON : The set relay is "ON" if operation stops.
- During operation (RUN): The set relay is "ON" during operation time in the state out of upper, lower limit, 0.0~100.0°C for temperature indication (T,PV) and 0.0% for humidity set data (H,SP)
- In case when it operates (RUN) and then Stops (STOP) : "The set relay is "ON" during operation time when it is stopped during while it outputs Humidity Operation Signal.

Parameter	Setting range	Unit	Initial data
Stationary control termination signal relay	0 ~ 32	ABS	0
Stationary control termination signal delay time	00.00 ~ 99.59 (MIN,SEC)	ABS	00.00
Stationary control termination signal operation time	00.00 ~ 99.59 (MIN,SEC)	ABS	0
Program control termination signal relay	0 ~ 32	ABS	00.00
Program control termination signal delay time	00.00 ~ 99.59 (MIN,SEC)	ABS	00.00
Program control termination signal operation time	00.00 ~ 99.59 (MIN,SEC)	ABS	00.00
Drain signal relay	0 ~ 32	ABS	0
Drain signal operation time	00.00 ~ 99.59 (MIN,SEC)	ABS	00.00
Upper limit range	It is same with the upper,lower limit for relative humidity display condition in input screen #2.	℃	100.00
lower limit range		℃	0.00

[Fig. 10-11] Sub output relay setting screen #4

Setup	DO CONFIGURATION		Next
1 FIX TIMER SIGNAL			
TEMP RELAY	<input type="text" value="0"/>	DEVIATION	<input type="text" value="1.00"/> °C
DELAY TIME	<input type="text" value="00.00"/> H.M	OPER. TIME	<input type="text" value="00.00"/> M.S
HUMI RELAY	<input type="text" value="0"/>	DEVIATION	<input type="text" value="0.5"/> %
DELAY TIME	<input type="text" value="00.00"/> H.M	OPER. TIME	<input type="text" value="00.00"/> M.S
2 OTHER SIGNAL			
ERROR RELAY	<input type="text" value="0"/>	KEEP TIME	<input type="text" value="00.00"/> M.S
1. REF RELAY	<input type="text" value="0"/>	DELAY TIME	<input type="text" value="00.00"/> M.S
2. REF RELAY	<input type="text" value="0"/>	DELAY TIME	<input type="text" value="00.00"/> M.S
HOLD RELAY	<input type="text" value="0"/>	OPER. TIME	<input type="text" value="00.00"/> M.S

Setting the stationary timer signal relay, deviation, delay time and operation time

- Deviation : $| \text{Present value(PV)} - \text{Set value (SP)} | \leq$ the relay is "ON" during operation time (M,S) from deviation till delay time (H,M)
Namely, the relay is "ON" during operation time (M,S) when the data of $| \text{Present value(PV)} - \text{Set value (SP)} |$ is within the deviation.
- ① • Delay time : The set relay is "ON" after the set delay time is elapsed.
- Operation time : The set relay is "OFF" after the set operation time elapse when the stationary timer signal relay operation state is maintained.
- Operation only in stationary operation
- Stop or operation time = The relay is "OFF" when 00,00 M,S is input
- The processing time is continued out of the deviation during relay time operation.

Error relay : Setting the error signal relay number

Holding Time : Setting the Holding Time to be applied in error signal operation

- The relay is "ON" until error recovery when the DI error is being created after the error signal relay is "ON" after maintaining time during the set maintaining time in DI error creation.
- Error signal : It is operated when error is created in DI1~16.
- When DI sensing is set in "Operation", the error signal output is not created.

②

1. REF relay : Setting the 1st freezer signal relay number

2. REF relay : Setting the 2nd freezer signal relay number

Delay time : Setting the delay time to be applied in the 1st and the 2nd freezer signals are operating.


- The signals in the 1st and the 2nd freezer are "ON" after operation of inner signal (S1) and set delay time is elapsed.

Hold relay : Hold signal relay number setting.

Operation time : The relay is "OFF" when the hold relay maintains operation status after the setted operation time is passed.

Parameter	Setting range	Unit	Initial data
Temp Stationary timer signal relay	0~64	ABS	0
Temp Stationary timer signal deviation	EUS (0.0 ~ 10.0%)	EUS	EUS (0.5%)
Temp Stationary timer signal delay time	00,00~99,59 (HOUR,MIN)	ABS	00,00
Temp Stationary timer signal operation time	00,00~99,59 (MIN,SEC)	ABS	00,00
Humi Stationary timer signal relay	0~64	ABS	0
Humi Stationary timer signal deviation	EUS (0.0 ~ 10.0%)	EUS	EUS (0.5%)
Humi Stationary timer signal delay time	00,00~99,59 (HOUR,MIN)	ABS	00,00
Humi Stationary timer signal operation time	00,00~99,59 (MIN,SEC)	ABS	00,00
Error signal relay	0~64	ABS	0
Error signal Holding Time	00,00~99,59 (MIN,SEC)	ABS	00,00
1st Freezer operation signal relay	0~64	ABS	0
1st Freezer operation signal delay time	00,00~99,59 (MIN,SEC)	ABS	00,00
2nd Freezer operation signal relay	0~64	ABS	0
2nd Freezer operation signal delay time	00,00~99,59 (MIN,SEC)	ABS	00,00

► Stationary timer signal relay operation

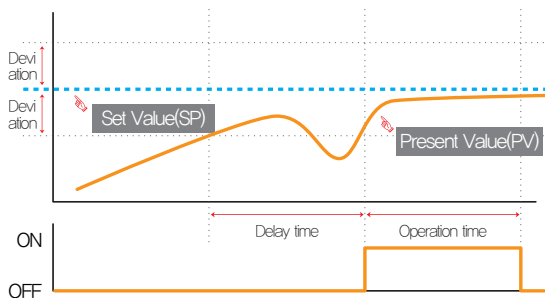

References


- The stationary timer signal operation is calculated again in operation starting, changing the set value (SP), electric power "ON" (When it is set for immediate operation in electricity "ON", recovery operation in black out or product is ON.
 - ※ When the recovery motion is re-starting or continue in black out, it operates in same pattern, Namely, the delay time starts again after recover of electric power in operation state

(7) Definition of relay operation time for each signal

Signal	Condition	Relay ON time
Drain signal	In case that recovers, after the relay operation time for set relay and after output occurrence,	Operation until the set operation time
	In case that recovers during the relay operation time for set relay after output occurrence,	Operates until recovery
Termination signal	In case of deleting the message by touching the screen after output creation and set relay maintaining time is elapsed,	Operation until the set operation time
	In case of deleting the message by touching the screen during relay maintaining time after set output creation is made,	Operation until screen touch
Error signal/Sensor short signal/ Standby signal	In case of recovery after output creation and set relay maintaining time is elapsed,	Operation until error recovery
	In case of recovery during relay maintaining time after set output creation is made,	Operation until set Holding Time

10-2. UP, SOAK, DOWN signal operation


- Input sensor = Temperature (k2), range = $-200.0^{\circ}\text{C} \sim 1370.0^{\circ}\text{C}$
- Up, down signal range \rightarrow [EUS 0%~EUS 10%] = $[0.0^{\circ}\text{C} \sim 157.0^{\circ}\text{C}]$

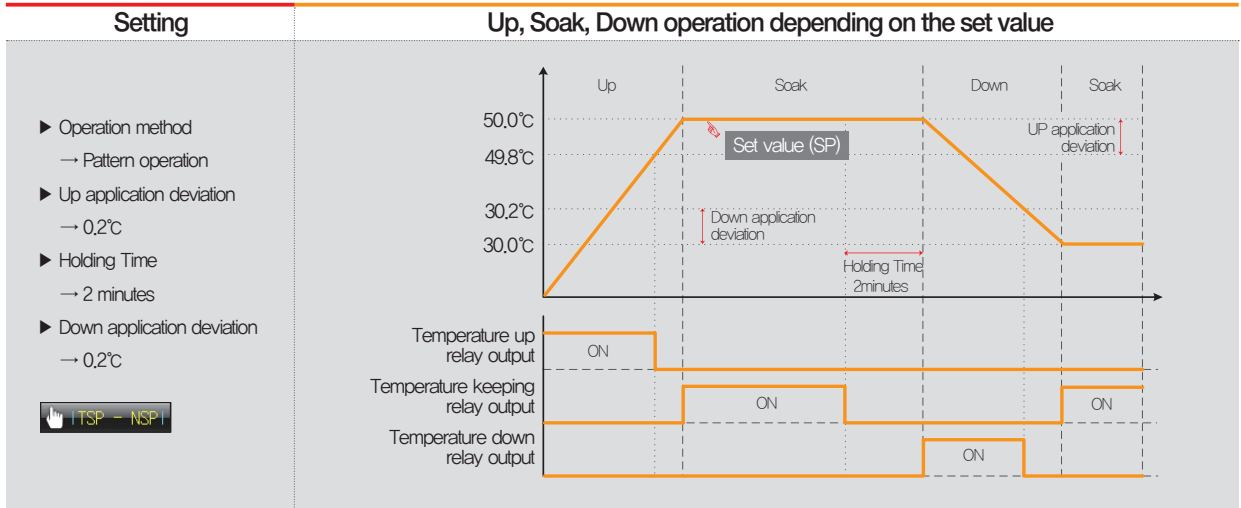


Setting

- ▶ Operation method
 - stationary operation
- ▶ Up application deviation
 - 0,2°C
- ▶ Holding Time
 - 2 minutes
- ▶ Down application deviation
 - 0,2°C

▶ It operates with  TSP - NSPT  TSP - NPV

- ▶ It operates with  TSP - NPV regardless of the conditions of deviation application in stationary operation.
- ▶ The Soak signal relay is not "ON" in stationary operation and only the state lamp in operation screen is "ON".

Up, Soak, Down operation depending on the set value

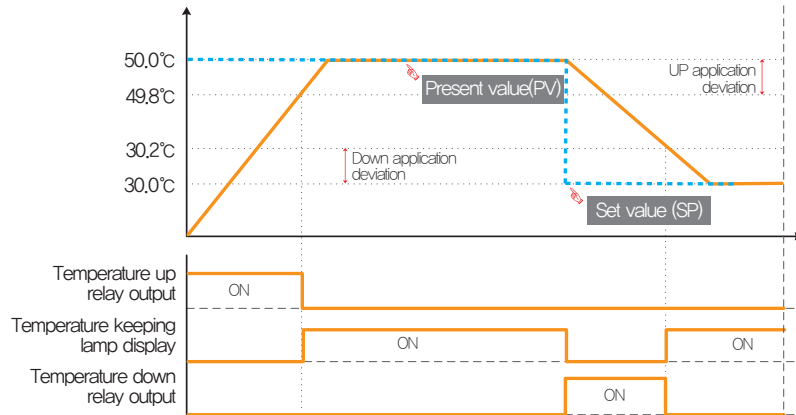

Part 11

DI function and Operation

11-1 DI operation setting	102
11-2 DI error name	107
11-3 DI error creation screen	111

DI function and Operation

Next Flow chart Flow chart

Setup DI CONFIGURATION Next

▶ DISPLAY METHOD
 TEXT PICTURE

▶ BUZZER TIME
 KEEP TIME: 00.01 M.S

▶ DI DETECTION TIME
 DETECT TIME: 00.01 M.S

▶ D1 OPERATION

SETTING	DI ERROR SCREEN	OPERATION STATUS
ERR_STOP	DISPLAY	OPERATION STOP
TM_STOP	DISPLAY	STOP AFTER SETTING TIME
ERR_RUN	DISPLAY	KEEP STATUS
RUN	NOT DISPLAY	KEEP STATUS

▶ D11 OPERATION
 ERROR RUN/STOP

▶ D12 OPERATION
 ERROR HOLD

▶ D13 OPERATION
 ERROR STEP

[Fig. 11-1] DI function and operation setting screen 1

Setup DI CONFIGURATION Next

▶ D11 SIGNAL
 OPERATION: ERR_STOP

▶ D12 SIGNAL
 OPERATION: ERR_RUN

▶ D13 SIGNAL
 OPERATION: ERR_STOP

▶ D14 SIGNAL
 OPERATION: TM_STOP
 DELAY TIME: 00.00 M.S

▶ D15 SIGNAL
 OPERATION: RUN

▶ D16 SIGNAL
 OPERATION: ERR_STOP

[Fig. 11-4] DI function and operation setting screen 3 #1

Setup DI ERROR NAME SET Next

▶ DI ERROR NAME

D11 NAME: THE D11 ERROR OCCURRED

D12 NAME: THE D12 ERROR OCCURRED

D13 NAME: THE D13 ERROR OCCURRED

D14 NAME: THE D14 ERROR OCCURRED

D15 NAME: THE D15 ERROR OCCURRED

D16 NAME: THE D16 ERROR OCCURRED

D17 NAME: THE D17 ERROR OCCURRED

D18 NAME: THE D18 ERROR OCCURRED

D19 NAME: THE D19 ERROR OCCURRED

[Fig. 11-8] DI function and operation setting screen 4 #1

Setup DI CONFIGURATION Next

▶ D11 DETECTION
 A-TYPE B-TYPE

▶ D12 DETECTION
 A-TYPE B-TYPE

▶ D13 DETECTION
 A-TYPE B-TYPE

▶ D14 DETECTION
 A-TYPE B-TYPE

▶ D15 DETECTION
 A-TYPE B-TYPE

▶ D16 DETECTION
 A-TYPE B-TYPE

▶ D17 DETECTION
 A-TYPE B-TYPE

▶ D18 DETECTION
 A-TYPE B-TYPE

[Fig. 11-2] DI function and operation setting screen 2 #1

Setup DI CONFIGURATION Next

▶ D17 SIGNAL
 OPERATION: ERR_STOP

▶ D18 SIGNAL
 OPERATION: ERR_STOP

▶ D19 SIGNAL
 OPERATION: ERR_STOP

▶ D10 SIGNAL
 OPERATION: ERR_STOP

▶ D11 SIGNAL
 OPERATION: ERR_STOP

▶ D12 SIGNAL
 OPERATION: ERR_STOP

[Fig. 11-6] DI function and operation setting screen 3 #3

Setup DI ERROR NAME SET Next

▶ DI ERROR NAME

D10 NAME: THE D10 ERROR OCCURRED

D11 NAME: THE D11 ERROR OCCURRED

D12 NAME: THE D12 ERROR OCCURRED

D13 NAME: THE D13 ERROR OCCURRED

D14 NAME: THE D14 ERROR OCCURRED

D15 NAME: THE D15 ERROR OCCURRED

D16 NAME: THE D16 ERROR OCCURRED

[Fig. 11-8] DI function and operation setting screen 4 #1



11. DI function and Operation


11-1. DI Operation setting

(1) DI function and Operation setting screen 1

- Screen for setting the operation type for DI function and each DI signal.

[Fig. 11-1] DI function and Operation setting screen #1

SETTING	DI ERROR SCREEN	OPERATION STATUS
ERR_STOP	DISPLAY	OPERATION STOP
TM_STOP	DISPLAY	STOP AFTER SETTING TIME
ERR_RUN	DISPLAY	KEEP STATUS
RUN	NOT DISPLAY	KEEP STATUS

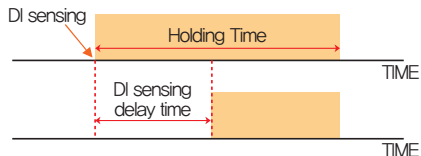

DI function operation setting

Setting the error display method in DI error creation

- ①
 - Letter : The error is displayed in letter in DI error creation
 - Photo : The error is displayed with input photo in DI error creation
 - The uploaded photo file into the internal memory is displayed into the DI error and basic photo is displayed when it is not uploaded.

Setting the buzzer ringing time in DI error creation

- ②
 - The buzzer ringing is made in DI error creation in spite of setting into "0"
 - The buzzer ringing is not made when DI operation method is set in Operation/Stop, Hold, Step and Pattern

Setting the DI sensing delay time

- ③
 - In case of physical DI contact, it operates with DI input when it is "ON" during the contact point setting time.

Setting the DI1 operation method



- ④
 - Error : Use the DI1 operation for error detection
 - Operation/Stop : The operation is stopped at the time of releasing error while the operation is being made at the DI1 error creation

⑤	Setting the DI2 operation method <ul style="list-style-type: none"> • Error : Use the DI2 operation for error detection • Hold : It holds the current operation screen at the DI2 operation and the hold is released at the time of error releasing (It is possible in program operation only.)
⑥	Setting the DI3 operation method <ul style="list-style-type: none"> • Error : Use the DI3 operation for error detection • Step : Force moving from the current segment to the next segment at DI3 error creation (It is possible in program operation only.)
⑦	Moving from current screen to the next screen
⑧	Moving to the next or previous screen using the up/down button

Parameter	Setting range	Unit	Initial data
Display method	Letter, Photo	ABS	Letter
Buzzer Holding Time	00.00 ~ 99.59 (MIN,SEC)	ABS	00.01
DI sensing delay time	00.00 ~ 99.59 (MIN,SEC)	ABS	00.01
DI1 Operation method	Error, Operation/stop	ABS	Error
DI2 Operation method	Error, hold	ABS	Error
DI3 Operation method	Error, step	ABS	Error

(2) DI function and Operation setting screen 2

- It sets the sensing method for each DI signal.

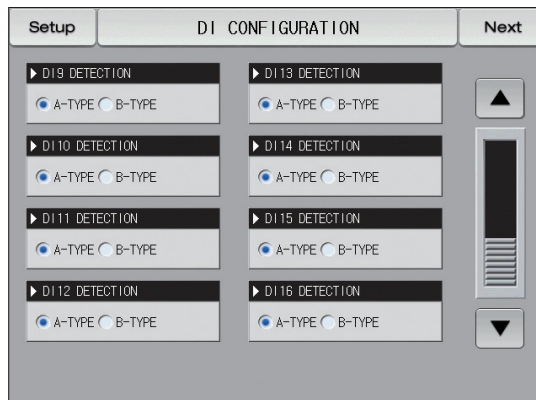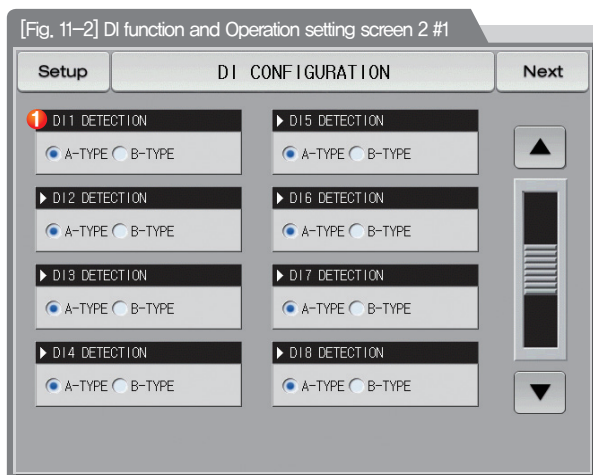

[Fig. 11-3] DI function and Operation setting screen 2 #2

Setting the DI1 sensing method

①

- A-contact point : It senses the input of DI in case of physical DI contact point creation. (When the external signal is entered.)
- B-contact point : It senses the input of DI in case of physical DI contact point release. (When the external signal is disconnected.)



▶ DI sensing pattern A— Contact point selection

DI1	DI2	DI3	operation
Error	Hold	Step	Operation
ON			Stop
OFF			Hold operation
	ON		Hold release
	OFF		Step operation
		ON	

References

- ▶ ON/OFF operation is opposite in case of selection of DI sensing type B-contact point.


(3) DI function and Operation setting screen 3

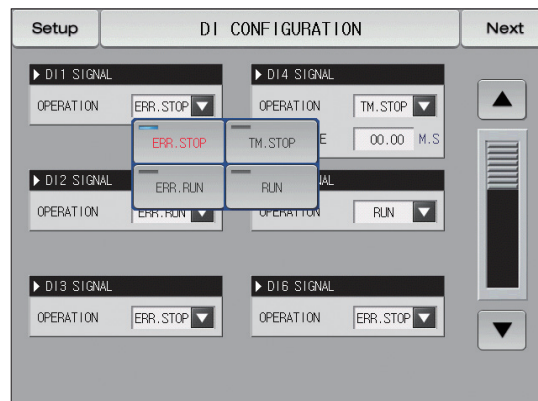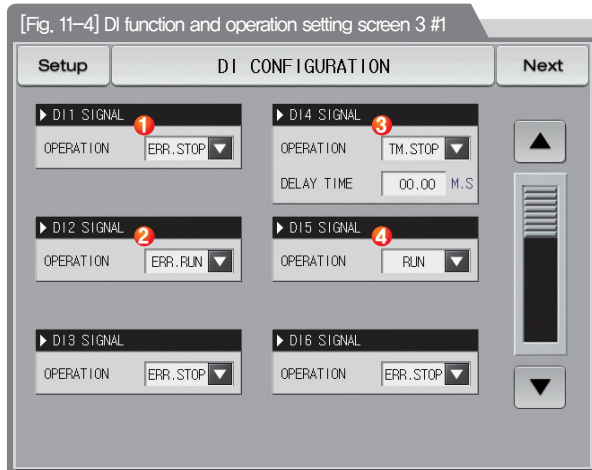


- | | | |
|---|-----------------|--|
| ① | Error stop | : It displays DI error screen in case of DI error creation and stops operation. |
| ② | Error operation | : It displays DI error screen in case of DI error creation and maintains the current operation state. |
| ③ | Time stop | : It displays DI error screen in case of DI error creation and stops operation after the set delay time. |
| ④ | Operation | : It displays DI error screen in case of DI error creation and maintains the current operation state. |

References

- ▶ It displays the operation state and Y/N for display in case of each DI error creation
- ▶ The error signal relay is not operated in case of each DI error creation when it is set in "Operation" and DI signal relay output is operated.
- ▶ The state display lamp and error signal are created in [Operation screen 2].

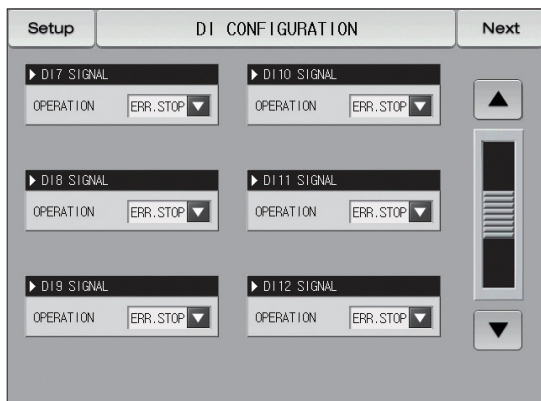

[Fig. 11-6] DI function and operation setting screen 3 #3

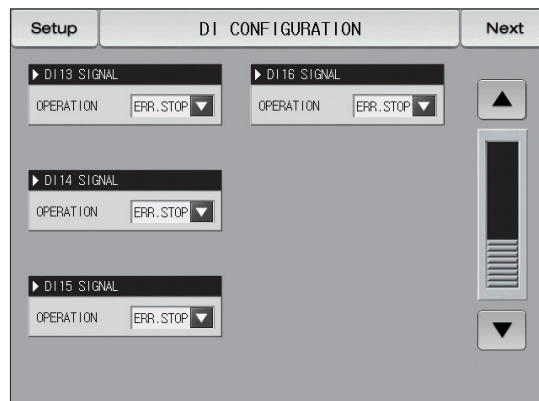

[Fig. 11-7] DI function and operation setting screen 3 #4


Parameter	Setting range	Unit	Initial data
Operation after sensing DI #n signal	Error stop, Time stop, Error operation, Operation	ABS	Error stop
DI #n signal delay time	0.00 ~ 99.59(MIN,SEC)	ABS	00.00

※ #n = 1 ~ 16

11-2. DI error name

(1) DI error name setting

- The setting is available when the display method is "Letter".
- It is a screen to input the DI error name.
- The DI error name can be put in 24 letters in maximum.

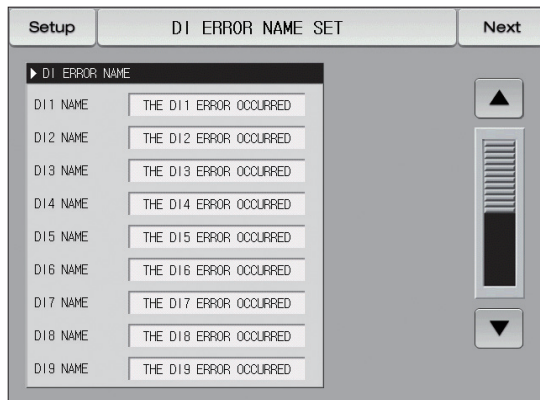

[Fig. 11-8] DI function and operation setting screen 4 #1




[Fig. 11-9] DI function and operation setting screen 4 #2

Parameter	Setting range	Unit	Initial data
DI #n name	0~9, A~Z, Special letters (24 letters in maximum)	ABS	THE D#n ERROR OCCURRED


※ #n = 1 ~ 16

(2) DI error creation photo setting

- The setting is available when the display method is "Photo".
- The uploaded photo file (BMP) into the internal memory is displayed in DI error and basic photo is displayed when it is not uploaded.
- The photo can be uploaded when there is a SD card option.

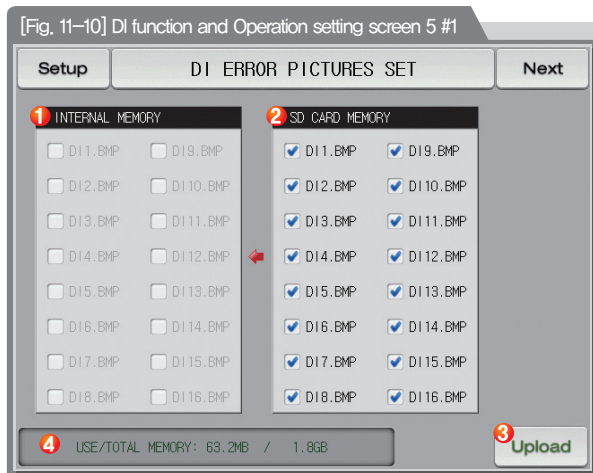

- ① The photo file corresponding of its name to DI out of the saved photo files (BMP) into the memory is displayed and it is inactive () when there is not corresponding file.
- ② The photo file corresponding of its name to DI out of the saved photo files (BMP) into the SD card is displayed.
 - The file selected with () is uploaded into the internal memory.
- ③ The photo files (BMP) saved into SD card is uploaded to internal memory.
- ④ It displays the capacity of current SD card.
 - It is displayed when the SD card is inserted.

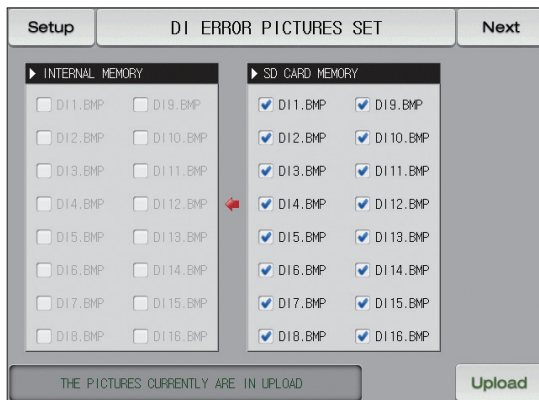

[Fig. 11-11] DI function and operation setting screen 5 #2




[Fig. 11-12] DI function and operation setting screen 5 #3

References

- ▶ In case of file management for SD card, it recognizes when the folder name shall be BMP, and file name shall be D*.BMP.
- ▶ The message, "It is uploaded now," is displayed at the bottom of screen during upload.

References

- ▶ When the upload is completed, the message, "The upload is completed," is displayed.
- ▶ The photo files() are activated for selection at the internal memory when the upload is completed.

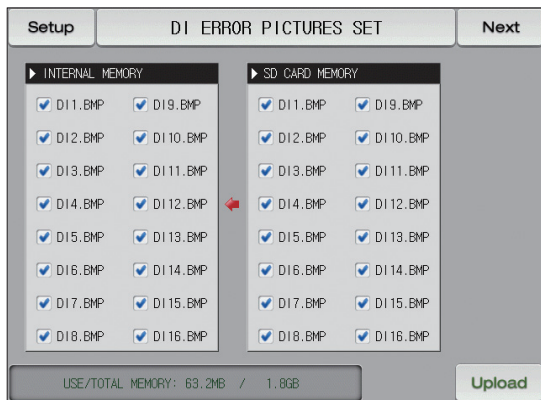


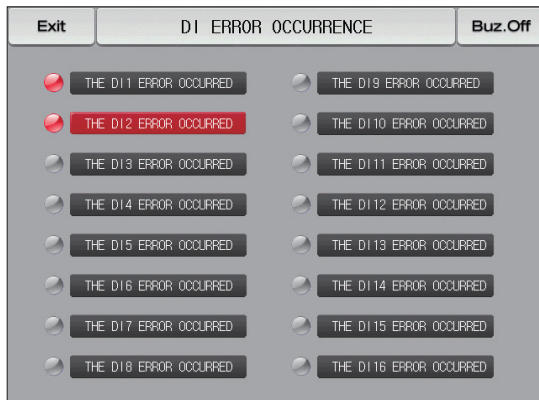
[Fig. 11-13] DI function and operation setting screen 5 #4

References


- ▶ When the wanted file is selected(), it can be used for screen in case of DI error creation.
- ▶ The basic photo inside the memory is displayed when the error is made from the unselected DI.

11-3. DI error creation screen

- It is a screen in case of DI error creation.
- It is converted to the operation screen after escaping from the DI error screen when **Exit** is touched by user.
- The same DI error creation is neglected for 1 minute when the screen is changed by pressing **Exit** button after DI creation.
Ex) When it is exit with "Revert" in creation of D11, neglect it for 1 minute in spite of DI1 creation. It displays DI error screen when DI1 is created after 1 minute.
- Here, the neglecting means the DI error screen.
- **Buz.Off** button is to block the alarming sound when DI error is occurred.
- DI error no creation ("OFF" state)  THE D11 ERROR OCCURRED
- DI error creation ("ON" state)  THE D11 ERROR OCCURRED
- Release after DI error creation ("ON" state after "OFF")  THE D11 ERROR OCCURRED



[Fig. 11-14] The screen with letter for DI error display method

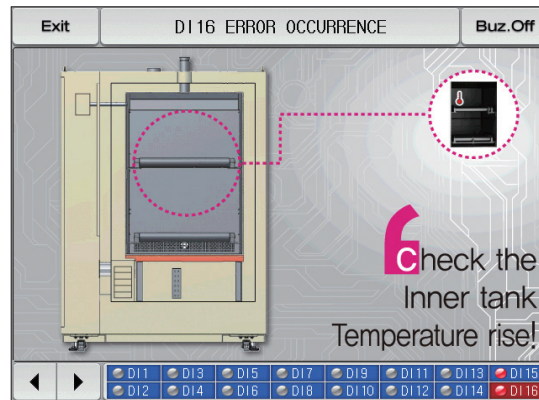

[Fig. 11-15] The screen with photo for DI error display method

Part **12**

System initial setting

12-1 Basic screen display setting	114
12-2 State display lamp setting	116

System initial setting flow chart

Next Flow chart

Setup INITIAL DISPLAY Next

▶ LANGUAGE SET
LANGUAGE ENGLISH

▶ SYSTEM PASSWORD
PASSWORD *****

▶ USER KEY
 LGE User-Key
 Lamp.On
 Buz.Off
 RELAY.ON

▶ INIT INFORMATION
INFORMATION1 SAMKONTECH CO.,LTD.
INFORMATION2 TEL : 82-32-328-9120
INFORMATION3 HTTP://WWW.SAMKONTECH.COM

Initialize

[Fig. 12-1] System initial setting screen 1



Setup STATUS DISPLAY LAMP Next

▶ LAMP SELECT (24)

<input checked="" type="checkbox"/> IS1	<input checked="" type="checkbox"/> IS2	<input checked="" type="checkbox"/> IS3
<input checked="" type="checkbox"/> IS4	<input checked="" type="checkbox"/> IS5	<input checked="" type="checkbox"/> IS6
<input checked="" type="checkbox"/> IS7	<input checked="" type="checkbox"/> IS8	<input type="checkbox"/> IS9
<input type="checkbox"/> IS10	<input checked="" type="checkbox"/> TS1	<input checked="" type="checkbox"/> TS2
<input checked="" type="checkbox"/> TS3	<input checked="" type="checkbox"/> TS4	<input checked="" type="checkbox"/> AL1
<input checked="" type="checkbox"/> AL2	<input checked="" type="checkbox"/> AL3	<input checked="" type="checkbox"/> AL4
<input checked="" type="checkbox"/> AL5	<input checked="" type="checkbox"/> AL6	<input checked="" type="checkbox"/> AL7

[Fig. 12-4] System initial setting screen 2 #1




12. System initial setting

12-1. Basic screen display setting


[Fig. 12-1] System initial setting screen 1

- ① Setting the language
- ② Setting the password used in system screen entering
 - The password was set in "0" when it is delivered from the factory.
- ③ Display the wording on the initial screen with electric power ON
 - Setting 1, 2, 3 wording for information is available and maximum 24 characteristics can be input
- ④ Set to the usage of user button using the button in stationary , and program operation screen.
 - Possible to select user button type and edition
- ⑤ Changing every parameter into the factor initial state
- ⑥ Move from current user screen to the previous user screen.

Parameter	Setting range	Unit	Initial data
Screen display language	Eng/Kor/Chn/Jpn	ABS	English
System password setting	0 ~ 9999	ABS	0
Type of display	<input type="checkbox"/> (Unuse), <input checked="" type="checkbox"/> (Use) User button, Lamp lighting, Buzzor block, edition : 0 ~ 9, A ~ Z, Maximum 8 characters	ABS	User button
Initial screen information	Information display 1	ABS	SAMIWONTECH CO.,LTD.
	Information display 2	ABS	TEL : 82-32-326-9120
	Information display 3	ABS	HTTP://WWW.SAMIWONTECH.COM

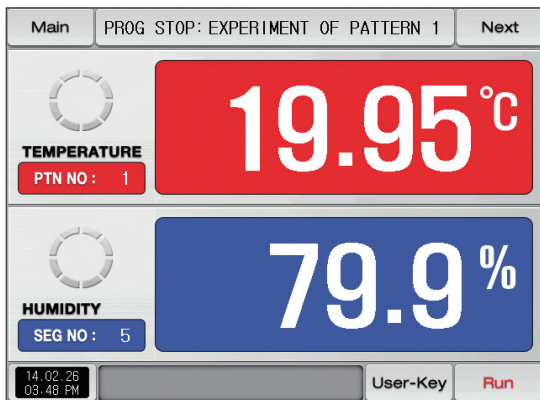

[Fig. 12-2] Program operation user button relay setting screen # 1

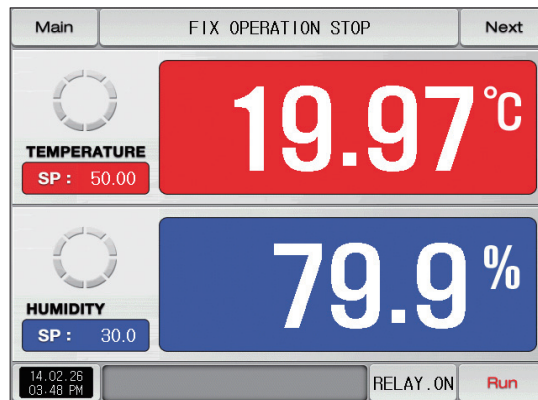


[Fig. 12-3] Stationary operation user button relay setting screen # 2

References


- ▶ User button relay setting
- ▶ Set to the usage of button from [12, system initial setting]
- ▶ When set to use the user button, possible to set and use the user wanted relay from [10, DO relay output], Possible to use for stationary and program still screen and operation screen #3

12-2. State display lamp setting

- It is a screen to set the type of lamps to be display in the stationary and program operation screen #2.
- Maximum 24 lamps can be selected.

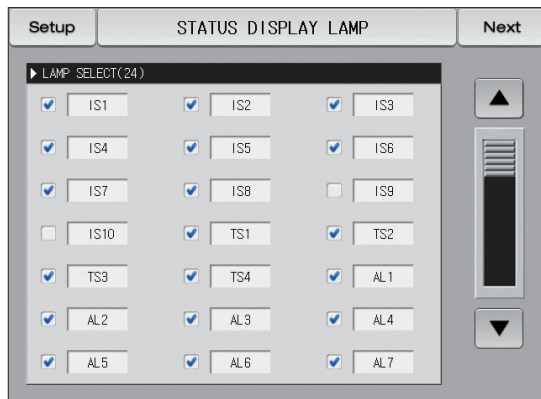

[Fig. 12-4] System initial setting screen 2 #1

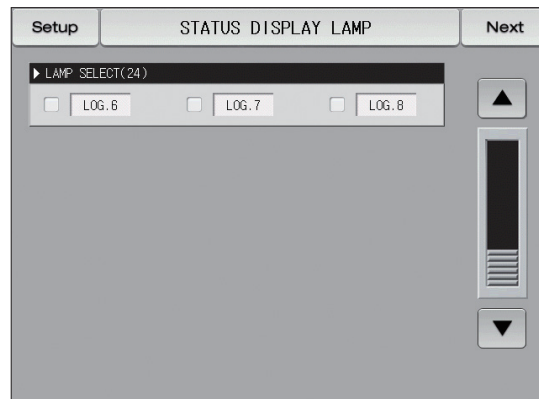

[Fig. 12-5] System initial setting screen 2 #2

References

- ▶ Possible to change the lamp name and type from operation screen.


Parameter	Setting range	Unit	Initial data
Lamp name	0~9, A~Z, Special letters (5 letters in maximum)	ABS	—



[Fig. 12-6] setting screen for lamp name

References


- ▶ It is a screen to input the Lamp name.
- ▶ The Lamp name can be put in 24 letters in maximum.

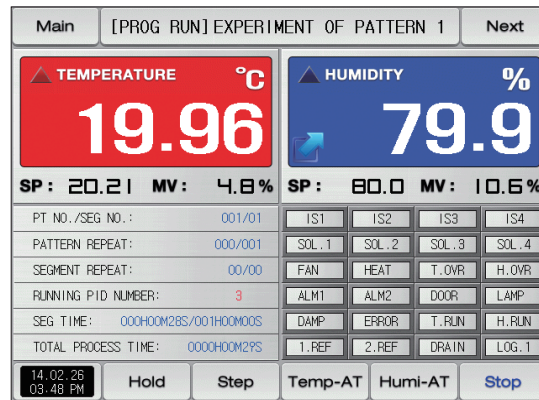

[Fig. 12-7] Lamp setting screen for program operation status

Engineering Units - EU, EUS

- ⋮⋮⋮ When the sensor type (IN-T) or the upper limit, lower limit of input range is changed, the parameters expressed in EU(), EUS() are changed in proportion to current data. (However, the upper and lower range setting data is initialized.)
- ⋮⋮⋮ Download the instruction manual and communication manual from the homepage.
- ⋮⋮⋮ EU() : Value of engineering unit depending on the range of instrument
- ⋮⋮⋮ EUS() : Value of engineering unit depending on the span of instrument

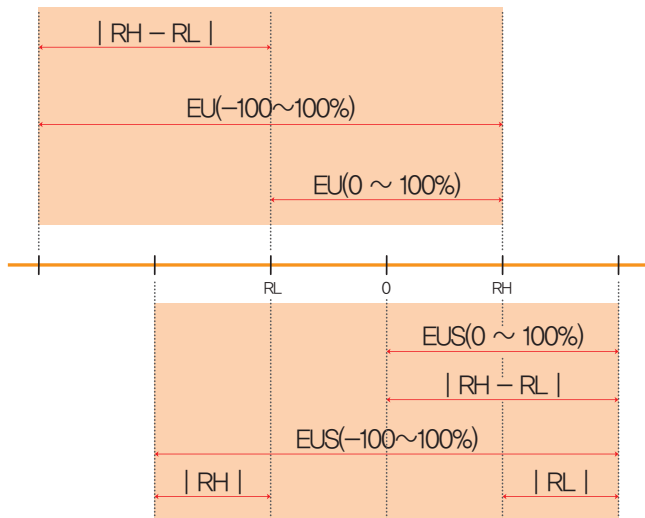

RL: Lower limit of input range
 RL: Upper limit of input range

► Range of EU() and EUS()

	Range	Center point
EU(0 ~ 100%)	RL ~ RH	$ RH - RL / 2 + RL$
EU(-100 ~ 100%)	$-(RH - RL + RL) \sim RH$	RL
EUS(0 ~ 100%)	$0 \sim RH - RL $	$ RH - RL / 2$
EUS(-100 ~ 100%)	$- RH - RL \sim RH - RL $	0

(Example)

- INPUT = PT_1
- RANGE = -90.00°C(RL) ~ 200.00°C(RH)

	Range	Center point
EU(0 ~ 100%)	-90.00 ~ 200.00°C	55.00°C
EU(-100 ~ 100%)	-380.00 ~ 200.00°C	-90.00°C
EUS(0 ~ 100%)	0 ~ 290.00°C	145.00°C
EUS(-100 ~ 100%)	-290.00 ~ 290.00°C	0.00°C



Queries related with after sales service for TEMI1000

Please inform the TEMI1000 model name, failure condition and contact point for queries of after sales service.

T : 032-326-9120

F : 032-326-9119



Customer contact for TEMI1000

Quotation request / Product request

Specification request / Data request/ Other request

- Internet

www.samwontech.com

- E mail

webmaster@samwontech.com

sales@samwontech.com



SAMWONTECH CO.,LTD.

(TECHNO-PARK, YAKDAE-DONG) 202-703, 388 SONGNAEDAERO, WONMI-GU,
BUcheon-CITY, KYUNGGI-DO, KOREA

T +82-32-326-9120 F +82-32-326-9119 E webmaster@samwontech.com/sales@samwontech.com

1st Edition of TEMH1000 IM : Sep. 06 2013

